

IMMO Systems

Brand	Menu	Features (Black Text means Free lifetime,Red means subscribed menus)
BMW	BMW>Select from type\CAS1\CAS2\CAS3	Program/delete key, Synch ELV, Synch DEM, Update
	BMW>Select from type\CAS4\CAS4+	Make ignition key, Disable key, Enable key,
	BMW>Select from type\FEM/BDC	Preprocess FEM/BDC system, Make dealer key, Delete
TRUMPCHI	TRUMPCHI\GS5\Immobilizer	Add key, Delete key, Read key count,
	TRUMPCHI\GS5\Smart key	Program smart key,
	TRUMPCHI\GA5\Immobilizer	Add key, Delete key, Read key count,
	TRUMPCHI\GA5\Smart key	Program smart key,
	TRUMPCHI\GA3\Immobilizer	Add key, Read key count, All key lost,
	TRUMPCHI\GA8\Immobilizer	Add key, Read key count, All key lost,
	TRUMPCHI\GS4\Immobilizer	Add key, Read key count, All key lost,
	TRUMPCHI\GA6\Immobilizer	Add key, Read key count, All key lost,
	TRUMPCHI\Extended electric	Add key, Delete key, Read key count,
	TRUMPCHI\GA3\Smart key	Program smart key,
	TRUMPCHI\GA6\Smart key	Program smart key,
	TRUMPCHI\GA8\Smart key	Program smart key,
	TRUMPCHI\GS4\Smart key	Program smart key,

	TRUMPCHI\GS8\Smart key	Program smart key,
	TRUMPCHI\GS8\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GA4\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GA4\Smart key	Program smart key,
	TRUMPCHI\GS3\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS3\Smart key	Program smart key,
	TRUMPCHI\GS7\Smart key	Program smart key,
	TRUMPCHI\GE3\Smart key	Program smart key,
	TRUMPCHI\GM8\Smart key	Program smart key,
	TRUMPCHI\New energy vehicles\Immobilizer	Add key,Read key count,All key lost,
	TRUMPCHI\GA3S(PHEV)\Smart key	Program smart key,
	TRUMPCHI\GS4(PHEV)\Smart key	Program smart key,
MASERATI	MASERATI\Flip key\Immobilizer	Program key,Backup immo data,Program remote,Make dealer
	MASERATI\Smart key(-2016)\Read PIN code	Read pin code,
	MASERATI\Smart key(-2016)\Smart key	Add smart key,Delete smart key,
	MASERATI\Smart key(2016-)\Smart key	Add smart key,Delete smart key,Backup immo data,Backup
	VOLVO\S60\2010-2018\Smart key[insert	Add key,Lost all key,Read CEM security data,Key recognition &
	VOLVO\S60\2010-2018\Keyless-go[button	Add smart key,Delete smart key,Read CEM security
	VOLVO\S80\2009-2016\Keyless-go[button	Add smart key,Delete smart key,Read CEM security

VOLVO

VOLVO\XC60\2009-2018\Keyless-go[button	Add smart key,Delete smart key,Read CEM security
VOLVO\S80\2009-2016\Smart key[insert	Add key,Lost all key,Read CEM security data,Key recognition &
VOLVO\XC60\2009-2018\Smart key[insert	Add key,Lost all key,Read CEM security data,Key recognition &
VOLVO\S40\2004-2012\Smart key	Add smart key,Delete smart key,Unlock key,
VOLVO\S40\2004-2012\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\S80\2007-2009\Smart key[insert	Add key,Delete key,Read CEM security data,Key recognition &
VOLVO\V40\2012-2018\Smart key[insert	Add key,Delete key,Read CEM security data,Key recognition &
VOLVO\C30\2007-2013\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\C30\2007-2013\Smart key	Add smart key,Delete smart key,Unlock key,
VOLVO\V40\2012-2018\Keyless-go[button	Add smart key,Delete smart key,Read CEM security
VOLVO\S80\2007-2009\Keyless-go[button	Add smart key,Delete smart key,Read CEM security
VOLVO\V60\2011-2017\Smart key[insert	Add key,Lost all key,Read CEM security data,Key recognition &
VOLVO\V60\2011-2017\Keyless-go[button	Add smart key,Delete smart key,Read CEM security
VOLVO\XC60\2006-2009\Smart key[insert	Add key,Delete key,Read CEM security data,Key recognition &
VOLVO\XC60\2006-2009\Keyless-go[button	Add smart key,Delete smart key,Read CEM security
VOLVO\XC90\2005-\Flip key	Add key,Delete key,Identify key ID,Key unlock,
VOLVO\S80\2005-2007\Flip key	Add key,Delete key,Identify key ID,Key unlock,
VOLVO\C70\2007-2013\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\C70\2007-2013\Smart key	Add smart key,Delete smart key,Unlock key,

VOLVO\W70\2009-2016\Smart key\insert	Add key,Lost all key,Read CEM security data,Key recognition &
VOLVO\W70\2009-2016\Keyless-go\button	Add smart key,Delete smart key,Read CEM security
VOLVO\XC70\2010-2016\Smart key\insert	Add key,Lost all key,Read CEM security data,Key recognition &
VOLVO\XC70\2010-2016\Keyless-go\button	Add smart key,Delete smart key,Read CEM security
VOLVO\XC70\2007-2010\Smart key\insert	Add key,Delete key,Read CEM security data,Key recognition &
VOLVO\XC70\2007-2010\Keyless-go\button	Add smart key,Delete smart key,Read CEM security
VOLVO\XC70\2006\Flip key	Add key,Delete key,Identify key ID,Key unlock,
SSANG YONG\Select from type\Immobilizer\Type 1	Program key,Delete key,
SSANG YONG\Select from type\Remote\Type 1	Program remote,
SSANG YONG\Select from type\Immobilizer\Type 2	Program key,
SSANG YONG\Select from type\Immobilizer\Type 3	Program key,
SSANG YONG\Select from vehicle\Actyon\Petrol	Program key,
SSANG YONG\Select from vehicle\Actyon\Diesel	Program key,
SSANG YONG\Select from vehicle\Actyon\XDi system	Program key,Delete key,
SSANG YONG\Select from vehicle\Chairman\Petrol\Im	Program key,
SSANG YONG\Select from vehicle\Chairman\Diesel	Program key,
SSANG YONG\Select from vehicle\Chairman\XDi	Program key,Delete key,
SSANG YONG\Select from vehicle\Korando\Petrol	Program key,
SSANG YONG\Select from vehicle\Korando\Diesel	Program key,

SSANG YONG\Select from vehicle\Korando\XDi	Program key,Delete key,
SSANG YONG\Select from vehicle\Kyron\Petrol	Program key,
SSANG YONG\Select from vehicle\Kyron\Diesel	Program key,
SSANG YONG\Select from vehicle\Kyron\XDi system	Program key,Delete key,
SSANG YONG\Select from vehicle\Musso\Petrol	Program key,
SSANG YONG\Select from vehicle\Musso\Diesel	Program key,
SSANG YONG\Select from vehicle\Musso\XDi system	Program key,Delete key,
SSANG YONG\Select from vehicle\Rexton\Petrol	Program key,
SSANG YONG\Select from vehicle\Rexton\Diesel	Program key,
SSANG YONG\Select from vehicle\Rexton\XDi system	Program key,Delete key,
SSANG YONG\Select from vehicle\Stavic	Program key,
SSANG YONG\Select from vehicle\Stavic	Program key,
SSANG YONG\Select from vehicle\Stavic Rodius\XDi	Program key,Delete key,
SSANG YONG\Select from vehicle\Rodius\Petrol	Program key,
SSANG YONG\Select from vehicle\Rodius\Diesel\Type	Program key,
SSANG YONG\Select from vehicle\Rodius\XDi system	Program key,Delete key,
SSANG YONG\Select from vehicle\RextonII\Petrol	Program key,
SSANG YONG\Select from vehicle\RextonII\Diesel	Program key,
SSANG YONG\Select from vehicle\RextonII\XDi	Program key,Delete key,

SSANG YONG

SSANG YONG\Select from vehicle\New Rexton\Petrol	Program key,
SSANG YONG\Select from vehicle\New Rexton\Diesel	Program key,
SSANG YONG\Select from vehicle\New Rexton\XDi	Program key,Delete key,
SSANG YONG\Select from type\Remote\Type 2	Program remote,
SSANG YONG\Select from vehicle\New	Program smart key,
SSANG YONG\Select from vehicle\ChairmanH\Petrol\	Program smart key,
SSANG YONG\Select from vehicle\Rodius-Stavic	Program smart key,
SSANG YONG\Select from vehicle\Actyon	Program smart key,
SSANG YONG\Select from vehicle\XLV\Petrol\Smart	Program smart key,
SSANG YONG\Select from vehicle\XLV\Petrol\Remote	Program remote,
SSANG YONG\Select from vehicle\Musso(Rexton	Program remote,
SSANG YONG\Select from vehicle\Rexton(G4)\Petrol\	Program remote,
SSANG YONG\Select from vehicle\New	Program remote,
SSANG YONG\Select from vehicle\Tivolan\Remote	Program remote,
SSANG YONG\Select from vehicle\XLV\Petrol\Immobilizer	Program key,
SSANG YONG\Select from vehicle\Musso(Rexton	Program key,
SSANG YONG\Select from vehicle\Rexton(G4)\Petrol\	Program key,
SSANG YONG\Select from vehicle\New	Program key,
SSANG YONG\Select from vehicle\Tivolan\Immobilizer	Program key,

SSANG YONG\Select from vehicle\Rexton(G4)\Petrol\	Program smart key,
SSANG YONG\Select from vehicle\Musso(Rexton	Program smart key,
SSANG YONG\Select from type\Smart key\Type 1	Program smart key,
SSANG YONG\Select from type\Smart key\Type 2	Program smart key,
SSANG YONG\Select from type\Immobilizer\Type 4	Program key,
SSANG YONG\Select from type\Remote\Type 3	Program remote,
SSANG YONG\Select from vehicle\New	Program key,
SSANG YONG\Select from vehicle\New	Program remote,
SSANG YONG\Select from vehicle\New	Program smart key,
SSANG YONG\Select from vehicle\Rexton	Program smart key,
SSANG YONG\Select from vehicle\Rexton	Program key,
SSANG YONG\Select from vehicle\Rodius\Diesel\Type	Program key,
SSANG YONG\Select from vehicle\Rodius-Stavic	Program key,
SSANG YONG\Select from vehicle\Rodius-Stavic	Program smart key,
SSANG YONG\Select from vehicle\Actyon	Program key,
SSANG YONG\Select from vehicle\Actyon	Program smart key,
SSANG YONG\Select from vehicle\XLV\Diesel\Immobil	Program key,
SSANG YONG\Select from vehicle\XLV\Diesel\Remote	Program remote,
SSANG YONG\Select from vehicle\XLV\Diesel\Smart	Program smart key,

SSANG YONG\Select from vehicle\Rexton(G4)\Diesel\	Program key,
SSANG YONG\Select from vehicle\Rexton(G4)\Diesel\	Program remote,
SSANG YONG\Select from vehicle\Rexton(G4)\Diesel\	Program smart key,
SSANG YONG\Select from vehicle\Tivolan\Smart key	Program smart key,
CITROEN\Select from vehicle\C4\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\TRIOMPHE\Immob	Program key,
CITROEN\Select from vehicle\C5(China)\Immobili	Program key,
CITROEN\Select from vehicle\QUATRE\Immobiliz	Program key,
CITROEN\Select from vehicle\C4L\Immobilizer	Program key,
CITROEN\Select from vehicle\C4L\Smart key	All smart key lost,
CITROEN\Select from vehicle\C3-XR\Smart key	All smart key lost,
CITROEN\Read pin code	Type 1,Type 2,Type 3,Type 4 (K line),
CITROEN\Select from type\Immobilizer\Type 1	Program key,
CITROEN\Select from type\Smart key\Type 1	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 3	Program key,
CITROEN\Select from type\Immobilizer\Type 2	Program key,
CITROEN\Select from vehicle\Berlingo\Immobilize	Program key,
CITROEN\Select from vehicle\C1\Immobilizer	Program key,
CITROEN\Select from vehicle\C2\Immobilizer\Typ	Program key,

CITROEN

CITROEN\Select from vehicle\C3\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\C5\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\C8\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\Dispatch\Immobiliz	Program key,
CITROEN\Select from vehicle\Jumpy\Immobilizer\	Program key,
CITROEN\Select from vehicle\Nemo\Immobilizer\	Program key,
CITROEN\Select from vehicle\PICASSO\Immobili	Program key,
CITROEN\Select from vehicle\Relay\Immobilizer	Program key,
CITROEN\Select from vehicle\Relay2\Immobilizer	Program key,
CITROEN\Select from vehicle\Synergie\Immobiliz	Program key,
CITROEN\Select from vehicle\XSARA(China)\Im	Program key,
CITROEN\Select from vehicle\XSARA\Immobilizer	Program key,
CITROEN\Select from vehicle\Xantia\Immobilizer\	Program key,
CITROEN\Select from vehicle\Berlingo\Immobilize	Program key,
CITROEN\Select from vehicle\C2\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\C3\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\C5\Immobilizer\Typ	Program key,
CITROEN\Select from vehicle\C6\Immobilizer	Program key,
CITROEN\Select from vehicle\C8\Immobilizer\Typ	Program key,

CITROEN\Select from vehicle\Dispatch\Immobiliz	Program key,
CITROEN\Select from vehicle\Evasion\Immobilize	Program key,
CITROEN\Select from vehicle\Jumpy\Immobilizer\	Program key,
CITROEN\Select from vehicle\Nemo\Immobilizer\	Program key,
CITROEN\Select from vehicle\Relay3\Immobilizer	Program key,
CITROEN\Select from vehicle\Synergie\Immobiliz	Program key,
CITROEN\Select from vehicle\XSARA\Immobilizer	Program key,
CITROEN\Select from vehicle\Xantia\Immobilizer\	Program key,
CITROEN\Select from vehicle\C3-XR\Immobilizer	Program key,
CITROEN\Select from vehicle\C6(China)\2016-	Program key,
CITROEN\Select from vehicle\ELYSEE\2012-	Program key,
CITROEN\Select from vehicle\C4\Smart key	All smart key lost,
CITROEN\Select from vehicle\C6(China)\2016-	All smart key lost,
CITROEN\Select from vehicle\C-	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program
CITROEN\Select from vehicle\C-	Read key/remote count,Immobilization,Program
CITROEN\Select from vehicle\C-	Read key/remote count,Immobilization,Program
CITROEN\Select from vehicle\C4\Immobilizer\Typ	Program key,
CITROEN\Select from type\Replace engine	Replace engine ECU,

PORSCHE

PORSCHE\Cayenne\Cayenne 2010-\Smart key	Program smart key,Make dealer key,
PORSCHE\Macan\Macan\Smart key	Program smart key,Make dealer key,
PORSCHE\Macan\Macan S\Smart key	Program smart key,Make dealer key,
PORSCHE\Macan\Macan Turbo\Smart key	Program smart key,Make dealer key,
PORSCHE\Cayenne\Cayenne GTS 2010-\Smart key	Program smart key,Make dealer key,
PORSCHE\New 911\Carrera S\Smart key	Program smart key,Make dealer key,
PORSCHE\New 911\Carrera Targa 4\Smart	Program smart key,Make dealer key,
PORSCHE\New 911\Turbo\Smart key	Program smart key,Make dealer key,
PORSCHE\New 718\Cayman\Smart key	Program smart key,Make dealer key,
PORSCHE\New 718\Boxster\Smart key	Program smart key,Make dealer key,
PORSCHE\New 718\Boxster S\Smart key	Program smart key,Make dealer key,
PORSCHE\Panamera\Panamera\Smart key	Program smart key,Make dealer key,
PORSCHE\Panamera\Panamera 4\Smart key	Program smart key,Make dealer key,
PORSCHE\Panamera\Panamera S\Smart key	Program smart key,Make dealer key,
PORSCHE\Cayenne\-\2010\Immobilizer	Program key,
PORSCHE\Cayenne\-\2010\Read PIN code	Engine,
PORSCHE\Cayman\2005-2011\Immobilizer	Immobilizer,Program key(without PIN),
PORSCHE\Boxter\2005-2011\Immobilizer	Immobilizer,Program key(without PIN),
PORSCHE\997\2005-2010\Immobilizer	Immobilizer,Program key(without PIN),

	PORSCHE\911\2005-2010\Immobilizer	Immobilizer,Program key(without PIN),
	FORD\China\New Mondeo\2017\Immobilizer	Add key,All key lost,
	FORD\China\New Mondeo\2017\Smart key	Add smart key,All smart key lost,
	FORD\China\ Escort\2017\Immobilizer	Add key,All key lost,
	FORD\China\Edge\2015-2017\Smart key	Add smart key,All smart key lost,
	FORD\China\Mustang\Smart key	Add smart key,All smart key lost,
	FORD\China\Escape\2005-2007\Immobilizer	All key lost,Add key,Read key count,
	FORD\China\ Raptor F350\Immobilizer	Delete key,Add key,Read key count,
	FORD\China\Transit\2000-2013\Immobilizer	Add key>Delete key,All key lost,
	FORD\China\Mondeo CHIA-X\PEPS\Smart key	Smart key all lost,Add smart key,
	FORD\China\Mondeo CHIA-X\IMMO\Type	Add key>Delete key,All key lost,
	FORD\China\Mondeo CHIA-X\IMMO\Type	Add key>Delete key,All key lost,
	FORD\China\Focus\Classic Focus\Type	Add key,All key lost,
	FORD\China\Focus\New Focus\2011-	Add key>Delete key,All key lost,
	FORD\China\Kuga\2015\Immobilizer	Add key>Delete key,All key lost,
	FORD\China\Ecosport\Immobilizer	Add key>Delete key,All key lost,
	FORD\China\Fiesta\IMMO\2013\Immobilizer	Add key>Delete key,
	FORD\China\Focus\Classic Focus\Type	Add key>Delete key,All key lost,
	FORD\China\Mondeo\Immobilizer	All key lost,Read key count,

FORD\China\Ecosport\Smart key	All smart key lost,Add smart key,
FORD\China\Fiesta\PEPS\Smart key	All smart key lost,Add smart key,
FORD\China\Focus\New Focus\2014-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Explorer\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Classic Focus\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Kuga\2015\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart
FORD\China\Kuga\2016-\Smart key	Add smart key,All smart key lost,
FORD\China\Edge\2015\Smart key	Erase smart key,Add smart key,Read smart key count,
FORD\China\Raptor F150\2011-	Delete key,Add key,Read key count,
FORD\China\Raptor F150\2009-	Add key,Delete key,Read key count,Synch PCM-PATS,
FORD\China\Raptor F250\2009-	Add key,Delete key,Read key count,Synch PCM-PATS,
FORD\China\Everest\Smart key	Add smart key,All smart key lost,
FORD\China\Classic Focus\Type 1\Immobilizer	Add key,All key lost,
FORD\China\Explorer\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\Taurus\2015-2016\Smart key	Add smart key,All smart key lost,
FORD\China\Everest\Immobilizer	Add key,All key lost,
FORD\China\S-MAX\IMMO\Type	Add key,Delete key,All key lost,
FORD\China\S-MAX\IMMO\Type	Add key,Delete key,All key lost,
FORD\China\Focus\New Focus\2011-2013\Smart	Add key,Delete key,All key lost,Add smart key,Delete smart

FORD\China\Fiesta\IMMO\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\New Mondeo\2017\Smart key	Add smart key,Delete smart key,
FORD\China\Taurus\2017\Smart key	Add smart key,Delete smart key,
FORD\China\Ranger\2007-2010\Immobilizer	Read key numbers,Add key,All key lost,
FORD\China\Ranger\2015\Immobilizer	Add key,Delete key,All key lost,Read key numbers,ECU
FORD\China\Ranger\2017\Immobilizer	Read key count,Add key,All key lost,
FORD\China\Escape\2008-2009\Immobilizer	Read key numbers,Add key,All key lost,
FORD\China\ Raptor F150\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\ Raptor F250\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\C-MAX\Smart key	Add key,Delete key,All key lost,Add smart key,Delete smart
FORD\China\Focus\New Focus\2014-\Smart key	Add smart key,All smart key lost,
FORD\China\Remote\Type 1	Remote,Delete remote,
FORD\China\Edge\2015\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Edge\2017-\Smart key	Add smart key,Delete smart key,
FORD\China\ Escort\2017\Immobilizer	Add key,Delete key,
FORD\China\ Raptor F150\2015-\Immobilizer	Add key,All key lost,
FORD\China\Transit\2013-\Immobilizer\Type 1	Add key,Delete key,All key lost,
FORD\China\Fusion\2006-2009\Immobilizer	Program key,Delete key,Key count,
FORD\China\Mustang\Immobilizer\2011-2014	Program key,All key lost,Key count,

FORD\Europe\Transit Custom\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Transit Courier\2014\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Transit\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Tourneo Custom\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Tourneo Connect\2013-	Key count,Delete key,Add key,
FORD\Europe\C-Max\2010-2015\Smart	Add smart key,Delete smart key,
FORD\Europe\Focus\2011-2014\Smart key\Prox-Rem	Add smart key,Delete smart key,
FORD\Europe\Kuga\2013-2015\Smart key\Prox-Rem	Add smart key,Delete smart key,
FORD\Europe\Focus\2005-2011\Smart key	Add smart key,Delete smart key,Read smart key count,
FORD\Europe\Kuga\2009-2013\Smart key	Add smart key,Delete smart key,Read smart key count,
FORD\Europe\Kuga\2007-2009\Immobilizer	Add key,Delete key,Read key count,
FORD\Europe\Windstar\1997-1998\Immobilizer	Delete key,Add key,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Dura-	Delete key,Add key,Key count,
FORD\Europe\Transit\1998-2000\Immobilizer\Petrol	Delete key,Add key,Key count,
FORD\Europe\Transit\1997-1998\Immobilizer\Petrol	Delete key,Add key,Key count,
FORD\Europe\Scorpio\1997\Immobilizer\Petrol-	Delete key,Add key,Key count,
FORD\Europe\Granada\1997-\Immobilizer\Petrol-	Delete key,Add key,Key count,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol-	Delete key,Add key,Key count,
FORD\Europe\Explorer\1997-2001\Immobilizer\Type	Delete key,Add key,Key count,

FORD\Europe\Explorer\1997-2001\Immobilizer\Type	Delete key,Add key,Key count,
FORD\Europe\Galaxy\1997-2000\Immobilizer\Petrol-	Delete key,Key count,
FORD\Europe\Windstar\1998-\Immobilizer	All key lost,Add key,Key count,
FORD\Europe\Courier\2001-	Program remote,All key lost,Key count,
FORD\Europe\Courier\2001-	Program remote,All key lost,Key count,
FORD\Europe\Courier\2001-2007\Immobilizer\Diesel	Program remote,All key lost,Key count,
FORD\Europe\Fiesta\2001-2007\Immobilizer\Petrol(typ	Program remote,All key lost,Key count,
FORD\Europe\Fiesta\2001-2007\Immobilizer\Petrol(typ	Program remote,All key lost,Key count,
FORD\Europe\Fiesta\2001-2007\Immobilizer\Diesel	Program remote,All key lost,Key count,
FORD\Europe\Fusion\2002-2011\Immobilizer	Program remote,All key lost,Key count,
FORD\Europe\KA\2002-2008\Immobilizer	Program remote,All key lost,Key count,
FORD\Europe\C-Max\2010\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\Europe\C-Max\2010\Immobilizer\Type 2	Program key,All key lost,Key count,
FORD\Europe\Focus\2005-2011\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Tourneo\2007-2010\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Transit Connect\2007-	Program key,All key lost,Key count,
FORD\Europe\Ranger\2012-2014\Immobilizer	Add key,Delete key,All key lost,Read key numbers,ECU
FORD\Europe\Cougar\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Courier\1999-2001\Immobilizer	Program key,All key lost,Key count,

FORD\Europe\Escape\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Fiesta\1999-2001\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Focus\1995-1998\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Focus\1998-2004\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol-	Program key,All key lost,Key count,
FORD\Europe\KA\1998-2001\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Mondeo\1997-1998\Immobilizer\Petrol-	Program key,All key lost,Key count,
FORD\Europe\Mondeo\1998-2007\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Puma\1996-2001\Immobilizer\Petrol -	Program key,All key lost,Key count,
FORD\Europe\Transit\1998-2000\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Transit\1998-2000\Immobilizer\EPIC -	Program key,All key lost,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Petrol	Program key,All key lost,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Dura-	Program key,All key lost,Key count,
FORD\Europe\Transit Connect\2006\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Ranger\2012\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Ranger\2012\Manual PIN	Program key,All key lost,Key count,
FORD\Europe\Explorer\1997-2001\Immobilizer\Type	Program key,Delete key,Key count,
FORD\Europe\B-Max\2012\Smart key	Smart key all lost,Add smart key,

FORD\Europe\Courier\2008-2013\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Courier\2013-\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Fiesta\2008-2013\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Fiesta\2013-\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Galaxy\2007-2010\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Galaxy\2010-2015\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Mondeo\2007-2010\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Mondeo\2010-2014\Smart key	Smart key all lost,Add smart key,
FORD\Europe\S-Max\2007-2010\Smart key	Smart key all lost,Add smart key,
FORD\Europe\S-Max\2010-2015\Smart key	Smart key all lost,Add smart key,
FORD\Europe\Courier\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\EcoSport\2013\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Edge\2011-2013\Immobilizer	Delete key,Add key,Read key count,
FORD\Europe\Explorer\2011-2015\Immobilizer	Delete key,Add key,Read key count,
FORD\Europe\Courier\2008-2013\Immobilizer	Add key,Delete key,
FORD\Europe\Fiesta\2008-2013\Immobilizer	Add key,Delete key,
FORD\Europe\Transit\2007-2013\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\S-Max\2010-	Add key,Delete key,Key count,
FORD\Europe\Mondeo\2010-2014\Immobilizer	Add key,Delete key,Key count,

FORD\Europe\Galaxy\2010-2015\Immobilizer	Add key,Delete key,Key count,
FORD\Europe\Transit Connect\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Kuga\2013-2015\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Focus\2015-2016\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Focus\2011-2014\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\C-Max\2015-	Add key,Delete key,All key lost,
FORD\Europe\C-Max\2010-	Add key,Delete key,All key lost,
FORD\Europe\Vignale\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Transit Custom\2017-\Immobilizer	Read key count,Add key,All key lost,
FORD\Europe\S-Max\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Mustang\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Mondeo\2015-\Immobilizer	Read key count,Add key,All key lost,
FORD\Europe\Mondeo\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Galaxy\2015\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Edge\2013-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\S-Max\2007-	Add key,Delete key,All key lost,
FORD\Europe\Mondeo\2007-2010\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Galaxy\2007-2010\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Transit\1998-2000\Immobilizer\EPIC -	Key count,Add key,Delete key,

FORD

FORD\Europe\Scorpio\1997\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Puma\1996-2001\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Mondeo\1997-1998\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\KA\1997-1998\Immobilizer\PATS 3	Key count,Add key,Delete key,
FORD\Europe\Granada\1997-\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Fiesta\1997-1998\Immobilizer\Petrol(PA	Key count,Add key,Delete key,
FORD\Europe\Courier\1997-	Key count,Add key,Delete key,
FORD\Europe\Transit\1997-	Add key,Delete key,Key count,
FORD\Europe\Scorpio\1997\Immobilizer\Diesel(PATS	Add key,Delete key,Key count,
FORD\Europe\Mondeo\1997-	Add key,Delete key,Key count,
FORD\Europe\Granada\1997-	Add key,Delete key,Key count,
FORD\Europe\Fiesta\1997-1998\Immobilizer\Diesel(P	Add key,Delete key,Key count,
FORD\Europe\Fiesta\1996-1997\Immobilizer\Diesel(P	Add key,Delete key,Key count,
FORD\Europe\Courier\1997-	Add key,Delete key,Key count,
FORD\Europe\Courier\1996-	Add key,Delete key,Key count,
FORD\Europe\Kuga\2013-2015\Smart key\Immo chip	Add key,Delete key,All key lost,
FORD\Europe\Focus\2011-2014\Smart key\Immo chip	Add key,Delete key,All key lost,
FORD\Europe\C-Max\2010-2015\Smart	Add key,Delete key,All key lost,

FORD\Europe\Galaxy\2000-2006\Immobilizer\Diesel	Add key,Delete key,Key count,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol -	Add key,Delete key,Key count,
FORD\Australia\C-Max\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\Australia\C-Max\Immobilizer\Type 2	Program key,All key lost,Key count,
FORD\Australia\Cougar\Immobilizer	Program key,All key lost,Key count,
FORD\Australia\Courier\Petrol\1997-1998	Key count,Add key,Delete key,
FORD\Australia\Courier\Petrol\1998-2000	Program key,All key lost,Key count,
FORD\Australia\Courier\Petrol\2001-2008\Type 1	Program remote,All key lost,Key count,
FORD\Australia\Courier\Petrol\2001-2008\Type 2	Program remote,All key lost,Key count,
FORD\Australia\Courier\Petrol\2008-\Immobilizer	Add key,Delete key,
FORD\Australia\Courier\Petrol\2008-\Smart key	Smart key all lost,Add smart key,
FORD\Australia\Courier\Diesel \2008-\Smart key	Smart key all lost,Add smart key,
FORD\Australia\Courier\Diesel \2008-\Immobilizer	Add key,Delete key,
FORD\Australia\Courier\Diesel \2001-	Program remote,All key lost,Key count,
FORD\Australia\Courier\Diesel \1999-2001	Program key,All key lost,Key count,
FORD\Australia\Courier\Diesel \1997-	Add key,Delete key,Key count,
FORD\Australia\Escape ZD	Program remote,All key lost,Key count,
FORD\Australia\Escape	Program key,All key lost,Key count,
FORD\Australia\Explorer\1997-\Type 3	Program key,Delete key,Key count,

FORD\Australia\Explorer\1997-\Type 2	Delete key,Add key,Key count,
FORD\Australia\Explorer\1997-\Type 1	Delete key,Add key,Key count,
FORD\Australia\Fiesta\Diesel \2008-2012\Smart key	Smart key all lost,Add smart key,
FORD\Australia\Fiesta\Diesel \2008-2012\Immobilizer	Add key,Delete key,
FORD\Australia\Fiesta\Diesel \2001-2008\Immobilizer	Program remote,All key lost,Key count,
FORD\Australia\Fiesta\Diesel \1999-2001	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Diesel \1997-	Add key,Delete key,Key count,
FORD\Australia\Fiesta\Petrol\2008-2012\Smart key	Smart key all lost,Add smart key,
FORD\Australia\Fiesta\Petrol\2008-2012\Immobilizer	Add key,Delete key,
FORD\Australia\Fiesta\Petrol\2001-2008\Type 2	Program remote,All key lost,Key count,
FORD\Australia\Fiesta\Petrol\2001-2008\Type 1	Program remote,All key lost,Key count,
FORD\Australia\Fiesta\Petrol\1998-2000	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Petrol\1997-1998	Key count,Add key,Delete key,
FORD\Australia\Focus\Diesel \2011-\Immobilizer	Add key,Delete key,All key lost,
FORD\Australia\Focus\Diesel \2005-2011\Smart key	Add smart key,Delete smart key,Read smart key count,
FORD\Australia\Focus\Diesel \2005-2011\Immobilizer	Delete key,Add key,Read key count,
FORD\Australia\Focus\Diesel \1998-2004	Program key,All key lost,Key count,
FORD\Australia\Focus\Diesel \1995-1998	Program key,All key lost,Key count,
FORD\Australia\Focus\Petrol\2011-\Immobilizer	Add key,Delete key,All key lost,

FORD\Australia\Focus\Petrol\2005-2011\Smart key	Add smart key,Delete smart key,Read smart key count,
FORD\Australia\Focus\Petrol\2005-2011\Immobilizer	Delete key,Add key,Read key count,
FORD\Australia\Focus\Petrol\1998-2004	Program key,All key lost,Key count,
FORD\Australia\Fusion	Program remote,All key lost,Key count,
FORD\Australia\Galaxy\Diesel \2000-\Type 1\PATS	Add key,Delete key,Key count,
FORD\Australia\Galaxy\Petrol\2000-\V6	Add key,Delete key,Key count,
FORD\Australia\Galaxy\Petrol\2000-\NOT V6\Type	Delete key,Add key,Key count,
FORD\Australia\Galaxy\Petrol\1997-2000\NOT	Delete key,Key count,
FORD\Australia\Galaxy\Petrol\1997\NOT V6\PATS 2	Delete key,Add key,Key count,
FORD\Australia\Granada Scorpio\Diesel \1997-	Add key,Delete key,Key count,
FORD\Australia\Granada Scorpio\Petrol\Automatic\1	Delete key,Add key,Key count,
FORD\Australia\Granada Scorpio\Petrol\Manual\199	Key count,Add key,Delete key,
FORD\Australia\KA\Petrol\2002-2008	Program remote,All key lost,Key count,
FORD\Australia\KA\Petrol\1998-2000	Program key,All key lost,Key count,
FORD\Australia\KA\Petrol\1997-1998	Key count,Add key,Delete key,
FORD\Australia\Maverick\2001-	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Diesel \2007-\Smart key	Smart key all lost,Add smart key,
FORD\Australia\Mondeo\Diesel \2007-\Immobilizer	Add key,Delete key,All key lost,
FORD\Australia\Mondeo\Diesel \1998-\Type 1\PATS	Program key,All key lost,Key count,

FORD\Australia\Mondeo\Diesel\1997-1998\Type	Add key,Delete key,Key count,
FORD\Australia\Mondeo\Petrol\Automatic\2007-	Smart key all lost,Add smart key,
FORD\Australia\Mondeo\Petrol\Automatic\2007-	Add key,Delete key,All key lost,
FORD\Australia\Mondeo\Petrol\Automatic\1997-	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Petrol\Manual\2007-\Smart	Smart key all lost,Add smart key,
FORD\Australia\Mondeo\Petrol\Manual\2007-	Add key,Delete key,All key lost,
FORD\Australia\Mondeo\Petrol\Manual\1998-\PATS	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Petrol\Manual\1997-	Key count,Add key,Delete key,
FORD\Australia\Puma\Petrol\14 Zetec\1997-\PATS 3	Key count,Add key,Delete key,
FORD\Australia\Puma\Petrol\14 Zetec\1996-	Program key,All key lost,Key count,
FORD\Australia\Ranger\2012-	Add key,Delete key,All key lost,Read key numbers,ECU
FORD\Australia\Ranger\2012	Program key,All key lost,Key count,
FORD\Australia\Transit Connect\2007-\Type 2	Add key,Delete key,All key lost,
FORD\Australia\Transit Connect\2007-\Type 1	Program key,All key lost,Key count,
FORD\Australia\Transit Connect\2007	Program key,All key lost,Key count,
FORD\Australia\Transit\Epic\1998-\Type 2	Program key,All key lost,Key count,
FORD\Australia\Transit\Epic\1998-\Type 1	Key count,Add key,Delete key,
FORD\Australia\Transit\Dura Torque\Type 2	Program key,All key lost,Key count,
FORD\Australia\Transit\Dura Torque\Type 1	Delete key,Add key,Key count,

FORD\Australia\Transit\Diesel\2007-	Add key,Delete key,All key lost,
FORD\Australia\Transit\Diesel\1998-	Program key,All key lost,Key count,
FORD\Australia\Transit\Diesel\1997-1998	Add key,Delete key,Key count,
FORD\Australia\Transit\Petrol\2007-	Add key,Delete key,All key lost,
FORD\Australia\Transit\Petrol\2000-	Program key,All key lost,Key count,
FORD\Australia\Transit\Petrol\1997-2000	Delete key,Add key,Key count,
FORD\Australia\Windstar\1998-	All key lost,Add key,Key count,
FORD\Australia\Windstar\1997-1998	Delete key,Add key,Key count,
FORD\Africa\Transit\2014-	Key count,Delete key,Add key,
FORD\Africa\Mondeo\1997-1998	Program key,All key lost,Key count,
FORD\Africa\Icon\2002-2008	Program remote,All key lost,Key count,
FORD\Africa\Figo\2007-	Program remote,All key lost,Key count,
FORD\Africa\Fiesta\2012-2014	Add key,Delete key,All key lost,
FORD\Africa\Fiesta\2002-2008	Program remote,All key lost,Key count,
FORD\Africa\Bantam\2007-	Program remote,All key lost,Key count,
FORD\China\Explorer\2017-\Smart key	Add smart key,Delete smart key,
FORD\South America\F350\-	Key count,Delete key,
FORD\South America\F250\Diesel\Cum	Key count,Delete key,
FORD\India\EcoSport\2012-\Immobilizer	Add key,Delete key,All key lost,

FORD\India\EcoSport\2012- \Smart key	Smart key all lost,Add smart key,
FORD\India\Fiesta\2008- \Smart key	Smart key all lost,Add smart key,
FORD\India\Fiesta\2008- \Immobilizer	Add key,Delete key,
FORD\India\Fiesta\2004-	Program key,All key lost,Key count,
FORD\India\FIGO\2008- \Smart key	Smart key all lost,Add smart key,
FORD\India\FIGO\2008- \Immobilizer	Add key,Delete key,
FORD\India\FIGO\2004-	Program key,All key lost,Key count,
FORD\India\Fusion\1318	Program remote,All key lost,Key count,
FORD\India\Mondeo\Diese \2007-\Smart key	Smart key all lost,Add smart key,
FORD\India\Mondeo\Diese \2007-\Immobilizer	Add key,Delete key,All key lost,
FORD\India\Mondeo\Diese \1998-2007	Program key,All key lost,Key count,
FORD\India\Mondeo\Diese \1997-1998	Add key,Delete key,Key count,
FORD\India\Mondeo\Petrol \Automatic\2007-	Add key,Delete key,All key lost,
FORD\India\Mondeo\Petrol \Automatic\1997-2006	Program key,All key lost,Key count,
FORD\India\Mondeo\Petrol \Manual\2007-\Smart key	Smart key all lost,Add smart key,
FORD\India\Mondeo\Petrol \Manual\2007-\Immobilizer	Add key,Delete key,All key lost,
FORD\India\Mondeo\Petrol \Manual\1998-2006	Program key,All key lost,Key count,
FORD\India\Mondeo\Petrol \Manual\1997-1998	Key count,Add key,Delete key,
FORD\South America\EcoSport\2011-	Smart key all lost,Add smart key,

FORD\South America\EcoSport\2011-	Add key,Delete key,All key lost,
FORD\South America\EcoSport\2010-	Program remote,All key lost,Key count,
FORD\South America\EcoSport\2009-	Program remote,All key lost,Key count,
FORD\South America\EcoSport\2003-	Program remote,All key lost,Key count,
FORD\South America\Edge\2007-	Program key,All key lost,Key count,
FORD\South America\F250\Petrol	Program key,Delete key,Key count,
FORD\South America\Ranger\2012-	Add key,Delete key,All key lost,Read key numbers,ECU
FORD\South America\Fusion\2010-	Program key,All key lost,Key count,
FORD\South America\Focus\2005-	Program key,All key lost,Key count,
FORD\Israel\Edge\2011-\Smart key	Delete key,Add key,Read count of smart key,
FORD\Israel\Edge\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\Israel\Explorer\2011-\Smart key	Delete key,Add key,Read count of smart key,
FORD\Israel\Explorer\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\Israel\Focus\2011-2014\Immobilizer	Add key,Delete key,All key lost,
FORD\China\HEC\Immobilizer	All key lost,Key count,Reset system,
FORD\China\PCM\Immobilizer	All key lost,Read key count,
FORD\Europe\Tourneo Courier\2014-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Transit\2013-\Immobilizer\Type 2	Key count,Delete key,Add key,
FORD\China\Remote\Type 2(Transit 2014-)	Program remote,

	FORD\China\Tourneo\2014-\Immobilizer	Key count,Delete key,Add key,
	PEUGEOT>Select from vehicle\308\Immobilizer\Ty	Program key,
	PEUGEOT>Select from vehicle\3008\Immobilizer	Program key,
	PEUGEOT>Select from vehicle\307\Immobilizer\Ty	Program key,
	PEUGEOT>Select from vehicle\308S\Immobilizer	Program key,
	PEUGEOT\Read pin code	Type 1,Type 2,Type 3,Type 4 (K line),
	PEUGEOT>Select from vehicle\4007\Petrol\Smart	All smart key lost,
	PEUGEOT>Select from type\Immobilizer\Type 1	Program key,
	PEUGEOT>Select from vehicle\207\Immobilizer\Ty	Program key,
	PEUGEOT>Select from vehicle\307\Immobilizer\Ty	Program key,
	PEUGEOT>Select from vehicle\508\Smart key	All smart key lost,
	PEUGEOT>Select from vehicle\508\Immobilizer	Program key,
	PEUGEOT>Select from vehicle\408\408(T73)\Immo	Program key,
	PEUGEOT>Select from vehicle\408\408(T93)\Immo	Program key,
	PEUGEOT>Select from type\Smart key\Type 1	All smart key lost,
	PEUGEOT>Select from type\Immobilizer\Type 3	Program key,
	PEUGEOT>Select from type\Immobilizer\Type 2	Program key,
	PEUGEOT>Select from vehicle\1007\Immobilizer\T	Program key,
	PEUGEOT>Select from vehicle\206\Immobilizer	Program key,

PEUGEOT

PEUGEOT>Select from vehicle\406(VF38)\Immobilizer	Program key,
PEUGEOT>Select from vehicle\607\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\807\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\Partner\Immobilizer	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\T	Program key,
PEUGEOT>Select from vehicle\207\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\207CC\Immobilizer	Program key,
PEUGEOT>Select from vehicle\407\Immobilizer	Program key,
PEUGEOT>Select from vehicle\5008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\607\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\807\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\Expert\2007-	Program key,
PEUGEOT>Select from vehicle\Partner\Immobilizer	Program key,
PEUGEOT>Select from vehicle\Rcz\Immobilizer	Program key,
PEUGEOT>Select from vehicle\208\Immobilizer	Program key,
PEUGEOT>Select from vehicle\2008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\301\Immobilizer	Program key,
PEUGEOT>Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program
PEUGEOT>Select from vehicle\4007\Petrol\Immobilizer	Read key/remote count,Immobilization,Program

PEUGEOT>Select from vehicle\4007\Diesel\Immob	Read key/remote count,Immobilization,Program
PEUGEOT>Select from vehicle\3008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\5008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\T	Add key,Delete key,Reset Immo ECU,Engine ECU programming,
PEUGEOT>Select from vehicle\4008(China)\Smart	All smart key lost,
PEUGEOT>Select from vehicle\4008(China)\Immo	Program key,
PEUGEOT>Select from vehicle\308\Immobilizer\Ty	Program key,
PEUGEOT>Select from type\Replace engine	Replace engine ECU,
JAGUAR>Select from vehicle\XF\2013-\Smart	Add smart key,All smart key lost,
JAGUAR>Select from vehicle\XF\2012\Smart key	Add smart key,All smart key lost,
JAGUAR>Select from vehicle\XJ\Smart key	Add smart key,All smart key lost,
JAGUAR>Select from vehicle\F-type\Smart key	Add smart key,All smart key lost,
JAGUAR>Select from vehicle\S-Type\Immobilizer	All key lost,
JAGUAR>Select from vehicle\XF\2012\Smart	Delete smart key,Add smart key,
JAGUAR>Select from vehicle\S-Type\Remote	Program remote,Delete remote,
JAGUAR>Select from vehicle\X-	All key lost,
JAGUAR>Select from vehicle\SOVERIGN\Immob	All key lost,

JAGUAR

JAGUAR\Select from vehicle\XJ6\2003-	All key lost,
JAGUAR\Select from vehicle\XJ8\2003-	All key lost,
JAGUAR\Select from vehicle\XJR\2004-	All key lost,
JAGUAR\Select from vehicle\XK\2006-	Program remote,Remote count,
JAGUAR\Select from vehicle\XKR\2006-	Program remote,Remote count,
JAGUAR\Select from type\Immobilizer\Type 1	All key lost,
JAGUAR\Select from type\Smart key\Type 1	Delete smart key,Add smart key,
JAGUAR\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
JAGUAR\Select from type\Smart key\Type 3	Add smart key,All smart key lost,
JAGUAR\Select from type\Smart key\Type 4	Add smart key,All smart key lost,
JAGUAR\Select from type\Remote\Type 1	Program remote,Remote count,
JAGUAR\Select from type\Remote\Type 2	Program remote,Delete remote,
JAGUAR\Select from vehicle\New Jaguar	Add smart key,
JAGUAR\Select from vehicle\New Jaguar	Add smart key,
JAGUAR\Select from vehicle\New Jaguar	Write a workable key,Read key ID,
LAND ROVER\Select from vehicle\Range	Add smart key,All smart key lost,
LAND ROVER\Select from vehicle\Discovery	Program key,Read VIN code,
LAND ROVER\Select from vehicle\Freelander2\Smart	Program old smart key,Read VIN code,Program new smart
LAND ROVER\Select from vehicle\Freelander\Remote	Program remote,

LAND ROVER

LAND ROVER\Select from vehicle\Discovery4\Smart	Add smart key,All smart key lost,
LAND ROVER\Select from vehicle\Evoque\Smart key	Add smart key,All smart key lost,
LAND ROVER\Select from vehicle\Freelander2\Smart	Add smart key,All smart key lost,
LAND ROVER\Select from vehicle\Evoque\Immobilizer	Program key,Read VIN code,
LAND ROVER\Select from vehicle\Evoque\Immobilizer	Immobilizer,
LAND ROVER\Select from vehicle\Freelander	Add old key,Add new key,Reset engine ECU,
LAND ROVER\Select from vehicle\Freelander\Smart	Program old smart key,Read VIN code,Program new smart
LAND ROVER\Select from vehicle\	Program remote,
LAND ROVER\Select from vehicle\Defender\Remote\2	Program remote,
LAND ROVER\Select from type\Immobilizer\Type 1	Add old key,Add new key,Reset engine ECU,
LAND ROVER\Select from type\Immobilizer\Type 2	Program key,Read VIN code,
LAND ROVER\Select from type\Immobilizer\Type 3	Immobilizer,
LAND ROVER\Select from type\Smart key\Type 1	Program old smart key,Read VIN code,Program new smart
LAND ROVER\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
LAND ROVER\Select from type\Remote\Type 1	Program remote,
LAND ROVER\Select from vehicle\New	Add smart key,
LAND ROVER\Select from vehicle\New	Add smart key,
LAND ROVER\Select from vehicle\New	Write a workable key,Read key ID,
MAZDA\Axela\2016\Smart key	Add smark key,All smart key lost,Switch ignition on,

MAZDA\Atenza\2013- \Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\CX-5\2016\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\M6\Immobilizer	Add key,All key lost,Valid backup key setting,Invalid backup key
MAZDA\M6\Smart key	Add smart key,Delete smart key,
MAZDA\M3\Immobilizer\Ty pe 1	Add key,Read key count,All key lost,
MAZDA\M2\2008- 2014\Immobilizer	Add key,All key lost,
MAZDA\ New M6\Immobilizer	All key lost,
MAZDA\ New M6\Smart key	Delete & program smart key,All key/smart key lost,Steering lock
MAZDA\M3\Immobilizer\Ty pe 2	Add key,All key lost,
MAZDA\M5\Immobilizer\Ty pe 2	Add key,All key lost,
MAZDA\M8\Smart key	Add key,All key lost,Add smart key,Lost all smart key,
MAZDA\M5\Immobilizer\Ty pe 1	Add key,All key lost,Read key count,
MAZDA\M3\Smart key\Type 1	Add smark key,All smart key lost,Switch ignition on,
MAZDA\Axela\2017- 2018\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M8\Immobilizer	Add key,All key lost,Setup spare key valid,Setup spare key invalid,
MAZDA\CX-7\Immobilizer	Add key,All key lost,Setup spare key valid,Setup spare key invalid,
MAZDA\CX-7\Smart key	Add key,All key lost,Add smart key,Lost all smart key,
MAZDA\CX-3\2017\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\CX-4\2016\Smart key	Add smark key,All smart key lost,Switch ignition on,

MAZDA

MAZDA\CX-4\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M2\2014-2016\Smart key	Add smark key,All smart key lost,Switch ignition on,
MAZDA\B series\2007-\Immobilizer	Key count,Add key,All key lost,
MAZDA\CX-9\Immobilizer\2004-2009	Add key,Read key count,All key lost,
MAZDA\CX-9\Immobilizer\2009-	Add key,All key lost,
MAZDA\MX-5\2004-2009\Immobilizer	Add key,Read key count,All key lost,
MAZDA\CX-9\With smart	Keys count,Add key,All key lost,Remotes count,Program
MAZDA\MX-5\2009-2016\Immobilizer	Keys count,Add key,All key lost,
MAZDA\BT50\2012-\Immobilizer	Add key,Erase key,All key lost,
MAZDA\CX-7\2016\Smart key	All smart key lost,Add smart key,Switch ignition on,
MAZDA\CX-9\2016\Smart key	All smart key lost,Add smart key,Switch ignition on,
MAZDA\CX-5\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M121\Immobilizer	Key number,Delete key,Add key,
MAZDA\M2\2008-2014\PEPS\Type 1	Add key,Clear key,Add remote,Delete remote,Key
MAZDA\Atenza\2018-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\DEMIO\2001\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2002-2007\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2008-2013\Smart key	Add key,Clear key,Add remote,Delete remote,Key
MAZDA\DEMIO\2008-2013\Immobilizer	Key number,Delete key,Add key,

MAZDA\DEMIO\2014- \Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\MX-5\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\MX-5 MIATA\2005-	Key number,Delete key,Add key,
MAZDA\PREMACY\2005\S mart key	Key number,Delete key,Add key,
MAZDA\RX-8\2004- 2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\RX-8\2009\Smart key	Add key,Clear key,Add remote,Delete remote,Key
MAZDA\RX- 8\2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilize r\2001-2004	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilize r\2005-2008	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilize r\2009-2011	Key number,Delete key,Add key,
MAZDA\M2\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M3\Smart key\Type 2(2017-)	Add smart key,All smart key lost,Switch ignition on,
MAZDA\CX-3\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M2\2002- 2008\Mechanical key	Add key,All key lost,Valid backup key setting,Invalid backup key
MAZDA\M2\2008- 2014\PEPS\Type 2	All key lost,Add key,All smart key lost,Add smart key,Switch ignition
MAZDA\Axela\2018-\Smart key	All smart key lost,Turn ignition ON,Add smart key,
MAZDA\CX-5\2018-\Smart key	All smart key lost,Turn ignition ON,Add smart key,
LINCOLN\MKC\Smart key	Add smart key,All smart key lost,
LINCOLN\MKZ\Smart key\2013-2017	Add smart key,All smart key lost,

LINCOLN

LINCOLN\Navigator\Immobilizer\2010-2014	Add key,All key lost,
LINCOLN\MKS\Smart key	Erase smart key,Add smart key,Read smart key count,
LINCOLN\MKT\Smart key	Erase smart key,Add smart key,Read smart key count,
LINCOLN\MKX\Smart key\2011-2015	Erase smart key,Add smart key,Read smart key count,
LINCOLN\Town Car\2005-2010\Immobilizer	Program key,
LINCOLN\MKX\Smart key\2016-	Add smart key,All smart key lost,
LINCOLN\Continental\Smart key	Add smart key,All smart key lost,
LINCOLN\Navigator\Remote	Remote,Delete remote,
LINCOLN\Aviator\2003-2005\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Blackwood\2002\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Continental\Immobilizer\1998-2002	Program key,All key lost,Key count,
LINCOLN\LS\2000-2006\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Mark LT\2005-2007\Immobilizer	Program remote,All key lost,Key count,
LINCOLN\Mark LT\2008-\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Mark VIII\1997-1998\Immobilizer	Delete key,Key count,
LINCOLN\MKS\Immobilizer	Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Petro\2007-2010	Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Petro\2010-2012	Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Hybrid	Program key,All key lost,Key count,

LINCOLN\MKZ\Immobilizer \2007-2010	Program key,All key lost,Key count,
LINCOLN\MKZ\Immobilizer \2010-2013	Program key,All key lost,Key count,
LINCOLN\MKZ\Immobilizer \2013-	Add key,All key lost,
LINCOLN\MKZ\Smart key\2011-	Erase smart key,Add smart key,Read smart key count,
LINCOLN\Navigator\Immo bilizer\1997-1998	All key lost,Key count,
LINCOLN\Navigator\Immo bilizer\1999-2002	Program key,All key lost,Key count,
LINCOLN\Navigator\Immo bilizer\2003-2004	Program key,All key lost,Key count,
LINCOLN\Navigator\Immo bilizer\2005-2006	Program remote,All key lost,Key count,
LINCOLN\Navigator\Immo bilizer\2007-2009	Program key,All key lost,Key count,
LINCOLN\Navigator\Smart key\2015	Erase smart key,Add smart key,Read smart key count,
LINCOLN\Town Car\1998- 2002\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Town Car\2003- 2004\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Zephyr\2006\Im mobilizer	Program key,All key lost,Key count,
LINCOLN\PCM IMMO\Immobilizer	All key lost,Read key count,
AUDI\A6L\2009- \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
AUDI\A6L\2009 \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
AUDI\IMMO5\Immobilizer/ Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault
AUDI\Q7\2009 \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,
AUDI\Q7\2009- \Immobilizer	Backup immo data,Make dealer key,Learn key,Unlock key,

AUDI	AUDI\A3\TT\R8-CDC32XX+24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo
	AUDI\Q3\2013\Immobilizer	Backup EEPROM,Recover EEPROM,Make dealer key,Learn
	AUDI\A1\Immobilizer	Backup EEPROM,Recover EEPROM,Make dealer key,Key
	AUDI\A4L\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault
	AUDI\Q3\2014-\Immobilizer	Make dealer key,Learn key(OBD),Backup
	AUDI\Remote\Central locking(1281)	Add remote,Delete remote,
	AUDI\Remote\Central module(1281)	Add remote,Delete remote,
	AUDI\Remote\Remote	Add remote,Delete remote,
	NISSAN\Select from type\Immobilizer\Electronic	Add key,Activate steering wheel lock,Add key(fixed code),
	NISSAN\Select from type\Immobilizer\Electronic	Program key,
	NISSAN\Select from type\Immobilizer\Electronic	Add key,Add key(fixed code),
	NISSAN\Select from type\Immobilizer\Auto	Add key,
	NISSAN\Select from type\Remote\Type 1	Add remote,Delete remote,
	NISSAN\Select from type\Smart key\4-digit PIN	Program smart key,Delete smart key,Program steering lock,
	NISSAN\Select from type\Smart key\New 20-	Program smart key,
	NISSAN\Select from type\Smart key\New 20-	Program smart key,
	NISSAN\Select from type\Smart key\New 20-	Program smart key,
	NISSAN\Select from type\Smart key\New 20-	Program smart key,
	NISSAN\Select from type\Smart key\New 20-	Program smart key,

NISSAN

NISSAN>Select from type\Smart key\New 20-	Program smart key,
NISSAN>Select from type\Smart key\New 20-	Program smart key,
NISSAN>Select from type\Smart key\New 20-	Program smart key,
NISSAN>Select from type\Smart key\4-digit PIN	Program smart key,Delete smart key,
NISSAN>Select from type\Smart key\4-digit PIN	Program smart key,
NISSAN>Select from type\Smart key\4-digit PIN	Program smart key,Clear fault code,
NISSAN>Select from type\Smart key\4-digit PIN	Program smart key,
NISSAN>Select from type\Immobilizer\New 20-	Add key,
NISSAN>Select from type\Immobilizer\Activate	Activate steering wheel lock,
NISSAN>Select from type\Smart key\4-digit PIN	Activate steering wheel lock,
Nissan>Select from type\Smart key\12-digit	Smart key,Key count,
Nissan>Select from type\Immobilizer\12-digit	Smart key,Key count,
Nissan>Select from type\Immobilizer\12-digit	Program key,Key count,
Nissan\Read BCM code and release directional	Release steering lock,Read BCM inner code,
NISSAN>Select from type\Smart key\4-digit PIN	Read BCM inner code,Release steering lock,Program smart key,
NISSAN>Select from vehicle\Asia\Sunny\Smart	Read BCM inner code,Release steering lock,Program smart key,
NISSAN>Select from vehicle\Asia\350Z\2003-	Add key,Add key(fixed code),
NISSAN>Select from vehicle\Asia\X-	Program smart key,
NISSAN\PIN calculator	Type 1,Type 2,Type 3 (20-bit rolling code/PIN),

	NISSAN\Select from type\Remote\Type 2	Delete remote,Add remote,
	RENAULT\Select from type\Smart key\IMMO2	Program smart key,Collision recovery,
	RENAULT\Select from type\Smart key\IMMO1	Program smart key,Collision recovery,
	RENAULT\Select from vehicle\Fluence\2008 -	Immobilization,
	RENAULT\Select from vehicle\Clio\1997-1999	Set IMMO unit,Initialize new immobilizer,
	RENAULT\Select from vehicle\Clio\2000-2008 VIN	Immobilization,
	RENAULT\Select from vehicle\Clio\2006-2012 VIN	Program smart key,
	RENAULT\Select from vehicle\Clio\2006-2012 VIN	Immobilization,
	RENAULT\Select from vehicle\Espace\2002- VIN	Smart key,
	RENAULT\Select from vehicle\Espace\2002- VIN	Smart key,
	RENAULT\Select from vehicle\Kangoo\1999-	Set IMMO unit,
	RENAULT\Select from vehicle\Kangoo\1999-	Set IMMO unit,Initialize new immobilizer,
	RENAULT\Select from vehicle\Kangoo\2003-2008	Immobilization,
	RENAULT\Select from vehicle\Koleos\2008-2010	Smart key,
	RENAULT\Select from vehicle\Laguna\-	Smart key,
	RENAULT\Select from vehicle\Laguna\-	Smart key,
	RENAULT\Select from vehicle\Laguna\2007-2011	Smart key,
	RENAULT\Select from vehicle\Master\ -2003	Set IMMO unit,Initialize new immobilizer,
	RENAULT\Select from vehicle\Master\2003-2010	Immobilization,

RENAULT\Select from vehicle\Maxity	Read BCM,Program remote,Delete remote,
RENAULT\Select from vehicle\Megane\2002-2008	Smart key,
RENAULT\Select from vehicle\Megane\02-	Smart key,
RENAULT\Select from vehicle\Megane\2008 -	Immobilization,
RENAULT\Select from vehicle\Scenic\2002-2006,	Smart key,
RENAULT\Select from vehicle\Scenic\2006-2009,	Smart key,
RENAULT\Select from vehicle\Scenic\2008-2011	Immobilization,
RENAULT\Select from vehicle\Modus\2004-2012	Immobilization,
RENAULT\Select from vehicle\Modus\2004-2012	Smart key,Program remote,Delete remote,
RENAULT\Select from vehicle\Safrane\2008- VIN	Smart key,
RENAULT\Select from vehicle\Scala\2011-	Read BCM,Immobilization,Program
RENAULT\Select from vehicle\Trafic\2002- VIN	Immobilization,
RENAULT\Select from vehicle\Trafic\2002	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007 VIN	Set IMMO unit,
RENAULT\Select from vehicle\Twingo\2007 VIN	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007- VIN	Immobilization,
RENAULT\Select from vehicle\Velsatis\2002-2010	Smart key,
RENAULT\Select from vehicle\Velsatis\2002-2010	Smart key,
RENAULT\Select from vehicle\Wind\2010- VIN	Immobilization,

RENAULT

RENAULT\Select from vehicle\Safrane\ (KNMG4)	Read BCM,Immobilization,Program
RENAULT\Select from vehicle\Koleos\2010-2016	Program smart key,Collision recovery,
RENAULT\Select from vehicle\Latitude	Immobilization,
RENAULT\Select from vehicle\Scenic\1999-2002	Read PIN code,Program key,
RENAULT\Select from vehicle\Scenic\ -2008	Program key,
RENAULT\Select from vehicle\Twingo\Twingo I	Add key,
RENAULT\Select from vehicle\Symbol\Symbol.\Ty	Add key,
RENAULT\Select from vehicle\Thalia\Thalia.\Type	Add key,
RENAULT\Select from vehicle\Trafic\Trafic II Ph2.	Add key,
RENAULT\Select from vehicle\Master\Master.	Add key,
RENAULT\Select from vehicle\Primastar\Primasta	Add key,
RENAULT\Select from vehicle\Clio\Clio II Ph2.	Add key,
RENAULT\Select from vehicle\Kangoo\Kangoo I.	Add key,
RENAULT\Select from vehicle\Symbol\Symbol.\Ty	Program key,
RENAULT\Select from vehicle\Thalia\Thalia.\Type	Program key,
RENAULT\Select from vehicle\Dacia\Duster\2010-	Program key,
RENAULT\Select from vehicle\Laguna\Laguna II.	Add key,
RENAULT\Select from vehicle\Espace\Espace IV.	Add key,
RENAULT\Select from vehicle\Velsatis\ -2005.	Add key,

RENAULT\Select from vehicle\Laguna\Laguna II	Add key,
RENAULT\Select from vehicle\Espace\Espace IV	Add key,
RENAULT\Select from vehicle\Velsatis\2005-.	Add key,
RENAULT\Select from vehicle\Clio\CLIO	Add key,
RENAULT\Select from vehicle\Modus\Modus.\Wit	Add key,
RENAULT\Select from vehicle\Clio\CLIO III.With	Add key,
RENAULT\Select from vehicle\Trafic\Trafic II	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from vehicle\Master\Master	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from vehicle\Kangoo\Kangoo	Add key,
RENAULT\Select from vehicle\Twingo\Twingo	Add key,
RENAULT\Select from vehicle\Wind\2010-2013.	Add key,
RENAULT\Select from vehicle\Laguna\Laguna	Add key,
RENAULT\Select from vehicle\Megane\Megane	Add key,
RENAULT\Select from vehicle\Fluence\2009-	Add key,
RENAULT\Select from vehicle\Koleos\2008 -.	Add key,
RENAULT\Select from type\All\Type 0	Add key,
RENAULT\Select from type\All\Type 1	Add key,
RENAULT\Select from type\All\Type 2	Program key,
RENAULT\Select from type\All\Type 3	Add key,

RENAULT\Select from type\All\Type 4	Add key,
RENAULT\Select from type\All\Type 5	Add key,
RENAULT\Select from type\All\Type 6	Add key,
RENAULT\Select from type\All\Type 7	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from type\All\Type 8	Add key,
RENAULT\Select from type\All\Type 9	Program key,
RENAULT\Select from type\All\Type A	Add key,
RENAULT\Select from vehicle\Scenic\Scenic	Add key,
RENAULT\Select from type\All\Type B	Read PIN code,Program key,Recover backup data,
RENAULT\Select from vehicle\Trafic\Trafic III	Read PIN code,Program key,Recover backup data,
RENAULT\Select from vehicle\Clio\Clio IV.\2012-	Add key,Recover data,All key lost,
RENAULT\Select from vehicle\Captur	Add key,Recover data,All key lost,
RENAULT\Select from vehicle\Symbol\2013-2018	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Avantime\2001-	Add key,
RENAULT\Select from vehicle\Dacia\Logan\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Trafic\Trafic III	Program key,
RENAULT\Select from vehicle\Twingo\Twingo III.	Read PIN code,Recover backup data,Program key,
RENAULT\Select from vehicle\Kangoo\Kangoo	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from vehicle\Espace\2015-	Program smart key,Make dealer key,

RENAULT\Select from vehicle\Megane\Megane	Program key,
RENAULT\Select from vehicle\Espace\2015-	Program key,Make dealer key,
RENAULT\Select from vehicle\Megane\Megane	Program smart key,Make dealer key,
RENAULT\Select from vehicle\Megane\Megane	Program key,Make dealer key,
RENAULT\Select from vehicle\Scenic\Scenic	Program key,Make dealer key,
RENAULT\Select from vehicle\Scenic\Scenic	Program smart key,Make dealer key,
RENAULT\Select from vehicle\Dacia\Dokker\2012	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Duster\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Solenza	Add key,
RENAULT\Select from vehicle\Dacia\Lodgy\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Sandero	Add key,
RENAULT\Select from vehicle\Dacia\Sandero\200	Add key,
RENAULT\Select from vehicle\Dacia\LOGAN\200	Add key,
RENAULT\Select from vehicle\Dacia\Sandero\201	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\LOGAN(MA1	Add key,
RENAULT\Select from vehicle\Fluence\2008 -	Program key,
SUZUKI\China\Swift\2005-	All key lost,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 1	All key lost,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 2	Program key,Obtain immoID,

SUZUKI

SUZUKI\China\Alto\Immobilizer	Program key,Obtain immoID,
SUZUKI\China\SX4\Immobilizer	Program key,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 3	Program key,Read immoID,Program key (without
SUZUKI\China\Vitara\Smart key	Program smart key (PIN required),Program smart key
SUZUKI\China\Alivio\Smart key	Program smart key (PIN required),Program smart key
SUZUKI\China\Alivio\Immobilizer	Program key,Read immoID,Program key (without
SUZUKI\China\Liana\Immobilizer\Type 1	All key lost,Obtain immoID,
SUZUKI\China\S-Cross\Smart key	Program smart key (PIN required),Program smart key
SUZUKI\China\Jimny\Immobilizer\Type 1	Program key,Delete key,Register immobiliser,
SUZUKI\Japan\Ignis\Immobilizer	Program key,Delete key,Register immobiliser,
SUZUKI\China\Liana\Immobilizer\Type 2	Program key,Delete key,Register immobiliser,
SUZUKI\China\Jimny\Immobilizer\Type 2	All key lost,Obtain immoID,
SUZUKI\China\Swift\2012-	Program smart key (PIN required),Program smart key
SUZUKI\USA\XL7(USA)\2007-2009\Immobilization	All key lost,
SUZUKI\China\Swift\2015-\Type 1	Program key,Read immoID,Program key (without
SUZUKI\Japan\Baleno\Immobilizer\1996-2001	Immobilizer,Delete ey,
SUZUKI\China\Kizashi\Smart key	Program smart key (PIN required),Program smart key
SUZUKI\Japan\Wagon R\Immobilizer\1998-	Program key,Delete key,Register immobiliser,
SUZUKI\China\Swift\2015-\Type 2	All key lost,Obtain immoID,

	SUZUKI\Japan\Swift\Immobilizer\1996-2004	Immobilizer,Delete ey,
	SUZUKI\Japan\Alto\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitara\Immobilizer\1996-	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitara\Immobilizer\2002-	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitara\Immobilizer\1996-2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitara\Immobilizer\2002-	Immobilizer,Delete ey,
	SUZUKI\Japan\Jimny\Immobilizer	Immobilizer,Delete ey,
	SUZUKI\Suzuki(China)\New Alto	Program key,Obtain immoID,
LAMBORGHINI	LAMBORGHINI\LP560\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP570\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP580\Key (smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault
	LAMBORGHINI\LP610\Key (smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault
	LAMBORGHINI\LP700\Key (smart key) programming	Backup immo data,Make dealer key,Learn key,Clear airbag fault
	HYUNDAI\Select from vehicle\China\IX35\2010-	Program key,Read key count,Read PIN code(46
	HYUNDAI\Select from vehicle\China\Sonata(NF)\	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program key,ECM neutral mode,Read key count,
	HYUNDAI\Select from vehicle\China\Mistra(CF)\2	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\China\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Sonata(NFC)	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\I30(FDC)\20	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Elantra	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
HYUNDAI\Select from vehicle\China\Sonata(NFC)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\IX35\2010-	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Elantra	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\China\IX35\2014-	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\China\IX25(GC)\20	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Sonata	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\All New	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\All New	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Mistra(CF)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\HD	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM

HYUNDAI\Select from vehicle\General	Program smart key,
HYUNDAI\Select from vehicle\General	Program smart key,
HYUNDAI\Select from vehicle\General	Program smart key,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,MSL
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\All New	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Sonata	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Sonata	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2010-	Program remote,

HYUNDAI\Select from vehicle\China\Verna(RBC/	Program remote,
HYUNDAI\Select from vehicle\China\All New	Program remote,
HYUNDAI\Select from vehicle\China\Sonata	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\China\I30(FDC)\20	Program remote,
HYUNDAI\Select from vehicle\China\All New	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(AD)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(AD)\	Program remote,
HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program remote,
HYUNDAI\Select from type\Immobilizer\Type 1(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 2(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from type\Immobilizer\Type	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from type\Smart key\General	Program smart key,

HYUNDAI\Select from type\Smart key\General	Program smart key,
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral mode,MSL
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI \Select from type\Remote control	Program remote,
HYUNDAI \Select from type\Remote control	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Read PIN code	46 smart card,8A smart card,47 smart card,Read 46 chip PIN,PIN
HYUNDAI\Select from vehicle\China\Verna(RC)\I	Program key,Read key count,Read PIN code(46
HYUNDAI \Select from type\Remote control	Program remote,
HYUNDAI \Select from type\Remote control	Program remote,
HYUNDAI \Select from type\Remote control	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(AD)\	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Remote control	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from type\Smart key\General	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Accent(MC)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Accent(MC)\	Program remote,

HYUNDAI\Select from vehicle\China\Elantra	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Elantra(HDC	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(HDC	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\China\Celesta\2017	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Celesta\2017	Program remote,
HYUNDAI\Select from vehicle\China\Celesta\2017	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Elantra\2004	Program remote,
HYUNDAI\Select from vehicle\China\IX25(GC)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\IX25(GC)\20	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2014-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\IX35\2014-	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Sonata(LFC)	Program remote,

HYUNDAI\Select from vehicle\China\Sonata(LFC)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\China\Sonata(NFC)	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(NF)\	Program remote,
HYUNDAI\Select from vehicle\China\All New	Program remote,
HYUNDAI\Select from vehicle\China\All New	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program remote,
HYUNDAI\Select from vehicle\China\Verna\2016-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna\2016-	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM

HYUNDAI\Select from vehicle\General area\ccent	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\ccent	Program remote,
HYUNDAI\Select from vehicle\General area\ccent	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM

HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program smart card,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program remote,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program remote,
HYUNDAI\Select from vehicle\General area\H-	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46

HYUNDAI

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM

HYUNDAI\Select from vehicle\General area\ix35	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Smart key,ECM neutral mode,SMK neutral mode,ESCL

HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Accent(LC)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(LC)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(RB)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Accent(RB)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Attitude(Mexic	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(HG)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(HG)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Azera(HG)\20	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Elantra	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2	Program remote,

HYUNDAI\Select from vehicle\USA\Elantra(MD)\2	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Elantra(XD)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(XD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Entourage	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Entourage	Program remote,
HYUNDAI\Select from vehicle\USA\Equus(VI)\201	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Equus(VI)\201	Program smart key,
HYUNDAI\Select from vehicle\USA\Genesis	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Genesis	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program smart key,

HYUNDAI\Select from vehicle\USA\Genesis(DH)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Santafe	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Santafe	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Santafe(CM)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Santafe(CM)\	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe(CM)\	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Santafe	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\SANTAFE	Program remote,
HYUNDAI\Select from vehicle\USA\SANTAFE	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Sonata	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Sonata	Smart key,ECM neutral mode,SMK neutral mode,ESCL

HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\TUCSON	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2	Program remote,

HYUNDAI\Select from vehicle\USA\TIBURON(TL)	Program remote,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from vehicle\USA\Veracruz/ix55(Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Veracruz/ix55(Program remote,
HYUNDAI\Select from vehicle\USA\Veracruz/ix55(Program smart key,ECM neutral mode,SMK neutral mode,MSL
HYUNDAI\Select from vehicle\USA\XG(XG)\2001-	Program remote,
HYUNDAI\Select from type\Remote control	Program remote,
HYUNDAI\Select from type\Immobilizer\Type6(CA	Immobilizer,neutral mode,
HYUNDAI\Select from type\Immobilizer\Type7(CA	Immobilizer,neutral mode,
HYUNDAI\Select from type\Immobilizer\Type8(K	Immobilizer,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from type\Smart	Program smart key,
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,MSL
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,ESCL

HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,PDM
HYUNDAI\Select from type\Smart	Program smart key,
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral mode,MSL
HYUNDAI\Select from type\Smart	Smart key,ECM neutral mode,SMK neutral mode,ESCL
HYUNDAI\Select from type\Smart key\General	Program smart card,ECM neutral mode,SMK neutral mode,ESCL
TOYOTA\Select from vehicle\China\Camry\2000-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Camry\2004-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Reiz\Mechan	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Crown\-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Camry\2004-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prado\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Crown\2009-	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Rav4\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Reiz\Mechan	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Corolla\2012	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Camry\2004-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Crown\-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Crown\-	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\China\Reiz\Mechan	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Camry\2004-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Reiz\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Camry\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Vios\Mechan	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Corolla\2012	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Camry\2004-	Remote program method,
TOYOTA\Select from vehicle\China\Avanza\Mec	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Vios\Mechan	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Yaris\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Levin\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prado\2009-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from type\All smart key lost\All	Backup EEPROM,Generate SKE,Bind SKE,Add smart
TOYOTA\Select from type\PEPS\Type 2(Crown	Program remote,Add smart key,Reset immo ECU,
TOYOTA\Select from type\PEPS\Type 3	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from type\IMMO\Type	IMMO reset(8A all key lost),Add key,Delete key,Program immo
TOYOTA\Select from type\IMMO\Type	Add key,
TOYOTA\Select from type\IMMO\Type 6	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Corolla	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from type\IMMO\Type	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from type\IMMO\Type 1("4C")	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from type\IMMO\Type	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from type\IMMO\Type 7(Toyota	Read key count,Add key,Program remote,Delete remote,Delete key,
TOYOTA\Select from type\Remote\Type 1	Program remote,Delete remote,
TOYOTA\Select from type\Remote\Type 2	Program remote,Delete remote,
TOYOTA\Select from type\PEPS\Type 1	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from type\Remote\Type 3	Program remote,
TOYOTA\Select from type\IMMO\Type	G Immobilizer reset(All key lost),DOT Immobilizer reset(All
TOYOTA\Select from vehicle\China\Avanza\All	G Immobilizer reset(All key lost),DOT Immobilizer reset(All
TOYOTA\Select from vehicle\China\Corolla	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Corolla	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Corolla	Program remote,Add smart key,Reset immo ECU,
TOYOTA\Select from vehicle\USA\4Runner\1999	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\4Runner\2003	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\4Runner\2003	Remote program method,
TOYOTA\Select from vehicle\USA\4Runner\2009	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\4Runner\2009	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\4Runner\2009	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\USA\4Runner\2009	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\4Runner\2009	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\86\2016-	Add smart key,Delete smart key,Synch ID authentication box
TOYOTA\Select from vehicle\USA\86\2016-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Allion\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Alphard\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Altis\2003-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Altis\2011\Im	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Altis\2011\Im	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Aurion\2006-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Aurion\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Aurion\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Aurion\2009\I	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Aurion\2009\I	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Aurion\2009\I	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Aurion\2009\S	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Aurion\2010-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Aurion\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Auris\2007-	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\USA\Auris\2007-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Auris\2009-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Auris\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Auris\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Auris\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Avalon\1998-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Avalon\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Avalon\2005-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Avalon\2005-	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from vehicle\USA\Avalon\2013-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Avalon	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Avanza\2012-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Avenxis\1997-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Avenxis\2009-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Avenxis\2009-	Remote program method,
TOYOTA\Select from vehicle\USA\Avenxis\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Avenxis\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Avenxis\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Axio\2003\Sm	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &

TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Camry\1998-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Camry\1998-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2004\I	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Camry\2004\I	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Camry\2006-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,

TOYOTA\Select from vehicle\USA\Camry\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Camry\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Camry\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Camry\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Camry\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Celsior\2000-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Corolla\2001-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Corolla\2001-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2001-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Corolla\2001-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2007-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Corolla\2009\	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Corolla\2009\	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Corolla\2009\	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Corolla\2009\	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Corolla\2010-	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Corolla\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Corolla\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Corolla\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Corolla\2015-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Corolla\2015-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Crown\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Crown\2003-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Crown\2003-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Crown\2003-	Program remote,Add smart key,Reset immo ECU,
TOYOTA\Select from vehicle\USA\Echo\2003-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Estima\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\USA\FJ	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\FJ	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Fieler\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Fortuner\2005	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Fortuner\2005	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Hiace\-	Remote program method,
TOYOTA\Select from vehicle\USA\Hiace\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Hiace\2005-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Hiace\2005-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Highlander\20	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Highlander\20	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Highlander\20	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Highlander\20	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\20	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Highlander\20	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\USA\Highlander\20	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Highlander\20	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Highlander	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Highlander	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Hilux\2004-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Hilux\2008-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Hilux\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Hilux\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\IQ\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\IQ\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\IQ\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\IQ\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\IQ\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\IQ\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2012-	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\USA\Innova\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Innova\2010\	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Innova\2010\	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Kluger\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Kluger\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Kluger\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Kluger\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Kluger\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Kluger\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Kluger\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Kluger\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Land	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Land	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Land Cruiser	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Land Cruiser	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\MR2	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Mark x\-	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Mark x\2005-	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2005-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Mark x\2007-	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\USA\Mark x\2007-	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Mark x\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Mark x\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Mark x\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Matrix\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Matrix\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Matrix\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2016-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Mitri\2016(Sm	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Mr2\1999-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\New Verso	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\New Verso	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\New Verso	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\New Verso	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\New Verso	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prado\2002-	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\USA\Prado\2002-	Remote program method,
TOYOTA\Select from vehicle\USA\Prado\2009\M	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Prado\2009\M	Remote program method,
TOYOTA\Select from vehicle\USA\Prado\2009\M	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Prado\2009\M	Remote program method,
TOYOTA\Select from vehicle\USA\Prado	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Premio\2006\	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Premio\2006\	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Premio\2007-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Previa\2001-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Previa\2001-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius\2003\S	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius\2004-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Prius\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius\2004-	Remote program method,
TOYOTA\Select from vehicle\USA\Prius\2004-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius C\2012-	Add key,Delete key,Program immo ECU,Program engine

TOYOTA

TOYOTA\Select from vehicle\USA\Prius C\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius C\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Prius C\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius C\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Prius V\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Rav4\2001-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Rav4\2001-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Rav4\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Rav4\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Rav4\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Rav4\2009-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Rav4\2009-	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Rav4\2009-	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Rav4\2009-	Remote program method,

TOYOTA\Select from vehicle\USA\Rav4\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Rav4	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Rav4	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Rumion\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Sequoia\2000	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Sequoia\2000	Remote program method,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Remote program method,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Sequoia\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Sequoia\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Sequoia\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Sienna\-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Sienna\-	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\USA\Sienna\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Sienna\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Sienna\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Sienna\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Sienna\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Sienna\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Solara\1999-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Solara\1999-	Remote program method,
TOYOTA\Select from vehicle\USA\Solara\1999-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Solara\1999-	Remote program method,
TOYOTA\Select from vehicle\USA\Solara\2004-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Tacoma\2004-	Remote program method,
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tacoma\2016-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Tarago\2002-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Tarago\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Tarago\2009-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Tundra\2000-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Urban	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Vanguard\200	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Vela\-	Remote program method,

TOYOTA\Select from vehicle\USA\Venza\2008-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Venza\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Venza\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Venza\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Verso\-	Remote program method,
TOYOTA\Select from vehicle\USA\Vigo\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Vigo\2010\Me	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Vigo\2010\Me	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Vios\-	Remote program method,
TOYOTA\Select from vehicle\USA\Vios\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Voxy\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Yaris\2000	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2001-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Yaris\2001-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2001-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\USA\Yaris\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\USA\Yaris\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\USA\Yaris\2008-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2014\Me	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\USA\Yaris\2014\Me	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\China\86\2016(Sm	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Alphard\-	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Alphard\-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Alphard\2005	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Alphard\2005	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Alphard\2005	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Alphard\2005	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Corolla\2012	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Corolla\2012	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Corolla\2007	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Corolla\2001	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Corolla\2001	Remote program method,
TOYOTA\Select from vehicle\China\EZ\-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\EZ\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\EZ\2012-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\China\FJ	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\FJ	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner\200	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner\200	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Hiace\-	Remote program method,
TOYOTA\Select from vehicle\China\Hiace\2006-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Hiace\2006-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Hiace\2006-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Hiace\2015-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Hiace\2015-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Hiace\2015-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &

TOYOTA\Select from vehicle\China\Highlander\2	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Highlander\2	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Highlander\2	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Highlander\2	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Highlander\2	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Hilux\Mecha	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Hilux\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Hilux\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Land	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Land Cruiser	Remote program method,

TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\China\Land Cruiser	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Land Cruiser	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Levin\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Levin\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Previa\2001-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Previa\2001-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Previa	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Prius/Tarago	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Prius/Tarago	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Prius/Tarago	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius/Tarago	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius/Tarago	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Prius\Mecha	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\China\Prius\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Prius+/Prius	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Prius	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Prius	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Rav4	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Sequoia\200	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Sequoia\200	Remote program method,

TOYOTA\Select from vehicle\China\Sequoia\200	Add master key,Add valet key,Delete key,Clear fault code,
TOYOTA\Select from vehicle\China\Sequoia\200	Remote program method,
TOYOTA\Select from vehicle\China\Sequoia\200	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Sequoia\200	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sequoia\200	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Sequoia\200	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sequoia\200	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Sequoia\200	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Sienna\Mech	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Sienna\Mech	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Sienna\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sienna\Mech	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Sm	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Tundra\2000	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007	Add key,Delete key,All key lost,Reset immo ECU,Program

TOYOTA\Select from vehicle\China\Tundra\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Tundra\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Tundra\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mech	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Venza\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mech	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Venza\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mech	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Venza\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Yaris\2008-	Add key,Delete key,All key lost,Reset immo ECU,Program
TOYOTA\Select from vehicle\China\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2008-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2013-	Add key,Delete key,Program immo ECU,Program engine

TOYOTA\Select from vehicle\China\Yaris\2013-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2013-	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Yaris\2013-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Zelas\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Zelas\Mecha	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Zelas\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Vios\Mechan	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Vios\Mechan	Add key,Delete key,Program immo ECU,Program engine
TOYOTA\Select from vehicle\China\Vios\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Camry\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Camry\2004-	Remote program method,
TOYOTA\Select from vehicle\China\Camry\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Camry\2004-	Remote program method,
TOYOTA\Select from vehicle\China\Crown\-	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from vehicle\China\Crown\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
TOYOTA\Select from vehicle\China\Crown\2009-	Program remote,Add smart key,Reset immo ECU,
TOYOTA\Select from vehicle\China\Crown\2009-	Program remote,Delete remote,
MITSUBISHI\Select from type\Immobilizer\Type 1	All key lost,Register key ID,
MITSUBISHI\Select from type\Remote\Type 1	Program remote,

MITSUBISHI\Select from type\Smart key\Type 1	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 2	Program key,
MITSUBISHI\Select from type\Remote\Type 2	Program remote,
MITSUBISHI\Select from type\Smart key\Type 2	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 3	Program key,
MITSUBISHI\Select from type\Remote\Type 3	Program remote,
MITSUBISHI\Select from type\Remote\Type 4	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 4	Program key,
MITSUBISHI\Select from vehicle\China\Lancer-	Program smart key,
MITSUBISHI\Select from vehicle\China\Lancer-	All key lost,Register key ID,
MITSUBISHI\Select from vehicle\China\Lancer-	Program remote,
MITSUBISHI\Select from vehicle\China\Outlander\-	Program smart key,
MITSUBISHI\Select from vehicle\China\ASX\Smart	Program smart key,
MITSUBISHI\Select from vehicle\China\ASX\Immobil	Program key,
MITSUBISHI\Select from vehicle\China\ASX\Remote	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\-	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\-	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\-	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\-	Program remote,

MITSUBISHI\Select from vehicle\China\TRITON\201	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\201	Program key,
MITSUBISHI\Select from vehicle\China\TRITON\201	Program remote,
MITSUBISHI\Select from vehicle\China\TRITON\201	Program remote,
MITSUBISHI\Select from vehicle\China\Pajero	Program key,
MITSUBISHI\Select from vehicle\China\Pajero	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\V73\Immobili	Add key,
MITSUBISHI\Select from vehicle\China\V97\Immobili	Add key,
MITSUBISHI\Select from vehicle\China\Galant\Immo	Add key,
MITSUBISHI\Select from vehicle\China\Grandis\Imm	Add key,
MITSUBISHI\Select from vehicle\China\Pajero	Add key,
MITSUBISHI\Select from vehicle\China\Pajero	Program key,
MITSUBISHI\Select from vehicle\China\Pajero	Program remote,
MITSUBISHI\Select from vehicle\China\Pajero	Add key,
MITSUBISHI\Select from vehicle\China\Outlander\20	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 6	Program key,
MITSUBISHI\Select from type\Immobilizer\Type 7	All key lost,
MITSUBISHI\Select from type\Immobilizer\Type 8	Add key,

MITSUBISHI\Select from type\Immobilizer\Type 9	All key lost,Key count,
MITSUBISHI\Select from type\Immobilizer\Type 10	All key lost,Key count,
MITSUBISHI\Select from type\Smart key\Type 3	Program smart key,
MITSUBISHI\Select from type\Smart key\Type 4	Add smart key,Key count,
MITSUBISHI\Select from type\Remote\Type 5	Program remote,
MITSUBISHI\Select from type\Remote\Type 6	Program remote,
MITSUBISHI\Select from type\Remote\Type 7	Program remote,
MITSUBISHI\Select from type\Remote\Type 8	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 1	Program key,
MITSUBISHI\Select from vehicle\China\Mirage\With	Add smart key,Key count,
MITSUBISHI\Select from vehicle\China\Mirage\Witho	Add key,Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 12	Immobilization,
MITSUBISHI\Select from type\Immobilizer\Type 13	Immobilization,
MITSUBISHI\Select from vehicle\China\Lancer\Immo	Program key,
MITSUBISHI\Select from vehicle\China\Lancer\Rem	Program remote,
MITSUBISHI\Select from vehicle\China\Outlander\	Immobilizer,
MITSUBISHI\Select from vehicle\China\Outlander\	Remote,
MITSUBISHI\Select from vehicle\Australia\3000gt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Airtrek	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Australia\ASX\With	Program smart key,
MITSUBISHI\Select from vehicle\Australia\ASX\With	Program key,
MITSUBISHI\Select from vehicle\Australia\Colt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Challenge	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Express\1	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Express	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\EVO\Type	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\EVO\Type	Program key,
MITSUBISHI\Select from vehicle\Australia\Galant	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Lancer\19	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer\20	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer(C	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Lancer(sp	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Lancer	Program key,
MITSUBISHI\Select from vehicle\Australia\Mirage\19	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Mirage\19	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Mirage\	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Australia\Mirage\20	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Nimbus\1	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Nimbus\1	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\Outlander	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\Outlander	All key lost,Program remote,
MITSUBISHI\Select from vehicle\Australia\Outlander	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Pajero\19	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Pajero\20	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\Star	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Australia\1999-	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Australia\1999-	Program key,
MITSUBISHI\Select from vehicle\Australia\Verada\19	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Africa\Lancer\2006-	Program key,
MITSUBISHI\Select from vehicle\Africa\L200	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\Outlander\20	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Pajero\1999-	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Shogun\2001	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Diam	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Eclip	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Eclip	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Ende	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Ende	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\EVO	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Gala	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Lanc	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Lanc	Program key,

MITSUBISHI\Select from vehicle\America\USA\Mirag	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Mont	Add key,Reset immobillser,
MITSUBISHI\Select from vehicle\America\USA\Mont	Add key,Reset immobillser,
MITSUBISHI\Select from vehicle\America\USA\Mont	Add key,Reset immobillser,
MITSUBISHI\Select from vehicle\America\USA\Outla	Add key,Reset immobillser,
MITSUBISHI\Select from vehicle\America\USA\Outla	Add key,Reset immobillser,
MITSUBISHI\Select from vehicle\America\USA\Outla	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Outla	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outla	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Outla	Program key,
MITSUBISHI\Select from vehicle\America\USA\Rvr\	Program key,
MITSUBISHI\Select from vehicle\America\USA\Rvr\	Program key,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,

MITSUBISHI

MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Program smart key,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\3000gt	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\ASX\With	Program smart key,
MITSUBISHI\Select from vehicle\Europe\ASX\Witho	Program key,
MITSUBISHI\Select from vehicle\Europe\Carisma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Colt Lander	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\EVO\Type	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\EVO\Type	Program key,

MITSUBISHI\Select from vehicle\Europe\Galant	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Galant\199	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\l-miev	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\L200	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\L200[CAN]\	Program key,
MITSUBISHI\Select from vehicle\Europe\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Lancer	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer[CA	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer	Program key,
MITSUBISHI\Select from vehicle\Europe\Mirage\201	Program smart key,
MITSUBISHI\Select from vehicle\Europe\Magnum	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Outlander\	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Outlander\	Program smart key,
MITSUBISHI\Select from vehicle\Europe\Outlander[Program key,
MITSUBISHI\Select from vehicle\Europe\Pajero\199	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Pajero	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Europe\Shogun	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Europe\Space	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Japan\Carism	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Colt\19	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Eclipse\	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\L200\1	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Nativa\	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\	Add key,Reset immobilser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\	Add key,Reset immobilser,

MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\3000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Israel\Carisma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Endeav	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Asia\Israel\Galant\1	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\GT3000	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\L200\20	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\c	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\c	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Mirage	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Magun	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Nativa	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Outland	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Outland	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Israel\Pajero	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacew	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacew	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Israel\Space\S	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Delica\2	Program key,

MITSUBISHI\Select from vehicle\Asia\Other\EVO 8	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 9	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200	All key lost,
MITSUBISHI\Select from vehicle\Asia\Other\Outland	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Pajero\	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Greece\Carisma\19	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Colt\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Colt	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Galant\199	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Lancer\199	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Lancer	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Greece\L200\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero\199	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\3000gt\199	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Program key,
MITSUBISHI\Select from vehicle\Middle East\L200\-	Add key,Reset immo ECU,

MITSUBISHI\Select from vehicle\Middle East\Magna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Nativa	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Middle East\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\China\Pajero	Program smart key,
MITSUBISHI\Select from vehicle\China\TRITON\201	Program smart key,
MITSUBISHI\Select from vehicle\China\Attraga\2015	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Outlander	Program remote,Add key,
MITSUBISHI\Select from vehicle\Australia\Outlander	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Outlander	Program smart key,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\America\USA\Gala	All key lost,Key count,
MITSUBISHI\Select from vehicle\China\Attraga-	Program smart key,
MITSUBISHI\Select from vehicle\China\Attraga-	All key lost,
MITSUBISHI\Select from vehicle\China\Attraga-	Program remote,
MITSUBISHI\Select from vehicle\China\Phantom\Wit	All key lost,

	MITSUBISHI\Select from vehicle\China\Phantom\Wit	Program remote,
	MITSUBISHI\Select from vehicle\China\Phantom\Wit	Program smart key,
	MITSUBISHI\Select from vehicle\China\Phantom\Wit	Program smart key,
	MITSUBISHI\Select from vehicle\China\Phantom\Wit	Program remote,
	MITSUBISHI\Select from vehicle\China\Outlander\20	Add key,
	MITSUBISHI\Select from vehicle\China\Outlander\20	Program remote,
	MITSUBISHI\Select from vehicle\China\Outlander\20	Add key,
	MITSUBISHI\Select from vehicle\China\Outlander\20	Program remote,
HONDA	HONDA\Select from type\Immobilizer\16	Add one key,All key lost,Reset key,
	HONDA\Select from type\Immobilizer\16	Add one key,All key lost,Reset key,
	HONDA\Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
	HONDA\Select from type\Smart key\Button type	Add one key,All key lost,
	HONDA\Select from type\Remote\IMMO9	Add remote,Delete remote,
	HONDA\Select from type\Immobilizer\16	Add key,All key lost,Reset immobiliser,
	HONDA\Select from type\Immobilizer\16	Reset immobox,Reset ECM,
	HONDA\Select from type\Immobilizer\16	Immo type,
	HONDA\Select from type\Smart key\Button type	Add 1 key,All key lost,
	HONDA\Select from type\Smart key\Button type	Add 1 key,All key lost,
	HONDA\Select from type\Immobilizer\3-pin	Search IMMO type,

HONDA\Select from type\Immobilizer\3-pin	Add 1 key,All key lost,Reset key,
HONDA\Select from type\Immobilizer\3-pin	Add one key,All key lost,Reset key,
HONDA\Select from type\Immobilizer\3-pin	Add key,All key lost,Odometer adjustment,
HONDA\Select from type\Immobilizer\3-pin	Reset immobox,Reset ECM,
HONDA\Select from type\Immobilizer\16	Read key count,All key lost,
LEXUS\Select from vehicle\ES240\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\CT200H\2012-	Add smart key,Delete smart key,
LEXUS\Select from vehicle\ES250\2012-\Smart	Add smart key,Delete smart key,
LEXUS\Select from vehicle\ES350\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\RX270\Smart key	Add smart key,Delete smart key,
LEXUS\Select from vehicle\IS300\Smart key	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\GS300\2006-	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\ES200\Smart key	Add smart key,Delete smart key,
LEXUS\All smart key lost\All key lost	Backup EEPROM,Generate SKE,Bind SKE,Add smart
LEXUS\Select from vehicle\CT200H\2010\Sma	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\ES300\2002-	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\ES300\2002-	Remote program method,
LEXUS\Select from vehicle\ES300H\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\ES330\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program

LEXUS\Select from vehicle\GS300\1998-	Program remote,Delete remote,
LEXUS\Select from vehicle\GS300\2002-	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\GS300\2002-	Program remote,Delete remote,
LEXUS\Select from vehicle\GS300\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GS350\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GS350\2006-	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\GS350\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GS430\2001-	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\GS430\2001-	Program remote,Delete remote,
LEXUS\Select from vehicle\GS430\2005-	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\GS430\2006-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GS450H\2007-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GS450H\2008-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GS460\2008-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GX460\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\GX460\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\GX470\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\GX470\2003-	Program remote,Delete remote,
LEXUS\Select from vehicle\GX470\2003-	Remote program method,

LEXUS

LEXUS\Select from vehicle\HS250H\2008-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\IS200\Mechanical	Remote program method,
LEXUS\Select from vehicle\IS250\2006-	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\IS250\2011\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\IS250\2012-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\IS250\2014-\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\IS250C\2009-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\IS300\Mechanical	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\IS300\Mechanical	Program remote,Delete remote,
LEXUS\Select from vehicle\IS350\2006-	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\IS250\2014-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\LS400\1998-	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\LS430\2001-	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-	Remote program method,
LEXUS\Select from vehicle\LS430\2001-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\LS430\2001-	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-	Remote program method,
LEXUS\Select from vehicle\LS430\2001-	Smart key registration,Delete smart key,Reset immobox,

LEXUS\Select from vehicle\LS460\2007-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\LS460\2013-\Smart	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\LS460H\2007-	Remote program method,
LEXUS\Select from vehicle\LS460H\2007-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\LS460H\2008-	Remote program method,
LEXUS\Select from vehicle\LX470\2001-	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from vehicle\LX470\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\LX470\2003-	Program remote,Delete remote,
LEXUS\Select from vehicle\LX470\2003-	Remote program method,
LEXUS\Select from vehicle\LX570\2008-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\RX300\1999-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX300\2003-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\RX300\2003-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX300\2003-	Remote program method,
LEXUS\Select from vehicle\RX330\2004-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\RX330\2004-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX330\2004-	Remote program method,
LEXUS\Select from vehicle\RX350\2007-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\RX350\2007-	Program remote,Delete remote,

LEXUS\Select from vehicle\RX350\2007-	Remote program method,
LEXUS\Select from vehicle\RX350\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\RX400H\2005-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\RX400H\2005-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX400H\2005-	Remote program method,
LEXUS\Select from vehicle\RX450H\2010-	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\RX450H\2012\Sma	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from vehicle\SC430\2002-	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from vehicle\SC430\2002-	Program remote,Delete remote,
LEXUS\Select from vehicle\SC430\2002-	Remote program method,
LEXUS\Select from type\IMMO\Type 1	Add master key,Add valet key,Delete key,Clear fault code,
LEXUS\Select from type\IMMO\Type 2	Add key,Delete key,All key lost,Reset immo ECU,Program
LEXUS\Select from type\Remote	Program remote,Delete remote,
LEXUS\Select from type\PEPS\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
LEXUS\Select from type\PEPS\Type 2	Smart key registration,Delete smart key,Reset immobox,
LEXUS\Select from vehicle\IS250C\2009-	Add smart key,Delete smart key,Reset smart key,
DS\Select from vehicle\DS4\Smart key	All smart key lost,
DS\Read PIN code	Type 1,Type 2,Type 3,Type 4 (K line),
DS\Select from type\Immobilizer\Type 1	Program key,

DS

DS\Select from type\Smart key\Type 1	All smart key lost,
DS\Select from type\Immobilizer\Type 3	Program key,
DS\Select from type\Immobilizer\Type 2	Program key,
DS\Select from vehicle\DS5\Immobilizer\Ty	Program key,
DS\Select from vehicle\DS5\Immobilizer\Ty	Program key,
DS\Select from vehicle\DS3\Immobilizer	Program key,
DS\Select from vehicle\DS4\Immobilizer	Program key,
DS\Select from vehicle\DS5\Immobilizer\Ty	Program key,
DS\Select from vehicle\DS6\Immobilizer	Program key,
DS\Select from vehicle\DS5\Smart key	All smart key lost,
DS\Select from vehicle\DS6\Smart key	All smart key lost,
DS\Select from type\Immobilizer\Type 4	Read key/remote count,Immobilization,Program
DS\Select from type\Replace engine	Replace engine ECU,
SUBARU\Select from type\Immobilizer\Type 1	All key lost,Delete key,
SUBARU\Select from type\Smart key\Type C	Add smart key,Delete smart key,Register smart ECM,Register
SUBARU\Select from type\Smart key\Type	Add smart key,Delete smart key,Detect key count,Register
SUBARU\Select from type\Immobilizer\Type	Add key,Delete key,Detect key count,Register dashboard
SUBARU\Select from type\Remote\Type 1	Add remote,Clear remote,
SUBARU\Select from type\Immobilizer\Type 3	Add key,Read PIN code,

SUBARU

SUBARU>Select from type\Immobilizer\Type 4	Key count,Add key,
SUBARU>Select from type\Immobilizer\Type 5	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU>Select from type\Smart key\Type 3	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU>Select from type\Smart key\Type 4	Key count,Add key,
SUBARU>Select from type\Remote\Type 2	Add remote,Type 3(to be deleted),
SUBARU>Select from type\Remote\Type 3	Add remote,
SUBARU>Select from type\Immobilizer\Type	Check key count,Add key,All key lost,Delete key,Register
SUBARU>Select from type\Smart key\Type 5	Add smart key,Delete smart key,
SUBARU>Select from vehicle\B4\2009-	Add smart key,Delete smart key,Key count,Read PIN
SUBARU>Select from vehicle\Baja\2005-2007	All key lost,Delete key,
SUBARU>Select from vehicle\Brz\2013-	Key count,Add key,Delete key,Add remote,Delete remote,
SUBARU>Select from vehicle\Brz\2013-	Add smart key,Delete smart key,
SUBARU>Select from vehicle\Crosstrek\2014-	Check key count,Add key,All key lost,Delete key,Register
SUBARU>Select from vehicle\Crosstrek\2014-	Add smart key,Delete smart key,Detect key count,Register
SUBARU>Select from vehicle\Forester\2013 -	Check key count,Add key,All key lost,Delete key,Register
SUBARU>Select from vehicle\Forester\2013 -	Add smart key,Delete smart key,Detect key count,Register
SUBARU>Select from vehicle\Impreza\Without	All key lost,Delete key,
SUBARU>Select from vehicle\Impreza\Without	Check key count,Add key,All key lost,Delete key,Register
SUBARU>Select from vehicle\Impreza\With	Add smart key,Delete smart key,Key count,Read PIN

	SUBARU\Select from vehicle\Impreza\With	Add smart key,Delete smart key,Detect key count,Register
	SUBARU\Select from vehicle\Legacy\Without	All key lost,Delete key,
	SUBARU\Select from vehicle\Legacy\With smart	Add smart key,Delete smart key,Key count,Read PIN
	SUBARU\Select from vehicle\Levorg\2015-\With	Add smart key,Delete smart key,Detect key count,Register
	SUBARU\Select from vehicle\Outback\Without	All key lost,Delete key,
	SUBARU\Select from vehicle\Outback\Without	Add key,Read PIN code,
	SUBARU\Select from vehicle\Sti	All key lost,Delete key,
	SUBARU\Select from vehicle\Tribeca\Without	All key lost,Delete key,
	SUBARU\Select from vehicle\Tribeca\Without	Key count,Add key,Delete key,Add remote,Delete remote,
	SUBARU\Select from vehicle\Tribeca\With	Add smart key,Delete smart key,
	SUBARU\Select from vehicle\XV\2013-\Without	Check key count,Add key,All key lost,Delete key,Register
	SUBARU\Select from vehicle\XV\2013-\With	Add smart key,Delete smart key,Detect key count,Register
	SUBARU\Select from vehicle\XV Crosstrek\2013-	Check key count,Add key,All key lost,Delete key,Register
	SUBARU\Select from vehicle\XV Crosstrek\2013-	Add smart key,Delete smart key,Detect key count,Register
	SUBARU\Select from vehicle\WRX\-	All key lost,Delete key,
	SUBARU\Select from vehicle\WRX\2014-	Check key count,Add key,All key lost,Delete key,Register
	SUBARU\Select from vehicle\WRX\2014-\With	Add smart key,Delete smart key,Detect key count,Register
BENTLEY	BENTLEY\Flying Spur\2012 \Immobilizer	Learn key,Read PIN code,
	BENTLEY\Mulsanne\6.8 liter\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault

SMART	SMART\BR451\Immobilizer	Program key,
	SMART\BR450\2002\Immobilizer	Program key,
	SMART\BR453\Immobilizer	Read PIN code,Program key,Recover configured
	SMART\BR452\2003-2006\Immobilizer	Program key,Read key count,
	SMART\BR454\2004-2006\Immobilizer	Program key,
	SMART\BR450\2002-\Immobilizer	Program key,Read key count,
	CHRYSLER>Select from type\Immobilizer\Type	Add new key,Add old key,Add remote,Detect key count,Delete
	CHRYSLER>Select from type\Immobilizer\Type	Read PIN code,Add new key,Delete key,Key count,Add old
	CHRYSLER>Select from type\Immobilizer\Type	Read pin code,Add key,Delete key,Key count,
	CHRYSLER>Select from type\Immobilizer\Type	Read pin code,Add key,Delete key,Key count,
	CHRYSLER>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
	CHRYSLER>Select from type\Remote\Type 4(CAN)	Add remote,Read pin code,
	CHRYSLER>Select from type\Remote\Type 3(VPW)	Add remote,
	CHRYSLER>Select from type\Remote\Type 2(VPW)	Add remote,
	CHRYSLER>Select from type\Smart key\Type	Add smart key,Delete smart key,Key count,Read PIN code,
	CHRYSLER>Select from type\Immobilizer\Type	Add key,Delete key,Key count,
	CHRYSLER>Select from type\IMMO-Fobik	Read PIN code,Synch smart key,Add key,Delete key,
	CHRYSLER>Select from vehicle\Asia\300\2011-	Add smart key,Delete smart key,Read PIN code,
	CHRYSLER>Select from vehicle\Asia\Freemont\201	Add smart key,Delete smart key,Read PIN code,

CHRYSLER>Select from vehicle\Asia\300M\1999-	Add remote,
CHRYSLER>Select from vehicle\Asia\Concorde\199	Add remote,
CHRYSLER>Select from vehicle\Asia\LHS\1999-	Add remote,
CHRYSLER>Select from vehicle\Asia\PT	Add remote,
CHRYSLER>Select from vehicle\Asia\Sebring\2001-	Add remote,
CHRYSLER>Select from vehicle\Asia\Town and	Add remote,Delete remote,
CHRYSLER>Select from type\Remote\Type 1(VPW)	Add remote,
CHRYSLER>Select from type\Remote\Type 5(VPW)	Add remote,Delete remote,
CHRYSLER>Select from type\Remote\Type 6(VPW)	Add remote,
CHRYSLER>Select from type\Remote\Type 7(VPW)	Add remote,
CHRYSLER>Select from type\Remote\Type 8(VPW)	Add remote,
CHRYSLER>Select from vehicle\Asia\200\2015-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER>Select from type\Immobilizer\Type	Add key,Delete key,
CHRYSLER>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from type\Smart key\Type	Sync smart function,
CHRYSLER>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\USA\200\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\USA\200\2015-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER>Select from vehicle\USA\300\2008\Imm	Read pin code,Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\USA\300\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\USA\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\USA\300C\2008\lm	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300C\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300C\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\USA\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\USA\300M\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300M\1999-	Add remote,
CHRYSLER\Select from vehicle\USA\300M\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\300M\2001-	Add remote,
CHRYSLER\Select from vehicle\USA\Concorde\199	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Concorde\199	Add remote,
CHRYSLER\Select from vehicle\USA\Concorde\200	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Concorde\200	Add remote,
CHRYSLER\Select from vehicle\USA\LHS\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\LHS\1999-	Add remote,
CHRYSLER\Select from vehicle\USA\Neon\2000\lm	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Neon\2001-	Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\USA\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\USA\Pacifica\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\USA\PT	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\PT	Add remote,
CHRYSLER\Select from vehicle\USA\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\USA\Sebring\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Sebring\2001-	Add remote,
CHRYSLER\Select from vehicle\USA\Sebring\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\USA\Town and	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Town and	Add remote,
CHRYSLER\Select from vehicle\USA\Town and	Add key,Delete key,
CHRYSLER\Select from vehicle\USA\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\TOWN and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\TOWN and	Sync smart function,
CHRYSLER\Select from vehicle\USA\Town	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\USA\Voyager\2001	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\USA\Voyager\2004	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\300\2008\Imm	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300\2009-	Read pin code,Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Asia\300\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Asia\300C\2008\Im	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300C\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300C\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Asia\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300M\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300M\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300M\2001-	Add remote,
CHRYSLER\Select from vehicle\Asia\Concorde\199	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Concorde\200	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Concorde\200	Add remote,
CHRYSLER\Select from vehicle\Asia\LHS\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Neon\2000\Im	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Neon\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\Asia\Pacifica\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\PT	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Asia\Sebring\2001-	Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Asia\Sebring\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Asia\Town and	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town and	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town and	Sync smart function,
CHRYSLER\Select from vehicle\Asia\Voyager\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Grand	Add remote,
CHRYSLER\Select from vehicle\Asia\Grand	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Europe\200\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Europe\200\2015-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Europe\300\2008\I	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Europe\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300C\2008\	Read pin code,Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Europe\300C\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300C\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Europe\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300M\1999	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300M\1999	Add remote,
CHRYSLER\Select from vehicle\Europe\300M\2001	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300M\2001	Add remote,
CHRYSLER\Select from vehicle\Europe\Concorde\1	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Concorde\1	Add remote,
CHRYSLER\Select from vehicle\Europe\Concorde\2	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Concorde\2	Add remote,
CHRYSLER\Select from vehicle\Europe\LHS\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\LHS\1999-	Add remote,
CHRYSLER\Select from vehicle\Europe\Neon\2000\	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Neon\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\Europe\Pacifica\20	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\PT	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\PT	Add remote,

CHRYSLER\Select from vehicle\Europe\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Europe\Sebring\20	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Sebring\20	Add remote,
CHRYSLER\Select from vehicle\Europe\Sebring\20	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Europe\Town and	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town and	Add remote,
CHRYSLER\Select from vehicle\Europe\Town and	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town and	Sync smart function,
CHRYSLER\Select from vehicle\Europe\Voyager\20	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Voyager\20	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Grand	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Grand	Add remote,
CHRYSLER\Select from vehicle\Europe\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Grand	Add remote,
CHRYSLER\Select from vehicle\Europe\Grand	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Europe\Voyager\20	Add remote,

CHRYSLER>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\South	Read PIN code,Add smart key,Delete smart key,
CHRYSLER>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Add remote,
CHRYSLER>Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Add remote,
CHRYSLER>Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Add remote,
CHRYSLER>Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Add remote,
CHRYSLER>Select from vehicle\South	Add key,Delete key,Key count,

CHRYSLER

CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,
CHRYSLER\Select from vehicle\South America\PT	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South America\PT	Add remote,
CHRYSLER\Select from vehicle\South America\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,
CHRYSLER\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Sync smart function,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Add key,Delete key,

CHRYSLER>Select from vehicle\South	Add key,Delete key,
CHRYSLER>Select from vehicle\South	Add remote,
CHRYSLER>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\South	Sync smart function,
CHRYSLER>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Middle	Read PIN code,Add smart key,Delete smart key,
CHRYSLER>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete key,Key
CHRYSLER>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,

CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,
CHRYSLER>Select from vehicle\Middle East\PT	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle East\PT	Add remote,
CHRYSLER>Select from vehicle\Middle East\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add remote,
CHRYSLER>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Middle East\Town	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle East\Town	Add remote,
CHRYSLER>Select from vehicle\Middle East\Town	Add key,Delete key,

CHRYSLER>Select from vehicle\Middle East\Town	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle East\Town	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle East\Town	Sync smart function,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle	Add key,Delete key,
CHRYSLER>Select from vehicle\Middle East\Grand	Add key,Delete key,
CHRYSLER>Select from vehicle\Middle East\Grand	Add remote,
CHRYSLER>Select from vehicle\Middle East\Grand	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Middle East\Grand	Sync smart function,
CHRYSLER>Select from vehicle\Australia\200\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Australia\200\2015-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER>Select from vehicle\Australia\300\2008\	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Australia\300\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Australia\300\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Australia\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\Australia\300C\200	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Australia\300C\200	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Australia\300C\201	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Australia\300C\201	Add smart key,Delete smart key,Read PIN code,

CHRYSLER\Select from vehicle\Australia\300M\199	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300M\199	Add remote,
CHRYSLER\Select from vehicle\Australia\300M\200	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300M\200	Add remote,
CHRYSLER\Select from vehicle\Australia\Concorde\	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Concorde\	Add remote,
CHRYSLER\Select from vehicle\Australia\Concorde\	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Concorde\	Add remote,
CHRYSLER\Select from vehicle\Australia\LHS\1999	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\LHS\1999	Add remote,
CHRYSLER\Select from vehicle\Australia\Neon\200	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Neon\200	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Neon\200	Add remote,
CHRYSLER\Select from vehicle\Australia\Pacifica\2	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\PT	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\PT	Add remote,
CHRYSLER\Select from vehicle\Australia\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Australia\Sebring\2	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Sebring\2	Add remote,

CHRYSLER\Select from vehicle\Australia\Sebring\2	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Australia\Town and	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town and	Add remote,
CHRYSLER\Select from vehicle\Australia\Town and	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town and	Sync smart function,
CHRYSLER\Select from vehicle\Australia\Voyager\2	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Voyager\2	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Grand	Add remote,
CHRYSLER\Select from vehicle\Australia\Grand	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Africa\200\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Africa\200\2015-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Africa\300\2008\Im	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Africa\300\2011-	Add smart key,Delete smart key,Read PIN code,

CHRYSLER\Select from vehicle\Africa\300C\2008\	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300C\2009-	Read pin code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300C\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER\Select from vehicle\Africa\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300M\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300M\1999-	Add remote,
CHRYSLER\Select from vehicle\Africa\300M\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300M\2001-	Add remote,
CHRYSLER\Select from vehicle\Africa\Concorde\19	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Concorde\19	Add remote,
CHRYSLER\Select from vehicle\Africa\Concorde\20	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Concorde\20	Add remote,
CHRYSLER\Select from vehicle\Africa\LHS\1999-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\LHS\1999-	Add remote,
CHRYSLER\Select from vehicle\Africa\Neon\2000\	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Neon\2001-	Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\Africa\Pacifica\200	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\PT	Add key,Delete key,Key count,

CHRYSLER>Select from vehicle\Africa\PT	Add remote,
CHRYSLER>Select from vehicle\Africa\PT	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Africa\Sebring\2001	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Africa\Sebring\2001	Add remote,
CHRYSLER>Select from vehicle\Africa\Sebring\2007	Read PIN code,Add new key,Delete key,Key count,Add old
CHRYSLER>Select from vehicle\Africa\Town and	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Africa\Town and	Add remote,
CHRYSLER>Select from vehicle\Africa\Town and	Add key,Delete key,
CHRYSLER>Select from vehicle\Africa\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Africa\Town and	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Africa\Town and	Sync smart function,
CHRYSLER>Select from vehicle\Africa\Voyager\200	Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Africa\Voyager\200	Add key,Delete key,
CHRYSLER>Select from vehicle\Africa\Grand	Add key,Delete key,
CHRYSLER>Select from vehicle\Africa\Grand	Add remote,
CHRYSLER>Select from vehicle\Africa\Grand	Read pin code,Add key,Delete key,Key count,
CHRYSLER>Select from vehicle\Africa\Grand	Sync smart function,
CHRYSLER>Select from vehicle\USA\Freemont\201	Add smart key,Delete smart key,Read PIN code,
CHRYSLER>Select from vehicle\USA\300\2014-	Add smart key,Delete smart key,Key count,Read PIN code,

CHRYSLER\Select from vehicle\USA\300C\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300C\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300C\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300C\201	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300C\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
CHRYSLER\Select from type\Immobilizer\Type	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\USA\Cirrus\2007-	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\USA\Neon\2005-	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Asia\Cirrus\2007-	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Asia\Neon\2005-	Key count,Program key,Delete key,Program remote,
CHRYSLER\Select from vehicle\Europe\Cirrus\2007	Key count,Program key,Delete key,Program remote,

	CHRYSLER\Select from vehicle\Europe\Neon\2005-	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\South	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\South	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Australia\Cirrus\200	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Australia\Neon\200	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Middle	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Middle	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Africa\Cirrus\2007-	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Africa\Neon\2005-	Key count,Program key,Delete key,Program remote,
	CHRYSLER\Select from vehicle\Asia\200\2011-	Read PIN code,Add new key,Delete key,Key count,Add old
	CHRYSLER\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
	CHRYSLER\Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,
	CHRYSLER\Select from type\Smart key\Type	Read pin code,Add key,Delete key,
	CHRYSLER\Select from type\Smart key\Type	Read pin code,Add key,Delete key,
FERRARI	FERRARI\458\Immobilizer	Backup immo data,Make dealer key,Read PIN
	FERRARI\F12\Immobilizer	Backup immo data,Make dealer key,Read PIN
	FERRARI\F149\Immobilizer	Backup immo data,Make dealer key,Read PIN
	LUXGEN\Select from vehicle\Big 7 SUV\Smart	Program smart key,PIN initialization,Program
	LUXGEN\Select from vehicle\5 SEDAN\Smart	Program smart key,PIN initialization,Program

LUXGEN

LUXGEN\Select from vehicle\Big 7 MPV\Smart	Program smart key,PIN initialization,Program
LUXGEN\Select from vehicle\MASTER	Program smart key,PIN initialization,Program
LUXGEN\Select from vehicle\U6 SUV\Smart key	Program smart key,PIN initialization,Program
LUXGEN\Select from vehicle\Big 7	Program smart key,PIN initialization,Program
LUXGEN\Select from vehicle\Big 7	Program smart key,PIN initialization,Program
LUXGEN\Select from vehicle\5	Program smart key,PIN initialization,Program
BUICK\Excele\2014\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Excele\2014\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
BUICK\Envision\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Encore\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\GL8\2011-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Lacrosse\2010-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Regal\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Verano\2015-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
BUICK\Encore\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
BUICK\GL8\2011-2016\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault
BUICK\Lacrosse\2010-2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
BUICK\Regal\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
BUICK\Verano\2015-\Smart key	All smart key lost,Add smart key,Read key count,Clear fault

BUICK

BUICK\Excele\2015-\Immobilizer	All key lost,Add key,
BUICK\Excele\2015-\Smart key	All smart key lost,Add smart key,
BUICK\Excele\2013-2017\Immobilizer\Type 1	Program key,Delete key,Read key count,
BUICK\Lacrosse\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
BUICK\Allure\2005-2008\Immobilizer	Lost all key,Read key count,
BUICK\Enclave\Immobilizer	Lost all key,Read key count,
BUICK\Lucerne\Immobilizer	Lost all key,Read key count,
BUICK\Park Avenue\2005-\Immobilizer	Lost all key,Read key count,
BUICK\Terraza\Immobilizer	Lost all key,Read key count,
BUICK\Excele\2012\Immobilizer	Program key,Turn to neutral mode,
BUICK\GL8\2004-2010\Immobilizer	All key lost,
BUICK\Excele\2012\Remote\Type 1	Program remote,
BUICK\Excele\2013-2017\Remote	Program remote,Read remote count,
BUICK\Enclave\Remote	Program remote,Delete remote,
BUICK\Park Avenue\Remote	Program remote,Delete remote,
BUICK\Lacrosse\Remote	Program remote,
BUICK\Century\Remote	Program remote,
BUICK\Regal\2016\Remote	Program remote,
BUICK\FirstLand\Remote	Program remote,

BUICK\Read PIN code	Read pin code type1,Read pin code type2,Read pin code
BUICK\Royaum\Immobilizer	Program key,
BUICK\GL8\2017-\Smart key\Type 1	Read key count,All smart key lost,Add smart key,
BUICK\Envision\Smart key\2017	Add smart key,All smart key lost,Read smart key count,
BUICK\Lacrosse\2005-2009\Immobilizer	All key lost,
BUICK\Excelle\2012\Remote\Type 2	Remote,
BUICK\Excelle\2013-2017\Immobilizer\Type 2	All key lost,Add key,
BUICK\GL8\2011-2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
BUICK\Envision\Smart key\2017-	All smart key lost,Add smart key,Read smart key count,Clear
BUICK\Excelle\2017-\Immobilizer	Read key count,All key lost,Add key,
BUICK\Regal\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
BUICK\GL8\2017-\Smart key\Type 2(2.5L)	All smart key lost,Add smart key,Read smart key count,Clear
BUICK\Verano\2017-\Immobilizer	All key lost,Clear fault code,Read key count,
BUICK\Verano\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,
BUICK\Park Avenue\2004\Immobilizer	All key lost,
BUICK\Lesabre\2000-2005\Immobilizer	All key lost,
BUICK\Rendezvous\2002-2004\Immobilizer	All key lost,
BUICK\Sail\Immobilizer	Clear fault code,Program key,Delete key,
CADILLAC\ATS\Immobilizer	All key lost,Add key,Read key count,Clear fault code,

CADILLAC

CADILLAC\ATSL\2015-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\SRX\2010-2014\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\SRX\2015-\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\XTS\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\ATS\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CADILLAC\ATSL\2015-2016\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault
CADILLAC\SRX\2010-2014\Smart key\Type 1	All smart key lost,Add smart key,Read key count,Clear fault
CADILLAC\SRX\2015-\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CADILLAC\CT6\2016\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\CTS\2013-\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\Escalade\2017\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\CT6\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
CADILLAC\XT5\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
CADILLAC\CTS\2008-2012\One-click\Immobilizer	Lost all key,Read key count,
CADILLAC\DTS\2006-2013\Immobilizer	Lost all key,Read key count,
CADILLAC\Escalade\2017\Immobilizer	Lost all key,Read key count,
CADILLAC\SRX\2004-2009\Immobilizer	Lost all key,Read key count,
CADILLAC\SLS\2005-2009\Immobilizer	All key lost,
CADILLAC\SLS\2013\Immobilizer	All key lost,

CADILLAC\SLS\2009- \Immobilizer	All key lost,
CADILLAC\Escalade\ 2017\Remote	Program remote,Delete remote,
CADILLAC\CTS\Remote	Program remote,
CADILLAC\Read PIN code	Read pin code type1,Read pin code type2,Read pin code
CADILLAC\CTS\2003- 2007\Immobilizer	All key lost,
CADILLAC\CTS\2008- 2012\Knob type\Smart key	All key lost,
CADILLAC\ATSL\2017\Sm art key	All smart key lost,Add smart key,Read smart key count,Clear
CADILLAC\XTS\2016- \Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\XTS\ 2015\Smart key	Add smart key,All smart key lost,Read smart key count,
CADILLAC\SRX\2010- 2014\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
CADILLAC\ATSL\2015- 2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key count,
CADILLAC\XTS\2018\Sma rt key	All smart key lost,Add smart key,Read smart key count,Clear
CADILLAC\Catera\1997- 2002\Immobilizer	Clear fault code,Program key,Delete key,
CADILLAC\CTS\2008- 2013(Prox)\Immobilizer	All key lost,
CADILLAC\Deville\ 2003\Immobilizer	All key lost,
CADILLAC\Deville STS\Immobilizer	All key lost,
CADILLAC\STS\2007- 2012\Immobilizer	All key lost,
CADILLAC\XLR\2004- 2009\Immobilizer	All key lost,
GMC\Acadia\IMMO\2007- 2014\Immobilizer	Lost all key,Read key count,

GMC

GMC\Savana\IMMO\2008-2013\Immobilizer	Lost all key,Read key count,
GMC\Sierra\IMMO\2007-2013\Immobilizer	Lost all key,Read key count,
GMC\Yukon\IMMO\2007-2013\Immobilizer	Lost all key,Read key count,
GMC\Canyon\IMMO\2008-2012\Immobilizer	All key lost,
GMC\Canyon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra\IMMO\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
GMC\Sierra 1500\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra 2500\IMMO\2014-	All key lost,Add key,Read key count,Clear fault code,
GMC\Sierra 3500\IMMO\2014-	All key lost,Add key,Read key count,Clear fault code,
GMC\Yukon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Yukon\IMMO\2015\Smart key	Add smart key,All smart key lost,Read smart key count,
GMC\Terrain\2010-2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
GMC\Acadia\Remote\2007-2014	Program remote>Delete remote,
GMC\Savana\Remote\2008-2013	Program remote>Delete remote,
GMC\Yukon\Remote\2007-2013	Program remote>Delete remote,
GMC\Sierra\Remote\2007-2013	Program remote>Delete remote,
GMC\Yukon\Remote\2015	Add remote,Clear fault code,
GMC\Sierra 1500\Remote\2014-2015	Add remote,Clear fault code,

	GMC\Sierra 2500\Remote\2014-	Add remote,Clear fault code,
	GMC\Sierra 3500\Remote\2014-	Add remote,Clear fault code,
	BAIC\Immobilizer\D50	Detect key count,Add key,Delete key,
	BAIC\Immobilizer\X25	Program key,Delete key,
	BAIC\Immobilizer\X35	Program key,Delete key,
	BAIC\Immobilizer\X55	Program key,Delete key,
	BAIC\Immobilizer\X65	Program key,Delete key,
	BAIC\Immobilizer\E series	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\D20	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\BJ40	Program key,
	BAIC\Immobilizer\BJ80	Program key,
	BAIC\Immobilizer\S3	Program key,Delete key,Reset PIN code,Immo resetting(all key
	BAIC\Smart key\BJ80	Program key,
	BAIC\Smart key\CC(C60F)	Program key,
	BAIC\Smart key\D280	Program key,
	BAIC\Smart key\D50(C50E)	Program key,
	BAIC\Smart key\D60	Program key,
	BAIC\Smart key\D61	Program key,
BAIC\Smart key\D70(C70G)	Program key,	

BAIC

BAIC\Smart key\D80(C80G)	Program key,
BAIC\Smart key\X55	Program key,
BAIC\Smart key\X65	Program key,
BAIC\Immobilizer\S50	Program key,Delete key,
BAIC\Immobilizer\S3L	Program key,Delete key,Reset PIN code,Immo resetting(all key
BAIC\Immobilizer\S2	Program key,Delete key,Reset PIN code,Immo resetting(all key
BAIC\Immobilizer\H2	Program key,Delete key,Reset PIN code,Immo resetting(all key
BAIC\Immobilizer\H6	Program key,Delete key,Reset PIN code,Immo resetting(all key
BAIC\Smart key\BJ40	Program key,
BAIC\Smart key\H3	Program smart key,Program ESCL,
BAIC\Smart key\H3F	Program smart key,Program ESCL,
BAIC\Smart key\S3L	Program smart key,
BAIC\Smart key\S6	Program smart key,
BAIC\Smart key\H2	Program smart key,
BAIC\Remote\BJ40L	Program remote,
BAIC\Remote\S6	Program remote,
BAIC\Immobilizer\BJ40L\T ype 1	Read key count,Program key,Delete key,
BAIC\Immobilizer\EX200	Program key,Delete key,
BAIC\Immobilizer\EX260	Program key,Delete key,

	BAIC\Immobilizer\EU220	Add key,Delete key,
	BAIC\Immobilizer\EU260	Add key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV160	Program key,Delete key,
	BAIC\Immobilizer\EV200	Program key,Delete key,
	BAIC\Smart key\S50	Program key,
	BAIC\Smart key\S5	Program smart key,Program ESCL,
	BAIC\Smart key\D230	Program key,
	BAIC\Immobilizer\BJ20	Program key,
	BAIC\Smart key\BJ20	Program key,
BAOJUN	BAOJUN\Immobilizer\560	Check key count,Program key,Delete key,Reset engine
	BAOJUN\Immobilizer\330	Check key count,Program key,Delete key,
	BAOJUN\Smart key\560	Add key,All key lost,
	BAOJUN\Immobilizer\310	Check key count,Program key,Delete key,Reset engine
	BAOJUN\Immobilizer\730	Check key count,Program key,Delete key,Reset engine
	BAOJUN\Immobilizer\630	Read key count,Program key,Delete key,Program remote,
	BAOJUN\Immobilizer\610	Read key count,Program key,Delete key,Program remote,
	BAOJUN\Immobilizer\510	Check key count,Program key,Delete key,Reset engine

	BAOJUN\Smart key\730	Add key,All key lost,
	BAOJUN\Smart key\510	Add key,All key lost,
	BAOJUN\Smart key\310 Wagon	Add key,All key lost,
	BAOJUN\Immobilizer\530	Check key count,Program key,Delete key,Reset engine
YEMA AUTO	YEMA AUTO\T70\IMMO	Add key,Delete key,Replace ECM,Replace IMMO,Replace
	YEMA AUTO\T70\PEPS	Program smart key,Program EMS(Delphi),Program
	YEMA AUTO\T70\BCM	Program remote,Read remote count,
QOROS	QOROS\Smart key	Program 1 smart key,Program 2 smart keys,
	BYD\Smart key\Surui	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\Sirui	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\Qin	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\Tang	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\S7	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\G5	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\G6	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\L3	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\F3	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\S6	Read key info.,Clear & program working key,Program smart
	BYD\Smart key\VA	Read key info.,Clear & program working key,Program smart

BYD

BYD\Smart key\E6A	Read key info.,Clear & program working key,Program smart
BYD\Smart key\E6B	Read key info.,Clear & program working key,Program smart
BYD\Smart key\E6Y	Read key info.,Clear & program working key,Program smart
BYD\Smart key\F0	Read key info.,Clear & program working key,Program smart
BYD\Smart key\G3	Read key info.,Clear & program working key,Program smart
BYD\Smart key\M6	Read key info.,Clear & program working key,Program smart
BYD\Smart key\F3R	Read key info.,Clear & program working key,Program smart
BYD\Smart key\Song	Read key info.,Clear & program working key,Program smart
BYD\Smart key\Qin EV	Read key info.,Clear & program working key,Program smart
BYD\Smart key\New F3	Read key info.,Clear & program working key,Program smart
BYD\Smart key\Yuan	Read key info.,Clear & program working key,Program smart
BYD\Smart key\E5	Read key info.,Clear & program working key,Program smart
BYD\Smart key\F3CK	Read key info.,Clear & program working key,Program smart
BYD\Smart key\F6	Read key info.,Clear & program working key,Program smart
BYD\Smart key\G3R	Read key info.,Clear & program working key,Program smart
BYD\Smart key\K9A	Read key info.,Clear & program working key,Program smart
BYD\Smart key\K9B	Read key info.,Clear & program working key,Program smart
BYD\Smart key\S8	Read key info.,Clear & program working key,Program smart
JAC\IMMO\Refine S3\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete

JAC\IMMO\Pinnacle\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Tongyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Heyue RS\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Heyue sedan\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Yueyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Sunray\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Refine S3\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Tongyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue RS\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue sedan\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Yueyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue A30\MT\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Sunray\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Refine S5\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Heyue A30\CVT\Smart PEPS	Read key count,ESCL learning,Add key,Program engine
JAC\Remote\16 PIN\RS\Type 1	Program remote,
JAC\Remote\16 PIN\Tongyue	Program remote,
JAC\Remote\16 PIN\Binyue	Program remote,
JAC\Remote\16 PIN\Sunray	Program remote,

JAC

JAC\Remote\16 PIN\Three-ring remote	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S2	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S3	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine M5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\RS A30(CVT)	Program remote,Delete remote,Remote count,
JAC\IMMO\Refine S5\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo
JAC\Remote\16 PIN\Refine M3	Program remote,
JAC\Remote\16 PIN\IEV5(EV)	Program remote,
JAC\IMMO\Refine S2\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Refine S2\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue M3\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue A30\CVT\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\Remote\10 PIN\Type 1	Program remote,
JAC\Remote\10 PIN\Type 2	Program remote,
JAC\IMMO\Refine S3\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine A60\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine S2\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo

JAC\IMMO\Refine S2 mini\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine S3\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine S5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Refine S5\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Refine S7\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine S7\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine M4\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Refine M5\PEPS	Program ESCL,Add old key,Add new key,Delete key,Reset immo
JAC\IMMO\Sunray\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo
JAC\Remote\16 PIN\Refine M4	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S2 mini	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S7	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\6S EV	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\RS\Type 2	Program remote,
ROEWE\IMMO\350\2013-	Add key,Delete key,Check lock time,
ROEWE\IMMO\360\Without smart	Add key,Delete key,Check lock time,
ROEWE\IMMO\W5\2013-	Add key,Delete key,Check lock time,
ROEWE\IMMO\550\2012	Delete key,Add key,
ROEWE\IMMO\RX5\With smart	Delete key,Add key,Read key count,

ROEWE

ROEWE\IMMO\RX5\Without smart	Delete key,Add key,Read key count,
ROEWE\Remote\360	Add remote,Delete remote,
ROEWE\Remote\750	Enable remote,Disable remote,Program remote,Clear
ROEWE\IMMO\ERX5\With smart	Delete key,Add key,Read key count,
ROEWE\IMMO\950\Without smart\Type 1	All key lost,Read key count,Clear fault code,Add key,
ROEWE\IMMO\950\With smart	All smart key lost,Read smart key count,Clear fault code,Add smart
ROEWE\IMMO\350\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\W5\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\550\2013-	Add key,Delete key,The rest unlock time,
ROEWE\IMMO\i6\With smart	Delete key,Read key count,Add key,
ROEWE\Remote\W5	Program remote,
ROEWE\IMMO\360\With smart\2017	Add key,Delete key,
ROEWE\IMMO\950\Without smart\Type 2	All key lost,Add key,Read key count,Clear fault code,
ROEWE\Read PIN code\550\2013-	Read PIN code,
ROEWE\IMMO\750(new)\2012	Delete key,Add key,
ROEWE\IMMO\750(new)\2013-	Add key,Delete key,The rest unlock time,
ROEWE\IMMO\ERX5\Without smart	Delete key,Add key,Read key count,
ROEWE\IMMO\E50\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\E50\2013-	Add key,Delete key,Check lock time,

	ROEWE\Read PIN code\950\2012-	Read pin code type6 (via BCM),
	ROEWE\IMMO\RX3\Without smart	Add key,Delete key,Read key count,
	JEEP\Select from vehicle\USA\Cherokee\201	Read pin code,Add key,Delete key,
	JEEP\Select from vehicle\USA\Cherokee\201	Read pin code,Add key,Delete key,
	JEEP\Select from vehicle\USA\Grand	Add smart key,Delete smart key,Key count,Read PIN code,
	JEEP\Select from vehicle\USA\Compass\200	Read PIN code,Add new key,Delete key,Key count,Add old
	JEEP\Select from vehicle\USA\Renegade\20	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Asia\Grand	Read PIN code,Synch smart key,Add key,Delete key,
	JEEP\Select from type\IMMO-Fobik	Read PIN code,Synch smart key,Add key,Delete key,
	JEEP\Select from type\Smart key\Type 1	Add smart key,Delete smart key,Read PIN code,
	JEEP\Select from type\Smart key\Type 2	Add smart key,Delete smart key,Key count,Read PIN code,
	JEEP\Select from type\Immobilizer\Type 1	Add new key,Add old key,Add remote,Detect key count,Delete
	JEEP\Select from type\Immobilizer\Type 2	Read PIN code,Add new key,Delete key,Key count,Add old
	JEEP\Select from type\Immobilizer\Type 3	Read pin code,Add key,Delete key,Key count,
	JEEP\Select from type\Immobilizer\Type 4	Read pin code,Add key,Delete key,Key count,
	JEEP\Select from type\Immobilizer\Type 6	Add key,Delete key,Key count,
	JEEP\Select from type\Remote\Type 1(VPW)	Add remote,
	JEEP\Select from type\Remote\Type 2(VPW)	Add remote,
JEEP\Select from type\Remote\Type 3(VPW)	Add remote,	

JEEP>Select from type\Remote\Type 4 (CAN)	Add remote,Read pin code,
JEEP>Select from type\Remote\Type 5(VPW)	Add remote,Delete remote,
JEEP>Select from type\Remote\Type 6(VPW)	Add remote,
JEEP>Select from type\Remote\Type 7(VPW)	Add remote,
JEEP>Select from type\Remote\Type 8(VPW)	Add remote,
JEEP>Select from vehicle\Asia\Wrangler\2007	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\USA\Commander\2	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Commander\2	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Grand	Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Grand	Add remote,
JEEP>Select from vehicle\USA\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Laredo\1999-	Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Laredo\2008-	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Liberty\2002-	Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Liberty\2002-	Add remote,
JEEP>Select from vehicle\USA\Liberty\2005-	Add key,Delete key,
JEEP>Select from vehicle\USA\Liberty\2008-	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\USA\Patriot\2007-	Read PIN code,Add new key,Delete key,Key count,Add old

JEEP>Select from vehicle\USA\Rubicon\2011\	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\USA\Wrangler\200	Add key,Delete key,Key count,
JEEP>Select from vehicle\USA\Wrangler\200	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
JEEP>Select from type\Smart key\Type	Sync smart function,
JEEP>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
JEEP>Select from type\Immobilizer\Type	Add key,Delete key,
JEEP>Select from vehicle\Asia\Commander\2	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Commander\2	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Grand	Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Grand	Add remote,
JEEP>Select from vehicle\Asia\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Laredo\1999-	Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Laredo\2008-	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Liberty\2002-	Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Liberty\2002-	Add remote,
JEEP>Select from vehicle\Asia\Liberty\2005-	Add key,Delete key,
JEEP>Select from vehicle\Asia\Liberty\2008-	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Asia\Patriot\2007-	Read PIN code,Add new key,Delete key,Key count,Add old

JEEP>Select from vehicle\Asia\Rubicon\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Asia\Wrangler\2001	Add key,Delete key,Key count,
JEEP>Select from vehicle\Asia\Cherokee\201	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Asia\Cherokee\201	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Asia\Grand	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP>Select from vehicle\Asia\Compass\200	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Asia\Renegade\201	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Europe\Commande	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Commande	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Grand	Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Grand	Add remote,
JEEP>Select from vehicle\Europe\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Laredo\199	Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Laredo\200	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Liberty\200	Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Liberty\200	Add remote,
JEEP>Select from vehicle\Europe\Liberty\200	Add key,Delete key,
JEEP>Select from vehicle\Europe\Liberty\200	Read PIN code,Add new key,Delete key,Key count,Add old

JEEP>Select from vehicle\Europe\Patriot\200	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Europe\Rubicon\20	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Europe\Wrangler\2	Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Wrangler\2	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Europe\Cherokee\2	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Europe\Cherokee\2	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Europe\Grand	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP>Select from vehicle\Europe\Compass\2	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Europe\Renegade\	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Add remote,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Add remote,

JEEP

JEEP>Select from vehicle\South	Add key,Delete key,
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\South	Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\South	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\South	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Australia\Command	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Command	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Grand	Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Grand	Add remote,
JEEP>Select from vehicle\Australia\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Laredo\19	Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Laredo\20	Read pin code,Add key,Delete key,Key count,

JEEP>Select from vehicle\Australia\Liberty\20	Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Liberty\20	Add remote,
JEEP>Select from vehicle\Australia\Liberty\20	Add key,Delete key,
JEEP>Select from vehicle\Australia\Liberty\20	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Australia\Patriot\20	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Australia\Rubicon\2	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Australia\Wrangler\	Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Wrangler\	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Australia\Cherokee\	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Australia\Cherokee\	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Australia\Grand	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP>Select from vehicle\Australia\Compass\	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Australia\Renegade	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle East\Grand	Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle East\Grand	Add remote,
JEEP>Select from vehicle\Middle East\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle East\Grand	Read pin code,Add key,Delete key,Key count,

JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Add remote,
JEEP>Select from vehicle\Middle	Add key,Delete key,
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Middle	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Middle	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Middle East\Grand	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Commander\	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Commander\	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Grand	Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Grand	Add remote,

JEEP>Select from vehicle\Africa\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Grand	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Laredo\1999-	Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Laredo\2008-	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Liberty\2002-	Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Liberty\2002-	Add remote,
JEEP>Select from vehicle\Africa\Liberty\2005-	Add key,Delete key,
JEEP>Select from vehicle\Africa\Liberty\2008-	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Africa\Patriot\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Africa\Rubicon\201	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Africa\Wrangler\20	Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Wrangler\20	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Africa\Cherokee\20	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Cherokee\20	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Grand	Add smart key,Delete smart key,Key count,Read PIN code,
JEEP>Select from vehicle\Africa\Compass\20	Read PIN code,Add new key,Delete key,Key count,Add old
JEEP>Select from vehicle\Africa\Renegade\2	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Europe\Cherokee\2	Add key,Delete key,
JEEP>Select from vehicle\USA\Cherokee\-	Read pin code,Add key,Delete key,Key count,

JEEP>Select from vehicle\Asia\Cherokee\-	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Cherokee\	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Cherokee\-	Read pin code,Add key,Delete key,Key count,
JEEP>Select from type\Immobilizer\Type	Key count,Program key,Delete key,Program remote,
JEEP>Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
JEEP>Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,
JEEP>Select from type\Smart key\Type	Read pin code,Add key,Delete key,
JEEP>Select from type\Smart key\Type	Read pin code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Grand	Sync smart function,
JEEP>Select from vehicle\Australia\Grand	Sync smart function,
JEEP>Select from vehicle\South	Sync smart function,
JEEP>Select from vehicle\Middle East\Grand	Sync smart function,
JEEP>Select from vehicle\Europe\Grand	Sync smart function,
JEEP>Select from vehicle\USA\Grand	Sync smart function,
ZOTYE \A1\IMMO\Shanghai	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE \Z100\IMMO\Shanghai	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE \Z300\IMMO\Shanghai	Clear fault code,Reset PIN code,Program key,Reset

ZOTYE \Langyue\IMMO\Shanghai	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE \Langjun\IMMO\Shanghai	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE \Z300\IMMO\Lianchuang	Clear fault code,Read key count,Add key,Delete key,Detect
ZOTYE \Domy X5\Remote	Remote count,Program remote,Delete remote,
ZOTYE \SR7\Remote	Remote count,Program remote,Delete remote,
ZOTYE \T600\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z500\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z700\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z100\Remote	Delete remote,Program remote,
ZOTYE \Langyue\Remote	Delete remote,Program remote,
ZOTYE \Langjun\Remote	Delete remote,Program remote,
ZOTYE \Domy X5\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE \T600\PEPS\Naen(Magota	Program full system,Program full system(w/o ESCL),Program
ZOTYE \SR7\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE \Z500\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE \Z700\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE \5008\PEPS	Program remote A,Program remote B,Program smart key
ZOTYE \T200\PEPS	Program remote A,Program remote B,Program smart key
ZOTYE \Langlang\PEPS	Program remote A,Program remote B,Program smart key

ZOTYE

ZOTYE \Z200\PEPS	Program remote A,Program remote B,Program smart key
ZOTYE \T600\PEPS\Huofu(Hyund	Program new key,Program old key,Program PEPS,Program
ZOTYE \Z300\Remote\Type 1	Program remote,Delete remote,
ZOTYE \Z300\Remote\Type 2	Remote count,Program remote,Delete remote,
ZOTYE \2008\PEPS	Program remote A,Program remote B,Program smart key
ZOTYE \T600\IMMO	Program key,Delete key,Immobilization,Program
ZOTYE \SR9\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE\E30\Remote	Remote count,Program remote,Delete remote,
ZOTYE\X7\Remote	Remote count,Program remote,Delete remote,
ZOTYE\X7\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE\SR9\Remote	Remote count,Program remote,Delete remote,
ZOTYE\T300\Atech BCM	Remote count,Program remote,Delete remote,
ZOTYE\T300\PEPS	Program full system,Program full system(w/o ESCL),Program
ZOTYE\T300\BCM	Remote count,Program remote,Delete remote,
ZOTYE\T700\PEPS	Program whole system,Replace BCM,Replace engine
ZOTYE\E200\PEPS	Program smart key,Delete smart key,Setup PSN,Setup VIN,Write
ZOTYE\Z360\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Z360\IMMO\Lianch uang IMMO	Clear fault code,Read key count,Add key,Delete key,Detect
ZOTYE\Z360\Remote\Type 1	Program remote,Delete remote,

	ZOTYE\Z360\Remote\Type 2	Remote count,Program remote,Delete remote,
	ZOTYE\Z360\PEPS	Program full system,Program full system(w/o ESCL),Program
	ZOTYE\Z560\Remote	Remote count,Program remote,Delete remote,
	ZOTYE\Z560\PEPS	Program full system,Program full system(w/o ESCL),Program
	ZOTYE\Z300\PEPS	Program full system,Program full system(w/o ESCL),Program
	ZOTYE\T500\Remote	Remote count,Program remote,Delete remote,
	ZOTYE\T500\PEPS	Program full system,Program full system(w/o ESCL),Program
MERCEDES-BENZ	MERCEDES-BENZ\Key system\System 1	Disable key,
	MERCEDES-BENZ\Tail box controlling\C	Trunk control,
	MERCEDES-BENZ\Tail box controlling\CLK	Trunk control,
	MERCEDES-BENZ\Tail box controlling\E	Trunk control,
	MERCEDES-BENZ\Tail box controlling\S	Trunk control,
	Mercedes-Benz\Remote\163-ML	Remote,Reset ECU,
	Mercedes-Benz\Tail box controlling\E	Trunk control,
FAW RED FLAG	FAW RED FLAG\Select from type\PEPS\Type 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG\Select from vehicle\HQ300\Type 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG\Select from type\PEPS\Type 2	Delete smart key,Add smart key,
	FAW RED FLAG\Select from vehicle\H7\Type 2	Delete smart key,Add smart key,
	FAW red flag\Select from type\IMMO \VW IMMO	Program key,

	FAW red flag>Select from vehicle\Ming Shi\VW IMMO	Program key,
JMC	JMC\S350\PEPS	Program key,
	JMC\S330\PEPS	Program key,
ZHENGZHOU MAZDA	ZHENGZHOU MAZDA\IMMO\Lianchuang	Write immo VIN code,Write engine VIN code,Engine ECU
ISUZU	ISUZU\D-MAX\Key\Type 1 (46 chip)	Program key,Delete key,Clear fault code,Clear fault code,Reset
	ISUZU\MU-7\Immobilizer\46 chip	Program key,Delete key,Clear fault code,Clear fault code,Reset
	ISUZU\D-MAX\Key\Type 2	Passive access control programming and start system
	ISUZU\MU-X\Smart key\Type 1	Passive access control programming and start system
	ISUZU\D-Max\Smart key	Add smart key,Delete smart key,
	ISUZU\MU-X\Smart key\Type 2	Add smart key,Delete smart key,
	ISUZU\D-MAX\Remote	Program remote,Delete remote,
	ISUZU\TF\IMMO 2008-2012	Add key,Delete key,Clear fault code,
	ISUZU\D-Max\Immobilizer\Type 3(48	Program key,Delete key,Read key data,Clear fault code,
	ISUZU\MU-7\Immobilizer\48 chip	Program key,Delete key,Read key data,Clear fault code,
	ISUZU\MU-X\Remote	Program remote,Delete remote,
	ISUZU\Rodeo\Immobilizer\46 chip	Program key,Delete key,Clear fault code,Reset IMMO,Reset
	ISUZU\Rodeo\Immobilizer\48 chip	Program key,Delete key,Read key data,Clear fault code,
	IVECO\Power Daily\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Exceed\Immobilizer	Learn key,Write VIN,Replace IMMO,

IVECO	IVECO\Power Daily\Remote	Learn remote,Write VIN,
	IVECO\Exceed\Remote	Learn remote,Write VIN,
	IVECO\Daily\2012-	Key info,Program key,Read PIN ocde,Make dealer key(46 chip),
	IVECO\Daily\2007-2012	Key count,Program key,Remote count,Program remote,Read PIN
	IVECO\Eurocargo\2007-2012	Key count,Program key,Remote count,Program remote,Read PIN
WULING MOTORS	WULING MOTORS\S1\Immobilizer	Check key count,Program key,Delete key,Reset engine
	WULING MOTORS\S3\Immobilizer	Check key count,Program key,Delete key,Reset engine
SOUEAST MOTORS	SOUEAST MOTORS\DX7\PEPS	Program key,Read pin code,
	SOUEAST MOTORS\DX3\PEPS	Read pin code,Program key,
	SOUEAST MOTORS\V6\PEPS	All key lost,Learning status,Clear PEPS,Clear EMS>Delete
	SOUEAST MOTORS\V3\Industrial	Immobilization,Program engine,Reset engine,Reset
	SOUEAST MOTORS\GALANT\Mitsubi	Clear fault code,Read key count,Program key,Reset immo
	SOUEAST MOTORS\SOVERAN\Mits	Clear fault code,Read key count,Program key,Reset immo
	SOUEAST MOTORS\DX3\Mechanical	Program key,Read PIN code,
	SOUEAST MOTORS\DX3\Mechanical	Program remote,
	TIANJIN FAWIMMO\Vela(MT34	Reset immobox(4C chip),
	TIANJIN FAWIMMO\Xenia S80	Add key,
	TIANJIN FAWIMMO\N5	Add key,
	TIANJIN FAWIMMO\N5(new)	Add key,

TIANJIN FAW	TIANJIN FAW\IMMO\N7	Add key,
	TIANJIN FAW\IMMO\D60	Add key,
	TIANJIN FAW\IMMO\Vizhi V5\ECU IMMO initialization	Type 1,Type 2,Type 3,
	TIANJIN FAW\PEPS\D60	Program ESCL,Program PEPS,Delete smart key,Read key
	TIANJIN FAW\Remote\D60	Program remote,Read remote count,Delete remote,
	TIANJIN FAW\IMMO\Vizhi V5\IMMO	Add key,
	TIANJIN FAW\IMMO\Vizhi(MT34	Reset immobox(4C chip),
	TIANJIN FAW\IMMO\Vizhi V5\Replace ignition coil	Replace immobilizer coil to program key,
	TIANJIN FAW\IMMO\Vela(MT34	Sync engine and IMMO (CAN),
	TIANJIN FAW\IMMO\Vizhi V2\Sync engine and	Sync engine and IMMO (CAN),
	TIANJIN FAW\IMMO\A70	All key lost,
FAW JIABAO	FAW JIABAO\V80\V80L/T80\Inte	Program engine ECU,Program key,Delete key,Immo ECU reset,
	AEOLUS\S30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine
	AEOLUS\H30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine
	AEOLUS\H30 Cross\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine
	AEOLUS\A60\A60- HR16,MR20\BCM	Activate steering wheel lock,
	AEOLUS\A60\A60- HR16,MR20\IMMO\Type 1	Add key,Activate steering wheel lock(all key lost),
	AEOLUS\A60\A60- HR16,MR20\IMMO\Type 2	Add key,Activate steering wheel lock(all key lost),
	AEOLUS\A60\A60- HR16,MR20\PEPS\Type 1	Program smart key,

AEOLUS

AEOLUS\A60\A60-HR16,MR20\PEPS\Type 2	Program smart key,
AEOLUS\H30\IMMO	Key programming status,Fault pieces re-programming,Replace
AEOLUS\H30 Cross\IMMO	Key programming status,Fault pieces re-programming,Replace
AEOLUS\S30\IMMO	Key programming status,Fault pieces re-programming,Replace
AEOLUS\A30\IMMO	Key programming status,Fault pieces re-programming,Replace
AEOLUS\AX3\AX3(DFM A15 MT22.1)[key	Key programming status,Fault pieces re-programming,Replace
AEOLUS\AX3\AX3(DFM A14T MT62.1)[key	Key programming status,Fault pieces re-programming,Replace
AEOLUS\A60\A60-A16\BCM	Program key,
AEOLUS\A60\A60-A14T\BCM	Program key,
AEOLUS\AX7\BCM	Program key,
AEOLUS\A60\A60-A16\PEPS	Program key,
AEOLUS\AX3\AX3(DFM A14T MT62.1)[button	Program key,
AEOLUS\AX7\PEPS	Program key,
AEOLUS\A30\BCM	Replace OBC & program remote,Program remote,
AEOLUS\L60\IMMO	Program key,
AEOLUS\AX3\AX3(DFM A15 MT22.1)[key	Program remote key,
AEOLUS\AX3\AX3(DFM A14T MT62.1)[key	Program remote key,
AEOLUS\MX5\BCM	Program key,
DONGFENG FENGXING\Joyear\B11\Lia	Write immo VIN code,Write engine VIN code,Engine ECU

DONGFENG FENGXING\Joyear\B12\Lia	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BH5/B	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BX5/B	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BX3\Li	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\XV\Lia	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\S50\Lia	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\SX5/X5	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\SX6\Li	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Lingzhi\CM7/C	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Fengxing	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Fengxing	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\F600/L	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BX5/B	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Joyear\S50\PE	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Joyear\XV\PE	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Joyear\SX5/X5	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Joyear\SX6\P	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Lingzhi\CM7/C	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Fengxing	Program whole system,Program engine ECU,Program key,Clear

DONGFENG FENGXING

DONGFENG FENGXING\Fengxing	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\F600/L	Program whole system,Program engine ECU,Program key,Clear
DONGFENG FENGXING\Joyear\BX5/B	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Joyear\S50\B	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Joyear\XV\BC	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Joyear\SX5/X5	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Joyear\SX6\B	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Fengxing	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Fengxing	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\F600/L	Key count,Program key>Delete key,Program whole
DONGFENG FENGXING\Joyear\BX5/B	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\S50\U	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\XV\UA	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX5/X5	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX6\U	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing	Delete remote,Program remote,
DONGFENG FENGXING\F600/L	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\B11\1.	Write immo VIN code,Write engine VIN code,Engine ECU

DONGFENG FENGXING\Joyear\B12\1.	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BH5/B	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BX3\1.	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\B11\PI	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\B12\PI	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BH5/B	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BS3\PI	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BX3\PI	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BX5/B	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\S50\PI	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\SX6\PI	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\XV\PIN	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\BS3\Li	Write immo VIN code,Write engine VIN code,Engine ECU
DONGFENG FENGXING\Joyear\BS3\U	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\BS3\P	Program whole system,Program engine ECU,Program key,Clear
LEOPAARD\CS7\IMMO\Li anchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU
LEOPAARD\CS7\IMMO\D elphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
LEOPAARD\CS6\IMMO\Pe trol\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LEOPAARD\CS6\IMMO\Di esel\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset

LEOPAARD	LEOPAARD\CS7\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale
	LEOPAARD\CS7\BCM\BCM	Program remote,Delete remote,Read remote count,
	LEOPAARD\CS10\Integrated IMMO(CAN)	Program key,Program immobiliser or EMS,
	LEOPAARD\CS10\Narn PEPS	Add smart key,Delete smart key,Smart key count,
	LEOPAARD\CS4\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale
	LEOPAARD\CS9\Narn PEPS	Add smart key,Delete smart key,Smart key count,
LANDWIND	LANDWIND\Fashion\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
	LANDWIND\Funwa\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
	LANDWIND\X6\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
	LANDWIND\X8\2016\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
	LANDWIND\X9\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
	LANDWIND\X5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LANDWIND\X8\2016\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LANDWIND\X9\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LANDWIND\X5\TungThih PEPS	Clear fault code,Program EMS,Reset EMS,Program
	LANDWIND\X5\Kuwe PEPS	Program ESCL,Program old PEPS,Program key,Clear fault
	LANDWIND\X7\2016\TungThih PEPS	Clear fault code,Program EMS,Reset EMS,Program
	LANDWIND\X8\2016\Delphi PIN code	Delphi anti-theft PIN code reading,
	LANDWIND\X8\2016\Siemens PIN code	Read Siemens PIN code,

	LANDWIND\X9\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\Funwa\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\Fashion\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\X7\2017-\TungThih PEPS	Program key,
	LANDWIND\X8\2017-\TungThih PEPS	Program key,
	LANDWIND\X2\PEPS	Program smart key,Program EMS (UMC),Program EMS
YOUNG LOTUS	YOUNG LOTUS \IMMO \Original IMMO system	Clear fault code,Program key,Delete key,
	YOUNG LOTUS \IMMO \UAES IMMO	Write immo VIN code,Write engine VIN code,Engine ECU
	YOUNG LOTUS \IMMO \Siemens IMMO system	Immobilization,Program engine,Reset engine,Reset
	CHERY\IMMO\Industrial Traffic IMMO	Immobilization,Program engine,Reset engine,Reset
	CHERY\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU
	CHERY\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	CHERY\IMMO\Autonomous IMMO	Program new key,Program old key,Delete key,Program engine
	CHERY\PEPS\Type 1	Add new smart key,Add old smart key,Delete smart key,
	CHERY\PEPS\Type 2	Program smart key,
	CHERY\Remote\A1	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Cowin 1	Read key count,Program remote,Clear fault code,
	CHERY\Remote\QQ3	Read key count,Program remote,Clear fault code,
	CHERY\Remote\QQ6	Read key count,Program remote,Clear fault code,

CHERY\Remote\Riich M1\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M2	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M3	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich M5	Read key count,Program remote,Clear fault code,
CHERY\Remote\Riich X1	Read key count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Elegant series	Read key count,Program remote,Clear fault code,
CHERY\Remote\Eastar\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo 3\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\EQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo Facelift \Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\New QQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\A3	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\X5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H3 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\FENGYUN 2	Clear fault code,Program remote,Delete remote,
CHERY\Remote\New Eastar	Clear fault code,Program remote,Delete remote,
CHERY\Remote\A5\Type 1(Atech)	Clear fault code,Remote count,Program remote,

CHERY

CHERY\Remote\Qiyun 3\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\E5	Clear fault code,Remote count,Program remote,
CHERY\Remote\A5\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Qiyun 3\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Cowin 5\Type 3	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Riich M1\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\G3\Type 1	Read remote count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Eastar\Type 2	Read remote count,Program remote,Clear fault code,
CHERY\Remote\Arrizo M7	Read remote count,Program remote,Clear fault code,
CHERY\Remote\QQme series	Read remote count,Program remote,Clear fault code,
CHERY\Remote\G2	Program remote,
CHERY\Remote\G3\Type 2	Program remote,
CHERY\Remote\G5	Program remote,
CHERY\Remote\G6	Program remote,
CHERY\Remote\Tiggo 3\Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\Tiggo Facelift \Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\E3	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 3	Program remote>Delete remote,Remote count,

CHERY\Remote\Arrizo 7	Program remote,Delete remote,Remote count,
CHERY\Remote\Arrizo M7(PHEV)	Program remote,Delete remote,Remote count,
CHERY\Remote\Tiggo 5	Program remote,Delete remote,Remote count,
CHERY\Remote\Cowin C3	Program remote,Delete remote,Remote count,
CHERY\Remote\Cowin C3R	Program remote,Delete remote,Remote count,
CHERY\Remote\M16PHEV	Program remote,Delete remote,Remote count,
CHERY\Remote\Arrizo 5	Read remote count,Program remote,
CHERY\Remote\Karry K50	Program remote,Read remote count,
CHERY\IMMO\PIN code	Delphi anti-theft PIN code reading,Industrial traffic anti-theft
CHERY\Remote\Tiggo 7	Program remote,Delete remote,Remote count,
CHERY\Remote\Cowin	Program remote,Remote sync mode,
CHERY\Remote\Cowin 2	Program remote,Remote sync mode,
CHERY\Remote\Cowin 5\Type 1	Program remote,Remote sync mode,
CHERY\Remote\V5 series\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Eastar\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo 3\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo Facelif\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Cowin 5\Type 2	Read key count,Program remote,Clear fault code,
GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset

GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Hover\H1\IMMO	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Hover\H6-	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Hover\M1\Industri	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Hover\M4\Industri	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Hover\H3\Delphi	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Hover\H5	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great	Write immo VIN code,Write engine VIN code,Check ECU,Read VIN
GREAT WALL MOTOR\Hover\M2\Lianchu	Write immo VIN code,Write engine VIN code,Check ECU,Read VIN
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN code,Program

GREAT WALL MOTOR\Hover\H3\Delphi	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Hover\H5	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Hover\H2\Keyless	Program key,Clear ESCL learn status,Clear EMS learning
GREAT WALL MOTOR\Hover\H6 coupe\-	Program key,Clear ESCL learn status,Clear EMS learning
GREAT WALL MOTOR\Great	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H1\Body	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6\-	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great	All key lost,Program with working key,Replace solenoid

GREAT WALL MOTOR

GREAT WALL MOTOR\Great	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Hover\H6\2013-	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Hover\H7\Button-	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Hover\H1\Body	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H3\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H5\Remote	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6-	Key detecting,Reset engine ECU,Reset immo ECU>Delete
GREAT WALL MOTOR\Hover\H8\Button-	Read key count,Program smart key,Go to recover EOL learning
GREAT WALL MOTOR\Hover\H9\Button-	Read key count,Program smart key,Go to recover EOL learning
GREAT WALL MOTOR\PIN code	Read pin code(Lianchuang),Read pin code(Shanghai
GREAT WALL MOTOR\Great	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key>Delete all
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key>Delete all
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key>Delete all
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key>Delete all
GREAT WALL MOTOR\Hover\H2S\PEPS	Delete/program smart key,All smart key lost,Add smart key,
GREAT WALL MOTOR\Great	All key lost,Program with working key,Replace solenoid

GREAT WALL MOTOR\Hover\H6\2013-	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Hover\H7\Switch-	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Hover\H6\-	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great	Program immo and remote,
GREAT WALL MOTOR\Hover\H2S\Mech	Program remote,
GREAT WALL MOTOR\Hover\H5(Ann.	Program remote,
GREAT WALL MOTOR\Hover\H3\Delphi-	Program remote,
GREAT WALL MOTOR\Hover\H6(bluesig	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6(bluesig	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Great Wall\Wingle	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H2S\Mech	Immobilization,Program engine,Reset engine,Reset
GREAT WALL MOTOR\Hover\H4\Keyless	Immobilizer,Off line full system programming,Program
GREAT WALL MOTOR\Hover\M6\-	Add key,All key lost,
GREAT WALL MOTOR\Great	Delete/learn after-sales key,All key lost,
GREAT WALL MOTOR\Great	Program immo and remote,
GREAT WALL MOTOR\Hover\H6\2018-	Add key,All key lost,
GREAT WALL MOTOR\Hover\H6	Program key after deleting,All key lost,Add key,
GREAT WALL MOTOR\Hover\M6\2018-	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Great	All key lost,Program with working key,Replace solenoid

GREAT WALL MOTOR\Great	All key lost,Program with working key,Replace solenoid
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key,Delete all
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Clear fault code,Reset PIN code,Program
GREAT WALL MOTOR\Hover\H6\2013-	Program remote,Unlocking OBC,
GREAT WALL MOTOR\Hover\H6\2013-	Program remote,Unlocking OBC,
CHANGAN AUTO\Benni Mini\Remote	Read remote count,Program remote,
CHANGAN AUTO\New Benni\Remote	Read remote count,Program remote,
CHANGAN AUTO\Alsvin\V3/V5\Integra	Read remote count,Program remote,
CHANGAN AUTO\Alsvin\V3/V5\Integra	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Benni\Integrated	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX20\Integrated	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX30\Integrated	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Benni\Chongqing	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\Jiexun\Industrial	Immobilization,Program engine,Reset engine,Reset
CHANGAN AUTO\Raimondi\Industrial	Immobilization,Program engine,Reset engine,Reset
CHANGAN AUTO\CM8\Industrial	Immobilization,Program engine,Reset engine,Reset
CHANGAN AUTO\CV7\Industrial traffic	Immobilization,Program engine,Reset engine,Reset
CHANGAN AUTO\CV9\Industrial traffic	Immobilization,Program engine,Reset engine,Reset
CHANGAN AUTO\Alsvin\V3/V5\Atech	Read remote count,Program remote,Delete remote,

CHANGAN AUTO\Zhi Xiang\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Honor\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\B301\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX20\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CX30\Atech BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\Alsvin\V7\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado XT\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Raeton\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\CS15\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\CS75\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Alsvin\V7\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\Raeton\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\CS15\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\CS75\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\Alsvin\V7\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Raeton\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS15\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS35\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CS75\Smart key	Read key count,Program smart key,Clear fault code,

CHANGAN AUTO

CHANGAN AUTO\Zhi Xiang\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\Honor\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\CX30\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\Oulove\Remote	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CS35\Delphi	Program key,Program remote,Delete key,Delete remote,
CHANGAN AUTO\CS35\Delphi	Program key,Program remote,Delete key,Delete remote,
CHANGAN AUTO\New Benni EV\Integrated BCM	Read remote count,Program remote,Delete remote,
CHANGAN AUTO\CS95\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\C207\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\V301\Integrated	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado EV\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\Eado XT\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\CS95\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\C207\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\V301\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\Eado EV\Remote	Read remote count,Program remote,Clear fault code,Delete
CHANGAN AUTO\Eado\Smart key	Read key count,Program smart key,Clear fault code,

CHANGAN AUTO\CS95\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\C207\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\V301\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Eado EV\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\CX70\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Auchan\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Zun Xing\Lianchuang IMMO	Clear fault code,Add key,Delete key,Detect key,Reset
CHANGAN AUTO\CX70\Remote	Read remote count,Program remote,
CHANGAN AUTO\Auchan\Remote	Delete remote,Program remote,OBC locked,Unlocking
CHANGAN AUTO\CS35\Delphi BCM\-	Program key,Delete key,Program remote,Delete remote,
CHANGAN AUTO\Eado\Integrated	Read remote count,Program remote,Delete remote,Read
CHANGAN AUTO\CS55\BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\CS55\Smart key	Read key count,Smart key,Delete smart key,
CHANGAN AUTO\Linmax\Integrated	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\Linmax\Smart key	Read key count,Program smart key,Clear fault code,
GEELY/ENGLON/MAPLE\ GEELY\Vision\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ GEELY\Free	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ GEELY\Eagle\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\Panda\Industrial	Immobilization,Program engine,Reset engine,Reset

GEELY/ENGLON/MAPLE\ Gleagle\GX718\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GX720\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GX7\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GC7\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GX2\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand\EC7(EC7RS)\Sie	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand \EC820\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand \EC825\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand \EX8\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand \FC-2\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand \GS\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Emgrand \GL\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ MAPLE\Industrial traffic	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\SC5\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\SC6\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\SC7\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\SX7\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\LG-	Immobilization,Program engine,Reset engine,Reset

GEELY/ENGLON/MAPLE\ Gleagle\GX718\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX7\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \EC820\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \EC825\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX7\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX7\Hai La	After-sales system programming, Clear PEPS learn
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Hai La	After-sales system programming, Clear PEPS learn
GEELY/ENGLON/MAPLE\ Emgrand \EC825\Hai La	After-sales system programming, Clear PEPS learn
GEELY/ENGLON/MAPLE\ Emgrand \EV8\Hai La	After-sales system programming, Clear PEPS learn
GEELY/ENGLON/MAPLE\ ENGLON\SX7\Hai La	After-sales system programming, Clear PEPS learn
GEELY/ENGLON/MAPLE\ Gleagle\GX7\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Emgrand \EC825\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Emgrand \EV8\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Emgrand \GC9\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Emgrand \GL\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Emgrand \GS\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ ENGLON\SX7\Hai La	Program key, Read key count,
GEELY/ENGLON/MAPLE\ Emgrand \EC7(EC7RS)	PEPS learning, Read key count, Program key, After-sales

GEELY/ENGLON/MAPLE\ Emgrand \EV\Continental	PEPS learning,Read key count,Program key,After-sales
GEELY/ENGLON/MAPLE\ Emgrand \HEV\Continental	PEPS learning,Read key count,Program key,After-sales
GEELY/ENGLON/MAPLE\ Emgrand \EC7(EC7RS)	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS
GEELY/ENGLON/MAPLE\ Emgrand \EV\Continental	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS
GEELY/ENGLON/MAPLE\ Emgrand \HEV\Continental	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS
GEELY/ENGLON/MAPLE\ Emgrand \EC820\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \EC825\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \EC820\UAES	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand	Add key,
GEELY/ENGLON/MAPLE\ Emgrand	Add key,
GEELY/ENGLON/MAPLE\ Emgrand \GL\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \GS\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \X6\UAES BCM	Delete key,Add key,
GEELY/ENGLON/MAPLE\ Emgrand \X6\Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ Emgrand \NL-3\PEPS	Delete key,Program old key,Program new key,
GEELY/ENGLON/MAPLE\ ENGLON\TX4\Integrated	Program engine ECU,Reset engine ECU,Reset immo
GEELY/ENGLON/MAPLE\ ENGLON\SC3\Integrated	Program engine ECU,Reset engine ECU,Reset immo
GEELY/ENGLON/MAPLE\ Gleagle\GX720\Continental	Program remote,
GEELY/ENGLON/MAPLE\ GEELY\New	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS

GEELY/ENGLON/MAPLE

GEELY/ENGLON/MAPLE\ ENGLON\Ocean	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GX2\IMMO(with	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\Panda\IMMO(with	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ GEELY\New Free	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\New Ocean	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\GX725\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\CROSS\Industria	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\CROSS2/	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\CROSS3\Industri	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\GX725\Continent	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand \X3\Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ ENGLON\GX725\Narn	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ Emgrand\S1\UAES PEPS	Key count,Program key,Delete key,Write ESK code,Erase ESK
GEELY/ENGLON/MAPLE\ Emgrand \S1\IMMO	Program immo ECU,Reset immo ECU,
GEELY/ENGLON/MAPLE\ Emgrand\X1\BCM	Program remote,Remote count,
GEELY/ENGLON/MAPLE\ Emgrand\X3\BCM	Program remote,Remote count,
GEELY/ENGLON/MAPLE\ Emgrand\X3\PEPS	Program remote,Offline key programming,
GEELY/ENGLON/MAPLE\ ENGLON\SC3\Shanghai	Learn remote>Delete remote,
GEELY/ENGLON/MAPLE\ ENGLON\SC7\Shanghai	Learn remote>Delete remote,

GEELY/ENGLON/MAPLE\ Emgrand\New	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS
GEELY/ENGLON/MAPLE\ Emgrand\New	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\New ocean	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX718\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\SX718\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX718\Narn	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Continent	Program remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Narn	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX718\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX718\Narn	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Industrial	Immobilization,Program engine,Reset engine,Reset
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Narn	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Narn PEPS	Reset EMS,Reset PEPS,Program key,Program EMS,Program
GEELY/ENGLON/MAPLE\ GEELY\New Free	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE\ Gleagle\Panda\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ GEELY\Vision\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GC7\Read PIN of	Read PIN code,

GEELY/ENGLON/MAPLE\ ENGLON\SC7\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\CROSS\Read	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\CROSS\Read	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\CROSS2/	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\CROSS3\Read	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SC6\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX718\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX720\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX2\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Emgrand\EX8\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ MAPLE\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SC5\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Emgrand\EC820\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SX718\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SX725\Read PIN	Read PIN code,

	GEELY/ENGLON/MAPLE\ ENGLON\Cross\Steel mate	Read program result,Reset PEPS,Reset ignition lock
	GEELY/ENGLON/MAPLE\ ENGLON\SC6\Steel mate	Read program result,Reset PEPS,Reset ignition lock
	GEELY/ENGLON/MAPLE\ Emgrand\EC825\Steel	Read program result,Reset PEPS,Reset ignition lock
	GEELY/ENGLON/MAPLE\ Emgrand\EC820\Steel	Read program result,Reset PEPS,Reset ignition lock
	GEELY/ENGLON/MAPLE\ Gleagle\GC7\Steel mate	Read program result,Reset PEPS,Reset ignition lock
SAIC MAXUS	SAIC MAXUS\G10\PEPS	Add smart key,Delete smart key,
	SAIC MAXUS\G10\BCM	Delete remote,Add remote,Delete key,Add key,
	SAIC MAXUS\A80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\EV80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\V80\BCM	Add key,Delete remote,Add remote,Delete key,
HAIMA	HAIMA\IMMO\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset
	HAIMA\IMMO\Lianchuang IMMO(old)	Write immo VIN code,Write engine VIN code,Check engine
	HAIMA\IMMO\UAES IMMO(M3)	Replace immo ECU,Program engine,Detect key,Reset engine
	HAIMA\IMMO\UAES IMMO(M5/M7/S7)	Replace immo ECU,Program engine,Detect key,Reset engine
	HAIMA\IMMO\IMMO controller(M6/S5)	Reset ECM,Adjust ECMPIN,Key testing,Lock ECU,Adjust
	HAIMA\PEPS\M8\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
	HAIMA\PEPS\S5\FuxinDer PEPS	Reset PEPS,Program PEPS & IMMO,Program PEPS &
	HAIMA\Remote\M3\TungT hih BCM	Program remote,
	HAIMA\Remote\M5\Steel Mate body ECU	Program remote,

HAIMA

HAIMA\Remote\M3\Kingdom BCM	Program remote,
HAIMA\IMMO\UAES IMMO(M8/V70)	Clear fault code,Replace immo ECU,Replace engine ECU,Reset
HAIMA\Remote\M6\Kingdom BCM	Program remote,
HAIMA\Remote\S5\Kingdom BCM	Program remote,
HAIMA\PEPS\M6\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
HAIMA\PEPS\M5\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
HAIMA\PEPS\M3\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
HAIMA\PEPS\S7\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
HAIMA\PEPS\S5\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
HAIMA\PEPS\V70\Huf PEPS	Program old key,Program new key,Program IMMO,Clear ESCL
HAIMA\Remote\V70\Steel Mate body ECU	Program remote,
HAIMA\PIN code	Industrial traffic PIN code reading,
HAIMA\IMMO\Lianchuang IMMO(S7)	Add key,Delete key,Program new system,Immo ECU
MG\Immobilizer\GT	Add key,Delete key,Check lock time,
MG\IMMO\MG3\2011-	Add key,Delete key,Check lock time,
MG\Immobilizer\MG5\2013 -	Add key,Delete key,Check lock time,
MG\Immobilizer\MG7\2013 -	Add key,Delete key,Check lock time,
MG\Immobilizer\MG6\2012	Delete key,Add key,
MG\Remote\MG7	Enable remote,Disable remote,Program remote,Clear

MG

MG\Remote\Old MG3	Add remote,Clear remote,Read VIN code,Read immo emergency
MG\IMMO\MG3\2011	Add key,Delete key,Check lock time,
MG\Immobilizer\MG5\2012	Add key,Delete key,Check lock time,
MG\Immobilizer\MG6\2013-	Add key,Delete key,The rest unlock time,
MG\Immobilizer\GS\2016\With smart	Add key,Delete key,
MG\Immobilizer\GS\2016\Without smart	Add key,Delete key,
MG\Immobilizer\GS\2017\Without smart	Delete key,Add key,Read key count,
MG\Remote\MG TF	Add remote,Clear remote,Read VIN code,Read immo emergency
MG\Read PIN code\MG6\2013-	Read PIN code,
MG\Remote\MG7-L	Enable remote,Disable remote,Program remote,Clear
MG\IMMO\ZS\Without smart	Add key,Delete key,Key number,
MG\IMMO\ZS\With smart	Add smart key,Clear smart key,Key number,
MG\IMMO\MG6\2018-	Add key,Delete key,
FIAT\China\Viaggio\Fobik	Backup immo data,Make dealer key,Program key,Key
FIAT\China\Palio\Immobilizer	Backup immo data,Make dealer key(48 chip),Program
FIAT\China\Siena\Immobilizer	Backup immo data,Make dealer key(48 chip),Program
FIAT\China\Bravo\Immobilizer	Backup immo data,Program key,Make dealer key(46
FIAT\China\Perla\Immobilizer	Backup immo data,Make dealer key(48 chip),Program
FIAT\China\Freemont\Smart key	Read PIN code,Add smart key,Delete smart key,

FIAT\China\Ottimo\Smart key	Program smart key,Read pin code,
FIAT\China\Viaggio\Smart key	Program smart key,Read pin code,
FIAT\China\Ottimo\Fobik	Backup immo data,Make dealer key,Program key,Key
FIAT\Africa\Siena\2002-2008	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Asia\Fiorino\2008-	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Europe\500\2007-2016(312)	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Europe\Albea\2002-(172)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Bravo\2007(198)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Croma\2005-2007(194)	Key info,Program key,
FIAT\Europe\Doblo\2009-(263)	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Europe\Ducato\2006-2012(250)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Ducato\2012-(250)	Key info,Program key,Read PIN code,Make dealer key(46 chip),
FIAT\Europe\Fiorino\2008-(225)	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\South America\Punto\2008-2014	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\South America\Stilo\2002-2006	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\South America\Doblo\2000-	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\South America\Fiorino\2014-2015	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\South America\Idea\2004-2012	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\South America\Linea\2004-2012	Key count,Program key,Remote count,Program remote,Read PIN

FIAT

FIAT\South America\Palio\2000-2003	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\South America\Palio\2004-2012	Key count,Program key,Remote count,Program remote,Read PIN
FIAT>Select from type\Immobilizer\Type 1	Immobilizer,
FIAT>Select from type\Immobilizer\Type 2	Immobilizer,
FIAT>Select from type\Immobilizer\Type 3	Immobilizer,
FIAT>Select from type\Immobilizer\Type 4	Program key,
FIAT>Select from type\Immobilizer\Type 5	Key info,Program key,
FIAT>Select from type\Immobilizer\Type 6	Key count,Immobilizer,Delete key,
FIAT>Select from type\Immobilizer\Type 7	Key count,Immobilizer,Delete key,
FIAT>Select from type\Immobilizer\Type 8	Key count,Program key,Remote count,Program remote,Read PIN
FIAT>Select from type\Immobilizer\Type 9	Immobilizer,Delete key,
FIAT>Select from type\Immobilizer\Type 10	Program key,Delete key,Obtain immo ID,
FIAT>Select from type\Smart key\Type 1	Add smart key,Delete smart key,Read PIN code,
FIAT>Select from type\Smart key\Type 2	Add smart key,Delete smart key,Read PIN code,
FIAT\Asia\500	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Asia\Linea	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Asia\Punto	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Asia\Punto grande\2006-2011	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Asia\Viaggio\2013-	Key count,Program key,Read PIN code,Make dealer key(46

FIAT\Europe\500X\2014-(334)	Add smart key,Delete smart key,Read PIN code,
FIAT\Europe\Freemont\Smart key	Add smart key,Delete smart key,Read PIN code,
FIAT\Europe\Idea\2003-2012(135)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Linea\2007-(323)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Palio(178)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Panda\2005-2011(169)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Panda\2011-(312)	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Europe\Punto\2000-2006(188)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Punto\2006-2011(199)	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Europe\Qubo\2008-(300)	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Europe\Scudo\2007(220)\Type 1	Immobilizer,
FIAT\Europe\Scudo\2007(220)\Type 2	Immobilizer,
FIAT\Europe\Scudo\2007(220)\Type 3	Immobilizer,
FIAT\Europe\Scudo\2008-(270)	Program key,
FIAT\Europe\Sedici\Petrol\2010	Key count,Immobilizer,Delete key,
FIAT\Europe\Stilo\2000-2006(192)	Key count,Program key,Remote count,Program remote,Read PIN
FIAT\Europe\Ulysee\2002-2010(179)	Program key,
FIAT\Europe\Viaggio\2012-	Key count,Program key,Read PIN code,Make dealer key(46
FIAT\Middle East\500\2007-	Key count,Program key,Read PIN code,Make dealer key(46

	FIAT\Middle East\Doblo-2009	Key count,Program key,Remote count,Program remote,Read PIN
	FIAT\South America\500\2010-2012	Key count,Program key,Read PIN code,Make dealer key(46
	FIAT\South America\Bravo\2007-	Key count,Program key,Remote count,Program remote,Read PIN
	FIAT\South America\Siena\2008-2012	Key count,Program key,Remote count,Program remote,Read PIN
	FIAT\South America\Strada\2000-2003	Key count,Program key,Remote count,Program remote,Read PIN
	FIAT>Select from type\Immobilizer\Type 11	Key count,Program key,Read PIN code,Make dealer key(46
	FIAT\Europe\Sedici\Diesel\2006-2010	Add new key,Add old key,Delete key,
	FIAT\Europe\Sedici\Diesel\2010-	Program key,
	FIAT\Europe\Phedra\2005-	Program key,
	FIAT\Europe\Ulysse\2002-2005(179)	Program key,
	FIAT\Europe\Ulysse\2005-2010(179)	Program key,
	FIAT\Europe\500L\2012-(199)	Key info,Program key,Read PIN code,Make dealer key(46 chip),
	FIAT\Europe\Doblo\2005-2009(223)	Program key,Key count,Program remote,Remote count,Read PIN
CHANGHE SUZUKI	CHANGHE SUZUKI\Wagon	Reset engine ECU,Key detecting,Reset immo ECU,Delete
	CHANGHE SUZUKI\Splash\IMMO\Tun	Reset engine ECU,Key detecting,Reset immo ECU,Delete
	CHANGHE SUZUKI\Splash\IMMO\Tun	Program engine ECU,ECU immobilization,Program key,Reset
	CHANGHE SUZUKI\Liana\IMMO 1	Program key,Delete key,Register immobiliser,
	CHANGHE SUZUKI\Liana\Keyless	Learn new PEPS,Learn old PEPS,Key(keyless enter)
	CHANGHE SUZUKI\Liana\TungThih	Reset engine ECU,Key detecting,Reset immo ECU,Delete

ZHENGZHOU NISSAN	ZHENGZHOU NISSAN\IMMO\Succe	Immobilization,Program engine,Reset engine,Reset
	ZHENGZHOU NISSAN\IMMO\Reach\Indu	Immobilization,Program engine,Reset engine,Reset
	ZHENGZHOU NISSAN\IMMO\Odin	Immobilization,Program engine,Reset engine,Reset
	ZHENGZHOU NISSAN\IMMO\Succe	Write immo VIN code,Write engine VIN code,Engine ECU
	ZHENGZHOU NISSAN\IMMO\NV200\Typ	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\PEPS\NV200\Sm	Program smart key>Delete smart key,Program steering lock,
	ZHENGZHOU NISSAN\PEPS\Dongfeng	Program smart key>Delete smart key,Program steering lock,
	ZHENGZHOU NISSAN\IMMO\Dongfeng	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\IMMO\NV200\Typ	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\Read PIN	Read PIN code,
	ZHENGZHOU NISSAN\Release	Release steering lock,
	ZHENGZHOU NISSAN\PEPS\Dongfeng	Add smart key,
HAFEI	HAFEI\Saibao\Remote	Program remote,
	HAFEI\Simbo\Remote	Program remote,
	HAFEI\Hafei 8\Mitsubishi IMMO	Add key,
	HAFEI\Simbo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU
	HAFEI\Lobo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU
BORGWARD	BORGWARD\BX5\PEPS	Add smart key>Delete smart key,Program EMS,Program
	LIFAN\Sedan\520\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset

LIFAN

LIFAN\Sedan\620\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset
LIFAN\Sedan\X60\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset
LIFAN\Minicar\Feng Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset
LIFAN\Minicar\Xing Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset
LIFAN\Minicar\Fu Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset
LIFAN\Sedan\520\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LIFAN\Sedan\620\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LIFAN\Sedan\X60\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LIFAN\Minicar\Feng Shun\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LIFAN\Minicar\Xing Shun\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LIFAN\Minicar\Fu Shun\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset
LIFAN\Sedan\Marvell\PEPS	Add smart key,Delete smart key,Program ESCL(electronic
LIFAN\Sedan\820\Remote	Program remote,Delete remote,
LIFAN\Sedan\720\Remote	Program remote,Delete remote,Synchronize
LIFAN\Sedan\820\PEPS	Smart key,Program ESCL,Program engine
LIFAN\Sedan\620 (2nd gen)\Remote	Program remote,Program immo chip,Program immo ECU,
LIFAN\Sedan\620EV\Remote	Program remote,Program immo chip,Program immo ECU,
LIFAN\Sedan\Shiner\Remote	Program remote,Immobilization,
LIFAN\Sedan\Shiner\PEPS	Immobilizer,Program PEPS,

	LIFAN\Sedan\320\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine
	LIFAN\Sedan\530\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine
	LIFAN\Sedan\630\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine
	LIFAN\Sedan\X50\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine
	LIFAN\Sedan\620CNG\CJ AE IMMO(Delphi)	Clear fault code,Program engine VIN,Write key number,Reset
	LIFAN\Sedan\330\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine
	LIFAN\Sedan\Lotto\CJAE IMMO(UAES)	Immobilizer,Program immo ECU,Program engine
	LIFAN\Sedan\X70\IMMO	Immobilizer,Program ESCL,Program engine ECU,
HIMIKO	HIMIKO\IMMO system	Add key,Delete key,
ZX AUTO	ZX AUTO\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	ZX AUTO\IMMO\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN code,Program
DONGFENG FENGGUANG	DONGFENG FENGGUANG\370\PEPS	Program smart key,
	DONGFENG FENGGUANG\580\PEPS\	Program smart key,
	DONGFENG FENGGUANG\370\BCM	Read key count,Program key,Key clear,Program remote,
	DONGFENG FENGGUANG\580\BCM	Read key count,Program key,Key clear,Program remote,
FOTON	FOTON \Savanna\Remote\Type 1	Read remote count,Program remote,Clear remote,
	FOTON \Tunland(2015)\Remote	Read remote count,Program remote,Clear remote,
	FOTON \Tunland\Remote	Read remote count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\ Type 2	Read remote count,Program remote,Clear remote,

OPEL\Read PIN code	Read pin code type2(via BCM),Read pin code type4,Read
OPEL\IMMO>Select from type\Type 1\Smart key	Read PIN code,All smart key lost,Add smart key,Read key
OPEL\IMMO>Select from vehicle\Insignia\2009-	Read PIN code,All smart key lost,Add smart key,Read key
OPEL\IMMO>Select from type\Type 1\Immobilizer	Read PIN code,All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Insignia\2009-	Read PIN code,All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from type\Type 2	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Agila	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Astra\Astra-G	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Calibra	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Combo\1998-	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Corsa\Corsa-B	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Corsa\Corsa-C	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Meriva\Meriva	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Movano\1998-2001	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Omega-	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Sintra	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Tigra-B	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from vehicle\Vectra-B	Read PIN code,Clear fault code,Program key,Delete
OPEL\IMMO>Select from type\Type 3	Program key,Delete key,

OPEL

OPEL\IMMO>Select from vehicle\Astra\Astra-	Program key,Delete key,Read PIN code,Read PIN code(type 6),
OPEL\IMMO>Select from type\Type 4	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009	Read key count,Program key,
OPEL\IMMO>Select from type\Type 5	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009-	Read key count,Program key,
OPEL\Remote system\Astra-H	Delete remote,Program remote,
OPEL\Remote system\Zafira-B	Delete remote,Program remote,
OPEL\Remote system\Vectra-C/Signum	Delete remote,Program remote,
OPEL\Remote system\Corsa\Corsa-D	Delete remote,Program remote,
OPEL\IMMO>Select from vehicle\Astra\Astra-	Immobilizer,Delete key,Key count,
OPEL\IMMO>Select from vehicle\Astra\Astra-	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra\2007\S	Learn smart key,Delete all smart keys,
OPEL\Remote system\Astra\07	Program remote,Delete remote,
OPEL\Remote system\Antara	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Antara\2010-	All key lost,
OPEL\IMMO>Select from vehicle\Omega-	Read PIN code,All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Omega-B\Smart	Add smart key,All smart key lost,Read smart key count,
OPEL\IMMO>Select from type\Type 6	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-	Read PIN code,All smart key lost,Add smart key,Read key

OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-	Read PIN code,All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Zafira\Zafira-	Read PIN code,All smart key lost,Add smart key,Read key
OPEL\IMMO>Select from vehicle\Zafira\Zafira-	Read PIN code,All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Meriva\Meriva-	Add key,Delete key,Read PIN code,
OPEL\IMMO>Select from vehicle\Corsa\Corsa-	Add key,Delete key,Read PIN code,
OPEL\IMMO>Select from vehicle\Mokka\2012-	Read PIN code,All smart key lost,Add smart key,Read key
OPEL\IMMO>Select from vehicle\Mokka\2012-	Read PIN code,All key lost,Add key,Read key count,Clear fault
OPEL\Remote system\Meriva	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Signum\2003-2007	Program key,Delete key,Read PIN code(ECU),Read PIN code(Info
Opel\IMMO>Select from vehicle\Vivaro\2014-	Read PIN code,Program key,Recover backup data,
OPEL\IMMO>Select from vehicle\Antara\2006-	All key lost,
OPEL\IMMO>Select from vehicle\Vectra-C\2002-	Delete key,Program key,
OPEL\IMMO>Select from vehicle\GT	All key lost,
OPEL\IMMO>Select from vehicle\Zafira\Zafira-	Clear fault code,Program key,Delete key,ECU
OPEL\IMMO>Select from vehicle\Astra\Astra-	All key lost,Add key,Read key count,Clear fault code,Read PIN
OPEL\IMMO>Select from vehicle\Astra\Astra-	All smart key lost,Add smart key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Corsa\Corsa-	All key lost,Add key,Read key count,Clear fault code,Read PIN
OPEL\IMMO>Select from vehicle\Corsa\Corsa-	All smart key lost,Add smart key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Movano\2005-	Add key,

	OPEL\IMMO>Select from vehicle\Movano\2010-	All smart key lost,
	OPEL\IMMO>Select from vehicle\Vivaro\2002-	Add key,
	OPEL\Remote system\Combo\2011	Program remote,Delete remote,
	OPEL\Remote system\Corsa\Corsa-C	Program remote,Delete remote,
	OPEL\IMMO>Select from vehicle\Combo\2012\Immo	All key lost,Add key,Read key count,Clear fault code,Read PIN
	OPEL\IMMO>Select from vehicle\Combo\2012\Smart	All smart key lost,Add smart key,Read key count,Clear fault
	OPEL\IMMO>Select from vehicle\Astra\Astra-F\1995-	Clear fault code,Program key,Delete key,ECU
	OPEL\IMMO>Select from vehicle\Astra\Astra\1995-	Clear fault code,Program key,Delete key,ECU
	Opel\IMMO>Select from vehicle\Vivaro\2014-	Program key,
	OPEL\IMMO>Select from vehicle\Zafira\Zafira-B	Read PIN code(ECU),Read PIN code(Info Display),Program
ZD	ZD\ZD2\PEPS system	Program new system,Program PEPS controller,Program
	BRILLIANCE AUTO\Zhonghua\Greur	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Zhonghua\Junjie\De	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Zhonghua\Coupe\D	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Jinbe\Delphi IMMO	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Zhonghua\Greur	Clear fault code,Program key,Reset immo ECU,Reset
	BRILLIANCE AUTO\Zhonghua\Greur	Clear fault code,Program key,Reset immo ECU,Reset
	BRILLIANCE AUTO\Zhonghua\Junjie\Sie	Clear fault code,Program key,Reset immo ECU,Reset
	BRILLIANCE AUTO\Zhonghua\Junjie\Bril	Clear fault code,Program key,Reset immo ECU,Reset

BRILLIANCE AUTO

BRILLIANCE AUTO\Zhonghua\Coupe\Si	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\Coupe\Br	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\FRV\Brilli	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\FSV\Brilli	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\Cross\Bril	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\Wagon\B	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\H530\Brill	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\V5\Brillia	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\H230\Brill	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\H320\Brill	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\H330\Brill	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\H220\Brill	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\V3\Brillia	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Jinbe\Brilliance	Clear fault code,Program key,Reset immo ECU,Reset
BRILLIANCE AUTO\Zhonghua\FSV\PEP	Clear fault code,Program smart key,Program new system,Reset
BRILLIANCE AUTO\Zhonghua\H330\PE	Clear fault code,Program smart key,Program new system,Reset
BRILLIANCE AUTO\Zhonghua\H530\PE	Program new system,Program smart key,Program new smart
BRILLIANCE AUTO\Zhonghua\V5\PEPS	Program new system,Program smart key,Program new smart
BRILLIANCE AUTO\Zhonghua\V3\PEPS	Program key,Program new PEPS,Program new

	BRILLIANCE AUTO\Huasong\Huasong	Program key,Delete & add key,Engine programming,
	BRILLIANCE AUTO\Huasong\Huasong	Lost all remote,Add remote,
	BRILLIANCE AUTO\Zhonghua\Zhonghu	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\Greur	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\Junjie\Mit	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\Coupe\Mi	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\FRV\Mits	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\FSV\Mits	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\H330\Mit	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhonghua\H3\PEPS	Program key,Program new PEPS,Program new
	BRILLIANCE AUTO\Zhonghua\H3\Brillia	Clear fault code,Program key,Reset immo ECU,Reset
	BRILLIANCE AUTO\Zhonghua\FSV\PEP	Program smart key,
CHANGHE AUTO	CHANGHE AUTO\Q25\BCM	Clear fault code,Read key count,Program key,Delete
	CHANGHE AUTO\Q35\BCM	Clear fault code,Read key count,Program key,Delete
HANTENG AUTO	HANTENG AUTO\X7\PEPS	Read key learn status,Program key,Delete key,Reset
	ALFA ROMEO \Select from vehicle\IMMO\159\Immobil	Key info.,Program key,Backup immo data,Make dealer key(46
	ALFA ROMEO \Select from vehicle\IMMO\Spider\Immo	Key info.,Program key,Backup immo data,Make dealer key(46
	ALFA ROMEO \Select from vehicle\IMMO\Brera\Immob	Key info.,Program key,Backup immo data,Make dealer key(46
	ALFA ROMEO \Select from vehicle\IMMO\147\Immobil	Read key count,Program key,Read remote count,Program

ALFA ROMEO

ALFA ROMEO \Select from vehicle\IMMO\GT\Immobil	Read key count,Program key,Read remote count,Program
ALFA ROMEO\Select from vehicle\IMMO\Giulietta\201	Read key count,All key lost,Read PIN code,Make dealer key(46
ALFA ROMEO \Select from vehicle\IMMO\Mito\Immobil	Read key count,All key lost,Read PIN code,Make dealer key(46
ALFA ROMEO\Select from vehicle\IMMO\Giulietta\201	Key count,Program key,Remote count,Program remote,Read PIN
ALFA ROMEO \Select from type\Type 1	Key info.,Program key,Backup immo data,Make dealer key(46
ALFA ROMEO \Select from type\Type 2	Read key count,Program key,Read remote count,Program
ALFA ROMEO \Select from type\Type 3	Read key count,All key lost,Read PIN code,Make dealer key(46
ALFA ROMEO \Select from type\Type 4	Key count,Immobilizer,Delete key,
ALFA ROMEO \Select from type\Type 5	Key count,Immobilizer,Delete key,
ALFA ROMEO \Select from type\Type 6	Immobilizer,Delete key,
ALFA ROMEO \Select from type\Type 7	Program key,Delete key,Obtain immo ID,
ALFA ROMEO \Select from type\Type 8	Key info,Program key,
ALFA ROMEO \Select from type\Type 9	Key count,Program key,Remote count,Program remote,Read PIN
LANCIA\IMMO\Thesis\02-09\Immobilizer	Read key count,Program key,
LANCIA\IMMO\Ypsilon\2003-2006\Immobilizer	Read key count,Program key,
LANCIA\IMMO\Phedra\2005-\Immobilizer	Program key,
LANCIA\IMMO\Delta	Key count,Add key,Remote count,Program remote,Read PIN
LANCIA\IMMO\Musa	Key count,Add key,Remote count,Program remote,Read PIN
LANCIA\IMMO\Phedra\Type 1	Immobilizer,

LANCIA	LANCIA\IMMO\Phedra\Type 2	Immobilizer,
	LANCIA\IMMO\Phedra\Type 3	Immobilizer,
	LANCIA\IMMO\Z\Type 1	Immobilizer,
	LANCIA\IMMO\Z\Type 2	Immobilizer,
	LANCIA\IMMO\Z\Type 3	Immobilizer,
	LANCIA\IMMO\Ypsilon\2013-\Immobilizer	Key count,Program key,Read PIN code,Make dealer key(46
	LANCIA\IMMO\Ypsilon\2007-2012\Immobilizer	Key count,Program key,Remote count,Program remote,Read PIN
MERCURY	MERCURY \Cougar\1999-2002\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\03-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Marauder\2003-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Monterey\2004-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY \M.Taineer[PCM]\01-	Read key count,Program key,Delete key,
	MERCURY\Sable\2000-2003\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\2005-2010\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2005-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Montego\2005-2006\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Monterey\2006-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2004-2005\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2004-2007\Immobilizer	Read key count,Program key,Delete all keys,

	MERCURY\Mariner\2008-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Milan\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Montego\2007-	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2008-\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Milan\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\M.Taineer\2010-\Immobilizer	Read key count,Program key,Delete key,
	PERODUA \GDH Reset immobiliser	Immobiliser Reset,
	PERODUA \A Key Reset immobiliser	Immobiliser Reset,
	PERODUA \DH reset immobiliser	Immobiliser Reset,
PERODUA	PERODUA\Bezza\Smart key	Add smart key,Delete smart key,All smart key lost,
	PERODUA \New Myvi\Smart key	Add smart key,Delete smart key,All smart key lost,
	PERODUA \New Axia\Smart key	Add smart key,Delete smart key,All smart key lost,
	VENUCIA\Read BCM code and release directional	Release steering lock,Read BCM inner code,
VENUCIA	VENUCIA\Select from type\Immobilizer\4-digit	Add key,
	VENUCIA\Select from type\Immobilizer\4-digit	Program key,
	VENUCIA\Select from type\Smart key\20-digit PIN	Program smart key,Replace engine ECU,
	PROTON\Select from type\Type 1	Add key,Reset IMMO ECU,

PROTON	PROTON\Select from type\Type 2	Program key,Delete key,
	PROTON\Select from type\Type 3	Add key,Delete key,Key count,
	PROTON\Select from type\Type 4	Add key,Delete key,Odometer adjustment,Reset
	PROTON\Select from type\Type 5	Program key,Program remote,
	PROTON\Select from vehicle\Savvy	Add key,Reset IMMO ECU,
	PROTON\Select from vehicle\Gen-2	Program key,Delete key,
	PROTON\Select from vehicle\Impian	Program key,Delete key,
	PROTON\Select from vehicle\Jump back\Type 1	Add key,Reset IMMO ECU,
	PROTON\Select from vehicle\Jump back\Type 2	Program key,Delete key,
	PROTON\Select from type\Type 6	Add key,Delete key,Program remote,Key count,
	PROTON\Select from type\Type 7	Add one key,Add two keys,Program remote,Key count,
	PROTON\Select from type\Type 8	Add key,Delete key,Program remote,Key count,
ROLLS-ROYCE	ROLLS-ROYCE\Select from type\Wraith	Make ignition key,Disable key,Enable key,
	ROLLS-ROYCE\Select from type\Ghost	Make ignition key,Disable key,Enable key,
	ROLLS-ROYCE\Select from vehicle\Phantom	Program key,Disable and enable,Make key with EPROM
WEV	WEY\VV5\VV5c\2017\PEPS	Immobilizer,Off line full system programming,Program
	WEY\VV5\VV5s\2017\PEPS	Immobilizer,Off line full system programming,Program
	WEY\VV7\VV7c\2017\Kstar button-type	Program engine ECU,Program PEPS system,Program
	WEY\VV7\VV7s\2017\Kstar button-type	Program engine ECU,Program PEPS system,Program

VV5	WEY\VV5 series\VV5c\2017-\PEPS	Program key after deleting,All key lost,Add key,
	WEY\VV5 series\VV5s\2017-\PEPS	Program key after deleting,All key lost,Add key,
	WEY\VV7 series\VV7c\2017-\PEPS	Program key after deleting,All key lost,Add key,
	WEY\VV7 series\VV7s\2017-\PEPS	Program key after deleting,All key lost,Add key,
OLDSMOBILE	OLDSMOBILE\Aurora\Immobilizer	All key lost,
	OLDSMOBILE\Silhouette\mmobilizer	All key lost,
PONTIAC	PONTIAC\Aztec\Immobilizer	All key lost,
	PONTIAC\Bonneville\Immobilizer	All key lost,
	PONTIAC\G3\Immobilizer	Lost all key,Read key count,
	PONTIAC\G5\Immobilizer	Lost all key,Read key count,
	PONTIAC\G6\Immobilizer	Lost all key,Read key count,
	PONTIAC\G8\Immobilizer	Lost all key,Read key count,
	PONTIAC\Grand Prix\Immobilizer	All key lost,
	PONTIAC\Montana\Immobilizer	All key lost,
	PONTIAC\Pursult\Immobilizer	Lost all key,Read key count,
	PONTIAC\Solstice\Immobilizer	Lost all key,Read key count,
	PONTIAC\Torrent\Immobilizer\2007-2009	Lost all key,Read key count,
SAAB	SAAB\9-7\2006-2008\Immobilizer	Lost all key,Read key count,
	SATURN\Astra\2008-2009\Immobilizer	All key lost,

SATURN	SATURN\Aura\2006-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Outlook\2006-2008\Immobilizer	Lost all key,Read key count,
	SATURN\Replay\2005-2007\Immobilizer	Lost all key,Read key count,
	SATURN\Sky\2008-2009\Immobilizer	Lost all key,Read key count,
	SATURN\Vuel\2008-2009\Immobilizer	Lost all key,Read key count,
TRAUM	TRAUM\S70\Remote	Remote count,Program remote,Delete remote,
	TRAUM\S70\PEPS	Program full system,Program full system(w/o ESCL),Program
DACIA	DACIA\Dokker\2012-	Program key,Read PIN code,Read key count,
	DACIA\Duster\2010-2011	Add key,
	DACIA\Logan\2004-2011	Add key,
	DACIA\Sandero\2007-2011	Add key,
	DACIA\Sandero stepway\2006-2012	Add key,
	DACIA\Lodgy\2013-	Program key,Read PIN code,Read key count,
	DACIA\Logan\2013-	Program key,Read PIN code,Read key count,
	DACIA\Sandero\2013-	Program key,Read PIN code,Read key count,
	DACIA\Solenza	Add key,
	DACIA\Duster\2013-	Program key,Read PIN code,Read key count,
SCION	SCION\xB\2012\Remote	Program remote,Delete remote,
	SCION\CH-R\2018\Mechanical key	Add key,Delete key,Program immo ECU,Program engine

SCION

SCION\CH-R\2018\ Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
SCION\FR-S\2013-2016\Mechanical key	Read key count,Add key,Program remote,Delete remote,Delete key,
SCION\FR-S\2013-2016\ Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
SCION\iA\2016-2018\ Smart key	Program remote,Add smart key,Reset immo ECU,
SCION\iM\2017-2018\Mechanical key	Add key,Delete key,Program immo ECU,Program engine
SCION\iQ\2012-2015\Mechanical key	Add key,Delete key,Program immo ECU,Program engine
SCION\tC\2005-2010\Mechanical key	Add key,Delete key,All key lost,Reset immo ECU,Program
SCION\tC\2011-2015\Mechanical key	Add key,Delete key,Program immo ECU,Program engine
SCION\tC\2011-2015\ Smart key	Add smart key,Delete smart key,Reset PEPS,Reset PEPS &
SCION\xB\2012-2013\Mechanical key	Add key,Delete key,Program immo ECU,Program engine
SCION\xD\2012-2013\Mechanical key	Add key,Delete key,Program immo ECU,Program engine
ACURA\Select from type\Immobilizer\16-PIN	Add one key,All key lost,Reset key,
ACURA\Select from type\Immobilizer\16-PIN	Add one key,All key lost,Reset key,
ACURA\Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
ACURA\Select from type\Smart key\Button type	Add one key,All key lost,
ACURA\Select from type\Remote\IMMO9	Add remote,Delete remote,
ACURA\Select from type\Immobilizer\16-PIN	Add key,All key lost,Reset immobiliser,
ACURA\Select from type\Immobilizer\16-PIN	Reset immobox,Reset ECM,
ACURA\Select from type\Immobilizer\16-PIN	Immo type,

ACURA

ACURA\Select from type\Smart key\Button type	Add 1 key,All key lost,
ACURA\Select from type\Smart key\Button type	Add 1 key,All key lost,
ACURA\Select from type\Immobilizer\3-PIN	Search IMMO type,
ACURA\Select from type\Immobilizer\3-PIN	Add 1 key,All key lost,Reset key,
ACURA\Select from type\Immobilizer\3-PIN	Add one key,All key lost,Reset key,
ACURA\Select from type\Immobilizer\3-PIN	Add key,All key lost,Odometer adjustment,
ACURA\Select from type\Immobilizer\3-PIN	Reset immobox,Reset ECM,
ACURA\Select from vehicle\CL\1998-2003	Read key count,All key lost,
ACURA\Select from vehicle\CSX\2008-	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\EL\2001-2005	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\MDX\2001-2006	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\MDX\2007-2013	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\NSX\1995-2005	Read key count,All key lost,
ACURA\Select from vehicle\RDX\2007-2012	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\RL\1996-1999	Read key count,All key lost,
ACURA\Select from vehicle\RL\2005-2007	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\RSX\2002-2006	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\TL\1999-2003	Read key count,All key lost,
ACURA\Select from vehicle\TL\2004-2008	Add one key,All key lost,Reset key,

	ACURA\Select from vehicle\TL\2009-2012	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\TSX\2004-2008	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\TSX\2009-2013	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\ZDX\2010-	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\RL\2008-2012	Add one key,All key lost,Reset key,
	ACURA\Select from vehicle\ACURA\Integra	Read key count,All key lost,
	ACURA\Select from type\Immobilizer\16	Read key count,All key lost,
DAEWOO	DAEWOO\Evanda (2003-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Kalos(2002-2006)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Lacetti (2004-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Leganza (2002-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Leganze(USA)(2001-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Matiz (1998-)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Nubira(2003-2006)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Tacuma(2000-2008)\Immobilizer	Program key,Key diagnosis,Switch to neutral mode,
	DAEWOO\Read PIN code	Read pin code type1,Read pin code type2,Read pin code
VW\IMMO4\Select IMMO manually\NEC	VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
	VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
	VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make

VW

VWIMMO5\Immobilizer/ Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault
VWIMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
VWIMMO4\Select IMMO manually\NEC+24C64	Backup EEPROM,Recover EEPROM,Read immo data,Make
VWIMMO4\Select IMMO manually\9S12XHZ512\Im	Backup EEPROM,Recover EEPROM,Read immo data,Make
VW\Touareg\2003-2007\Immobilizer	Read PIN code,Learn key,
VW\Phaeton\2008-\Immobilizer	Read PIN code,Learn key,Read PIN code,
VWIMMO4\Select IMMO manually\CDC+24C32\Imm	Read immo data,Make dealer key,Directly add key>Delete
VWIMMO2 & IMMO3 \Immobilizer	Immob box,Dashboard,Dashboard(CAN),I
VW\Remote\Polo/Jetta (2015)\Remote	Program remote,
VWIMMO4\Auto identify IMMO	Identify immo4 type,
VW\Remote \Program remote	Add remote>Delete remote,
VW\Touareg\2008-2011\Immobilizer	Read PIN code,Learn key,Read PIN code,
VW\Phaeton\2003-2007\Immobilizer	Read PIN code,Learn key,
VWIMMO4\Select IMMO manually\NEC+24C64	Backup EEPROM,Recover EEPROM,Read immo data,Make
VW\Remote \Central door lock(1281)	Add remote>Delete remote,
VW\Remote \Central module(1281)	Add remote>Delete remote,
VWIMMO4\Select IMMO manually\NEC35XX\Immob	Backup EEPROM,Recover EEPROM,Read immo data,Make
VWIMMO4\Select IMMO manually\NEC95320(Bora	Backup EEPROM,Recover EEPROM,Backup immo
VWIMMO4\Select IMMO manually\Magotan/CC\Imm	Make dealer key,Learn key,Unlock 46 chip key,

VW\IMMO4\Select IMMO manually\NEC24C64(2014	Make dealer key,Learn key(OBD),Backup
VW\IMMO4\Select IMMO manually\MQB-	Backup EEPROM,Recover EEPROM,Backup immo
VW\IMMO3.5\Immobilizer	Immobiliser,Dashboard,
VW\IMMO3.5\Remote	Add remote,Delete remote,
VW\IMMO2 & IMMO3\Read PIN	Dashboard,IMMO,Engine,Touareg 3.0 diesel,
VW\IMMO3.5\Read PIN code	Dashboard,IMMO,Engine,Touareg 3.0 diesel,
VW\IMMO2 & IMMO3\Read PIN	Read PIN code,
VW\IMMO4\Select IMMO manually\A3/TT/R8-	Backup EEPROM,Recover EEPROM,Backup immo
VW\IMMO4\Select IMMO manually\2013(Q3)NEC+2	Backup EEPROM,Recover EEPROM,Make dealer key,Learn
VW\IMMO4\Select IMMO manually\NEC95320(JCI)\I	Backup EEPROM,Recover EEPROM,Backup immo
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO 5\Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO4\Select IMMO	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO4\Select IMMO	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO4\Select IMMO	Read immo data,Make dealer key,Directly add key>Delete
SKODA\IMMO2 & IMMO3\Immobilizer	Immob box,Dashboard,Dashboard(CAN),I

SKODA

SKODA\Remote\Polo (2015)\Remote	Program remote,
SKODA\IMMO4\Auto identify IMMO	Identify immo4 type,
SKODA\Remote\Remote	Add remote,Delete remote,
SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\Remote\Central door lock (1281)	Add remote,Delete remote,
SKODA\Remote\Central module (1281)	Add remote,Delete remote,
SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Read immo data,Make
SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Backup immo
SKODA\IMMO4>Select IMMO	Make dealer key,Learn key,Unlock 46 chip key,
SKODA\IMMO4>Select IMMO	Make dealer key,Learn key(OBD),Backup
SKODA\IMMO4>Select IMMO manually\MQB-	Backup EEPROM,Recover EEPROM,Backup immo
SKODA\IMMO 3.5\Immobilizer	Immobiliser,Dashboard,
SKODA\IMMO 3.5\Remote	Add remote,Delete remote,
SKODA\IMMO3.5\Read PIN code	Dashboard,IMMO,Engine,Touareg 3.0 diesel,
SKODA\IMMO2 & IMMO3\Read PIN code	Dashboard,IMMO,Engine,Touareg 3.0 diesel,
BESTURN\IMMO\Old besturn(CAN)	Read key count,Add key,All key lost,
BESTURN\IMMO\B30	All key lost,
BESTURN\PEPS\B70	Program key,Program PEPS,
BESTURN\PEPS\B90	Program key,Program PEPS,

BESTURN

BESTURN\PEPS\X80	Program key,Program PEPS,
BESTURN\Remote\New B70	Program remote,
BESTURN\Remote\B90	Program remote,
BESTURN\Remote\X80	Program remote,
BESTURN\Remote\Oley	Automatic,Manual,
BESTURN\IMMO\New besturn(B50)\- 2015	Key clear,Clear fault code,Program key,
BESTURN\IMMO\New besturn(B70)	Key clear,Clear fault code,Program key,
BESTURN\IMMO\B70(2013)	Key clear,Clear fault code,Program key,
BESTURN\IMMO\X80(2013)	Key clear,Clear fault code,Program key,
BESTURN\IMMO\B90(2013)	Key clear,Clear fault code,Program key,
BESTURN\IMMO\Oley	Key clear,Clear fault code,Program key,
BESTURN\IMMO\New besturn(B50)\2015 -	All key lost,
CHEVROLET\China\Cruze \-2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Trax\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Aveo\ Type 2\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CHEVROLET\China\Cruze \-2013\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CHEVROLET\China\Malibu\2015\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CHEVROLET\China\Trax\ Smart key	All smart key lost,Add smart key,Read key count,Clear fault

CHEVROLET

CHEVROLET\China\Malibu\2016-\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Lova\2016\Immobilizer	All key lost,Add key,
CHEVROLET\China\Lova\2016\Smart key	All smart key lost,Add smart key,
CHEVROLET\China\Epica\2013-\Immobilizer	Program key,Delete key,Read key count,
CHEVROLET\China\Captiva\IMMO\Without	Lost all key,Read key count,
CHEVROLET\China\Captiva\IMMO\Without	Program key,
CHEVROLET\China\Aveo\Type 1\Immobilizer	Program key,Turn to neutral mode,
CHEVROLET\China\Lova\2015\Immobilizer	Program key,Turn to neutral mode,
CHEVROLET\China\Epica\2012\Immobilizer	All key lost,-09 Epica read PIN code,
CHEVROLET\China\Lova\2015\Remote	Program remote,
CHEVROLET\China\Sail\Remote	Program remote,Read key count,
CHEVROLET\China\Epica\2013-\Remote	Program remote,Read remote count,
CHEVROLET\China\Captiva\Remote\Type 1	Program remote,Delete remote,
CHEVROLET\China\Captiva\Remote\Type 2	Program remote,Delete remote,
CHEVROLET\China\Malibu\2007-2011\Remote	Program remote,Delete remote,
CHEVROLET\China\Sail\3\Remote	Program remote,Read remote count,
CHEVROLET\China\Lumina\2006-2011\Immobilizer	Program key,
CHEVROLET\China\Read PIN code	Read pin code type1,Read pin code type2,Read pin code
CHEVROLET\China\Lova\2016\Remote	Program remote,Read remote count,

CHEVROLET\China\Sail\MMO	Clear fault code,Program key,Delete key,
CHEVROLET\China\Captiva\IMMO\With smart\Smart	All key lost,
CHEVROLET\China\Cavalier\Immobilizer	Read key count,All key lost,Add key,
CHEVROLET\China\Camaro\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2013\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CHEVROLET\China\Camaro\2016-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
CHEVROLET\China\Malibu XL\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu XL\2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault
CHEVROLET\China\Malibu XL\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
CHEVROLET\China\Aveo\Immobilizer	Program key,Turn to neutral mode,
CHEVROLET\China\Zafira\99-	Immobilizer,Erase key,
CHEVROLET\China\Colorado\IMMO\Without smart	All key lost,Clear fault code,Read key count,Add key,
CHEVROLET\China\Colorado\IMMO\With smart	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Cruze\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear
CHEVROLET\China\Cruze\2014-2016\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Cruze\2014-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015\Smart key	Add smart key,All smart key lost,Read smart key count,
CHEVROLET\China\Equinox\2017\Smart key	All smart key lost,Add smart key,Read smart key count,Clear

KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YDC)\20	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YD)\2014	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Sportage(KM	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Sportage	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K5(TFC)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K5(TFC)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K2(QBC)\20	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Forte/Forte	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K5	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\AMANTI(GH)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Forte/Forte	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\K5(TFC)\201	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\China\K5	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\China\Sportage(KM	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\China\K2(QBC)\20	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\China\K4(PFC)\201	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\K5(TFC)\201	Program smart key,ECM neutral mode,SMK neutral mode,ESCL

KIA\Select from vehicle\China\K3(YDC)\20	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\K3(YD)\2014	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\KX3(KC)\201	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\KX3(KC)\201	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\China\Sportage	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Sportage	Program smart key,ECM neutral mode,SMK neutral mode,ESCL

KIA\Select from vehicle\China\Sportage	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\China\K2(QBC)\20	Program remote,
KIA\Select from vehicle\China\K3(YD)\2014	Program remote,
KIA\Select from vehicle\China\K3(YDC)\20	Program remote,
KIA\Select from vehicle\China\K5(TFC)\201	Program remote,
KIA\Select from vehicle\China\K5(TFC)\201	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\China\Optima	Program remote,
KIA\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 4(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 5(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 6(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type	Program key,Read key count,Read PIN code(46
KIA\Select from type\Immobilizer\Type	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Smart key\China\Type 1(with slot	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Smart key\China\Type 2(with slot	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from type\Smart key\China\Type 4(without	Program smart key,ECM neutral mode,SMK neutral mode,PDM

KIA\Select from type\Smart key\China\Type 3(with slot	Program smart key,ECM neutral mode,SMK neutral mode,MSL
KIA\Select from type\Smart key\China\Type 5(without	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Smart key\China\Type 6(without	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Remote system\16	Program remote,
KIA\Select from type\Remote system\16	Program remote,
KIA\Read PIN code	46 smart card,8A smart card,47 smart card,Read 46 chip PIN,PIN
KIA\Select from type\Remote system\16	Program remote,
KIA\Select from type\Remote system\16	Program remote,
KIA\Select from type\Remote system\16	Program remote,
KIA\Select from vehicle\China\K2(QBC)\20	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX7(QMC)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Remote system\10	Program remote,
KIA\Select from type\Remote system\20	Program remote,
KIA\Select from vehicle\China\Optima	Program remote,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K4(PFC)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K4(PFC)\201	Program remote,
KIA\Select from vehicle\China\K3(YDC)\20	Program remote,
KIA\Select from vehicle\USA\Forte/Forte	Program remote,
KIA\Select from vehicle\China\KX3(KC)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX3(KC)\201	Program remote,
KIA\Select from vehicle\China\KX5(QLC)\2	Program remote,
KIA\Select from vehicle\China\KX7(QMC)\2	Program remote,

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\China\K5(JFC)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5(JFC)\201	Program remote,
KIA\Select from vehicle\China\K5(JFC)\201	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\K5 HEV(JFC	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5 HEV(JFC	Program remote,
KIA\Select from vehicle\China\K5 HEV(JFC	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\Sportage	Program remote,
KIA\Select from vehicle\China\Sportage	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Forte(TDC)\2	Program remote,

KIA\Select from vehicle\China\Forte(TDC)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\Rio(LCC)\20	Program remote,
KIA\Select from vehicle\China\Rio(JBC)\20	Program remote,
KIA\Select from vehicle\China\Cerato(LDC)	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Soul(AMC)\2	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China\Soul(AMC)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Soul(AMC)\2	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

KIA

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,

KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\General	Program remote,

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General area\Soul	Program smart key,ECM neutral mode,SMK neutral mode,ESCL

KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,

KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\AMANTI(GH)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\AMANTI(GH)\	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Borrego(HM)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Borrego(HM)\	Program remote,
KIA\Select from vehicle\USA\Borrego(HM)\	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Cadenza(VG)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Cadenza(VG)\	Program remote,
KIA\Select from vehicle\USA\Cadenza(VG)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Forte(YD)\201	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\USA\Forte(YD)\201	Program remote,
KIA\Select from vehicle\USA\Forte(YD)\201	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\K900(KH)\201	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\20	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JF)\20	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\20	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima(JFA)\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JFA)\	Program remote,
KIA\Select from vehicle\USA\Optima(JFA)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima(MG)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima(MG)\2	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\	Program remote,
KIA\Select from vehicle\USA\Optima	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Optima	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from vehicle\USA\RIO(BC)\2003	Program remote,
KIA\Select from vehicle\USA\RIO(JB)\2006-	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Rio(UB)\2012-	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012-	Program smart key,ECM neutral mode,SMK neutral mode,PDM

KIA\Select from vehicle\USA\Rondo(UN)\20	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Rondo(UN)\20	Program remote,
KIA\Select from vehicle\USA\Sedona(VQ)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sedona(VQ)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(YP)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(YP)\2	Program remote,
KIA\Select from vehicle\USA\Sedona(YP)\2	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Sorento(BL)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sorento(BL)\2	Program remote,
KIA\Select from vehicle\USA\Sorento(BL)\2	Program remote,
KIA\Select from vehicle\USA\Sorento(UMA)	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sorento(UMA)	Program remote,
KIA\Select from vehicle\USA\Sorento(UMA)	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Sorento(XM)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sorento(XM)\	Program remote,
KIA\Select from vehicle\USA\Sorento(XM)\	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from vehicle\USA\Sorento(XM)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sorento(XM)\	Program remote,
KIA\Select from vehicle\USA\Sorento(XM)\	Program smart key,ECM neutral mode,SMK neutral mode,ESCL

KIA\Select from vehicle\USA\Soul EV(PS)	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Soul(AM)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Soul(AM)\201	Program remote,
KIA\Select from vehicle\USA\Soul(AM)\201	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Soul(AM)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Soul(AM)\201	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Soul(PS)\201	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\201	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Spectra(LD)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Spectra(LD)\2	Program remote,
KIA\Select from vehicle\USA\Spectra(LD)\2	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sportage(KM)	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)	Program remote,
KIA\Select from vehicle\USA\Sportage(QL)\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sportage(QL)\	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sportage(SL)\	Program remote,

KIA\Select from vehicle\USA\Sportage(SL)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\USA\Sportage(SL)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sportage(SL)\	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from type\Immobilizer\Type 7(K)	Immobilizer,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type	Immobilizer,neutral mode,
KIA\Select from type\Immobilizer\Type	Immobilizer,neutral mode,
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from type\Smart key\USA\Type 1(with slot	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Smart key\USA\Type 2(with slot	Program smart key,ECM neutral mode,ESCL neutral mode,PDM
KIA\Select from type\Smart key\USA\Type 3(without	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from type\Smart key\USA\Type 4(without	Program smart key,ECM neutral mode,SMK neutral mode,PDM
KIA\Select from type\Remote system\16	Program remote,
KIA\Select from vehicle\USA\Sportage(QL)\	Smart key,ECM neutral mode,SMK neutral mode,ESCL
KIA\Select from vehicle\China(Dongfeng	Program smart key,ECM neutral mode,SMK neutral mode,ESCL
DODGE\Select from type\Remote\Type 1(VPW)	Add remote,

DODGE\Select from type\Remote\Type 2(VPW)	Add remote,
DODGE\Select from type\Remote\Type 3(VPW)	Add remote,
DODGE\Select from type\Remote\Type 4(CAN)	Add remote,Read pin code,
DODGE\Select from type\Remote\Type 5(VPW)	Add remote>Delete remote,
DODGE\Select from type\Remote\Type 6(VPW)	Add remote,
DODGE\Select from type\Remote\Type 7(VPW)	Add remote,
DODGE\Select from type\Remote\Type 8(VPW)	Add remote,
DODGE\Select from vehicle\Asia\Caravan\2001	Add remote>Delete remote,
DODGE\Select from vehicle\Asia\Dakota\2001-	Add remote,
DODGE\Select from vehicle\Asia\Durango\2001	Add remote,
DODGE\Select from vehicle\Asia\Interpid\1998-	Add remote,
DODGE\Select from vehicle\Asia\Neon\2000-	Add remote,
DODGE\Select from vehicle\Asia\Ram\2002-	Add remote,
DODGE\Select from vehicle\Asia\Stratus\4	Add remote,
DODGE\Select from type\Smart key\Type 1(CAN)	Add smart key>Delete smart key,Read PIN code,
DODGE\Select from type\Smart key\Type 2(CAN)	Add smart key>Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Asia\Challenger\20	Add smart key>Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Charger\2011-	Add smart key>Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Magnum\2011	Add smart key>Delete smart key,Read PIN code,

DODGE\Select from vehicle\Asia\Viper\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Immobilizer\Type	Add new key,Add old key,Add remote,Detect key count,Delete
DODGE\Select from type\Immobilizer\Type	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from type\Immobilizer\Type	Read pin code,Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type	Read pin code,Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Dart\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Asia\Ram\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from type\Smart key\Type 3(CAN)	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Smart key\Type 4(CAN)	Sync smart function,
DODGE\Select from type\Smart key\Type 5(CAN)	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Immobilizer\Type	Add key,Delete key,
DODGE\Select from vehicle\USA\Avenger\2008	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\USA\Caliber\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\USA\Caravan\2001	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\USA\Caravan\2001	Add remote,
DODGE\Select from vehicle\USA\Caravan\2004	Add key,Delete key,
DODGE\Select from vehicle\USA\Caravan\2008	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Caravan\2010	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\USA\Caravan\2010	Sync smart function,
DODGE\Select from vehicle\USA\Challenger\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Challenger\20	Sync smart function,
DODGE\Select from vehicle\USA\Challenger\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Charger\2005-	Add new key,Add old key,Add remote,Delete key,Key
DODGE\Select from vehicle\USA\Charger\2008\	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Charger\2008\	Sync smart function,
DODGE\Select from vehicle\USA\Charger\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Charger\2009-	Sync smart function,
DODGE\Select from vehicle\USA\Charger\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Charger\2011-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Dakota\2001-	Add remote,
DODGE\Select from vehicle\USA\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Durango\2001	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Durango\2001	Add remote,
DODGE\Select from vehicle\USA\Durango\2011	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Durango\2011	Sync smart function,
DODGE\Select from vehicle\USA\Durango\2014	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\USA\Grand	Add key,Delete key,Key count,

DODGE\Select from vehicle\USA\Grand	Add key,Delete key,
DODGE\Select from vehicle\USA\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Interpid\1998-	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Interpid\1998-	Add remote,
DODGE\Select from vehicle\USA\Journey\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Journey\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Journey\2011-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Magnum\2008	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Neon\2000-	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Neon\2000-	Add remote,
DODGE\Select from vehicle\USA\Neon\2005-	Add remote,
DODGE\Select from vehicle\USA\Nitro\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\USA\Ram\2002-	Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Ram\2002-	Add remote,
DODGE\Select from vehicle\USA\Ram\2006-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\USA\Ram\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\USA\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Stratus\2001-	Add key,Delete key,Key count,

DODGE\Select from vehicle\USA\Stratus\2001-	Add remote,
DODGE\Select from type\IMMO-Fobik	Read PIN code,Synch smart key,Add key,Delete key,
DODGE\Select from vehicle\USA\Magnum\2011	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Viper\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Dart\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\USA\Dakota\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Avenger\2008-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Asia\Caliber\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Asia\Caravan\2001	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Asia\Caravan\2004	Add key,Delete key,
DODGE\Select from vehicle\Asia\Caravan\2008	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Caravan\2010	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Caravan\2010	Sync smart function,
DODGE\Select from vehicle\Asia\Challenger\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Challenger\20	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2005-	Add new key,Add old key,Add remote,Delete key,Key
DODGE\Select from vehicle\Asia\Charger\2008\	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Charger\2008\	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2009-	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\Asia\Charger\2009-	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Durango\2001	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Durango\2011	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Durango\2011	Sync smart function,
DODGE\Select from vehicle\Asia\Durango\2014	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Asia\Grand	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Grand	Add key,Delete key,
DODGE\Select from vehicle\Asia\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Interpid\1998-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Journey\2008-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Journey\2011-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Magnum\2008	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Neon\2000-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Neon\2005-	Add remote,
DODGE\Select from vehicle\Asia\Nitro\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Asia\Ram\2002-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Stratus\4	Add key,Delete key,Key count,

DODGE\Select from vehicle\Asia\Dakota\2001-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Avenger\20	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Europe\Caliber\200	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Europe\Caravan\20	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Europe\Caravan\20	Add remote,
DODGE\Select from vehicle\Europe\Caravan\20	Add key,Delete key,
DODGE\Select from vehicle\Europe\Caravan\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Caravan\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Caravan\20	Sync smart function,
DODGE\Select from vehicle\Europe\Challenger\	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Challenger\	Sync smart function,
DODGE\Select from vehicle\Europe\Challenger\	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Charger\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\20	Sync smart function,
DODGE\Select from vehicle\Europe\Charger\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\20	Sync smart function,
DODGE\Select from vehicle\Europe\Charger\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Dakota\200	Add remote,

DODGE\Select from vehicle\Europe\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Durango\20	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Durango\20	Add remote,
DODGE\Select from vehicle\Europe\Durango\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Durango\20	Sync smart function,
DODGE\Select from vehicle\Europe\Durango\20	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Europe\Grand	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Grand	Add key,Delete key,
DODGE\Select from vehicle\Europe\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Interpid\199	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Interpid\199	Add remote,
DODGE\Select from vehicle\Europe\Journey\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Journey\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Journey\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Magnum\20	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Neon\2000-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Neon\2000-	Add remote,
DODGE\Select from vehicle\Europe\Neon\2005-	Add remote,

DODGE\Select from vehicle\Europe\Nitro\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Europe\Ram\2002-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Ram\2002-	Add remote,
DODGE\Select from vehicle\Europe\Ram\2006-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Europe\Ram\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Stratus\200	Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Stratus\200	Add remote,
DODGE\Select from vehicle\Europe\Magnum\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Dart\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Europe\Dakota\200	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add key,Delete key,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Sync smart function,

DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add key,Delete key,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,

DODGE

DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add key,Delete key,Read PIN code,

DODGE\Select from vehicle\South	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add key,Delete key,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete key,Key
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,

DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Middle East\Grand	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Grand	Add key,Delete key,
DODGE\Select from vehicle\Middle East\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle East\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add remote,

DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Middle	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Avenger\2	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Australia\Caliber\20	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Australia\Caravan\2	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Australia\Caravan\2	Add remote,
DODGE\Select from vehicle\Australia\Caravan\2	Add key,Delete key,
DODGE\Select from vehicle\Australia\Caravan\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Caravan\2	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\Australia\Caravan\2	Sync smart function,
DODGE\Select from vehicle\Australia\Challenge	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Challenge	Sync smart function,
DODGE\Select from vehicle\Australia\Challenge	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Charger\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Charger\2	Sync smart function,
DODGE\Select from vehicle\Australia\Charger\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Charger\2	Sync smart function,
DODGE\Select from vehicle\Australia\Charger\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Charger\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Dakota\20	Add remote,
DODGE\Select from vehicle\Australia\Dakota\20	Add new key,Add old key,Add remote,Delete key,Key
DODGE\Select from vehicle\Australia\Dart\2013	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Durango\	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Durango\	Add remote,
DODGE\Select from vehicle\Australia\Durango\	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Durango\	Sync smart function,
DODGE\Select from vehicle\Australia\Durango\	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Australia\Grand	Add key,Delete key,Key count,

DODGE\Select from vehicle\Australia\Grand	Add key,Delete key,
DODGE\Select from vehicle\Australia\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Interpid\1	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Interpid\1	Add remote,
DODGE\Select from vehicle\Australia\Journey\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Journey\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Journey\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Magnum\	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Neon\200	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Neon\200	Add remote,
DODGE\Select from vehicle\Australia\Neon\200	Add remote,
DODGE\Select from vehicle\Australia\Nitro\2007	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Australia\Ram\2002	Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Ram\2002	Add remote,
DODGE\Select from vehicle\Australia\Ram\2006	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Australia\Ram\2009	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Ram\2013	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Stratus\20	Add key,Delete key,Key count,

DODGE\Select from vehicle\Australia\Stratus\20	Add remote,
DODGE\Select from vehicle\Australia\Magnum\	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Dart\2013	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Australia\Dakota\20	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Avenger\200	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Africa\Caliber\2007	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Africa\Caravan\200	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Africa\Caravan\200	Add remote,
DODGE\Select from vehicle\Africa\Caravan\200	Add key,Delete key,
DODGE\Select from vehicle\Africa\Caravan\200	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Caravan\201	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Caravan\201	Sync smart function,
DODGE\Select from vehicle\Africa\Challenger\2	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Challenger\2	Sync smart function,
DODGE\Select from vehicle\Africa\Challenger\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Charger\200	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Charger\200	Sync smart function,
DODGE\Select from vehicle\Africa\Charger\200	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Charger\200	Sync smart function,

DODGE\Select from vehicle\Africa\Charger\201	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Charger\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Dakota\2001	Add remote,
DODGE\Select from vehicle\Africa\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Durango\200	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Durango\200	Add remote,
DODGE\Select from vehicle\Africa\Durango\201	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Durango\201	Sync smart function,
DODGE\Select from vehicle\Africa\Durango\201	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Africa\Grand	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Grand	Add key,Delete key,
DODGE\Select from vehicle\Africa\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Grand	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Interpid\1998	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Interpid\1998	Add remote,
DODGE\Select from vehicle\Africa\Journey\200	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Journey\201	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Journey\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Magnum\200	Read pin code,Add key,Delete key,Key count,

DODGE\Select from vehicle\Africa\Neon\2000-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Neon\2000-	Add remote,
DODGE\Select from vehicle\Africa\Neon\2005-	Add remote,
DODGE\Select from vehicle\Africa\Nitro\2007-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Africa\Ram\2002-	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Ram\2002-	Add remote,
DODGE\Select from vehicle\Africa\Ram\2006-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Africa\Ram\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Stratus\2001	Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Stratus\2001	Add remote,
DODGE\Select from vehicle\Africa\Magnum\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Dart\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Africa\Dakota\2001	Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type	Key count,Program key,Delete key,Program remote,
DODGE\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram\2006-	Read PIN code,Add new key,Delete key,Key count,Add old
DODGE\Select from vehicle\Asia\Ram\2009-	Read pin code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Journey\2011-	Add smart key,Delete smart key,Read PIN code,

DODGE\Select from vehicle\Asia\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\USA\Ram\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Europe\Ram\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Australia\Ram\2013	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Africa\Ram\2013-	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\South	Add key,Delete key,Read PIN code,
DODGE\Select from vehicle\Middle	Add key,Delete key,Read PIN code,
DODGE\Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,
DODGE\Select from type\Smart key\Type	Read pin code,Add key,Delete key,
DODGE\Select from type\Smart key\Type	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\USA\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\USA\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Europe\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Europe\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Australia\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Australia\Ram	Read pin code,Add key,Delete key,

DODGE\Select from vehicle\Africa\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Africa\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\South	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Middle East\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\Middle East\Ram	Read pin code,Add key,Delete key,
DODGE\Select from vehicle\USA\Charger\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Asia\Charger\2014-	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Europe\Charger\20	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Australia\Charger\2	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Key count,Read PIN code,
DODGE\Select from vehicle\Africa\Charger\201	Add smart key,Delete smart key,Key count,Read PIN code,
HAWTAI\Select from type\Remote\16 PIN\Type	Program remote,
HAWTAI\Select from vehicle\Sisha	Add key,Delete key,Detect key,Write VIN code,Read PIN
HAWTAI\Select from vehicle\Sisha	Add key,Delete key,Detect key,Write VIN code,Read PIN
HAWTAI\Select from type\IMMO\IMMO 1	Add key,Delete key,Detect key,Write VIN code,Read PIN
HAWTAI\Select from type\IMMO\IMMO 2	Program key,Read key count,ECM neutral mode,
HAWTAI\Select from vehicle\Sisha	Program key,Read key count,ECM neutral mode,

HAWTAI	HAWTAI\Select from vehicle\Sisha	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from type\IMMO\IMMO 3	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from type\IMMO\IMMO 4	ECM neutral mode,Read key count,Program key,
	HAWTAI\Select from vehicle\Sisha	ECM neutral mode,Read key count,Program key,
	HAWTAI\Select from type\Remote\16 PIN\Type	Program remote,
	HAWTAI\Select from type\Remote\10 PIN	Program remote,
	HAWTAI\Select from vehicle\B21(E70)\Remote\	Program remote,
	HAWTAI\Select from vehicle\B11\Remote\16	Program remote,
	HAWTAI\Select from vehicle\B35(Boliger)\Remot	Program remote,
	HAWTAI\Select from vehicle\Santafe(import)\Re	Program remote,
	HAWTAI\Select from vehicle\Santafe(domestic)\	Program remote,
	HAWTAI\Select from vehicle\Terracan\Remote\1	Program remote,

里程调校

品牌	菜单	应用
	KIA\K5\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\K5\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\K5\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Ceed\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,

KIA	KIA\Magentis(Optima)\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Rio\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sorento\2007-\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Soul\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage \2008-\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage R\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Ceed\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Rio\2015\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sorento\2007-\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage R\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\K4\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\KX5\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sorento\2007-\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage \2008-\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	KIA\Sportage R\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
LAND ROVER	LAND ROVER\Evoque\2011-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	LAND ROVER\Range Rover\2010- \Odometer	Odometer adjustment,
	LAND ROVER\Discovery 4\Odometer adjustment	Odometer adjustment,
	LAND ROVER\Freelander 2\2013\Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,

MAZDA	MAZDA\Axela\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\Atenza\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\CX-5\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\CX-9\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M2\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M3\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M5\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\M6\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	MAZDA\ New M6\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
SMART	SMART\BR451\Odometer adjustment	Odometer adjustment,
RENAULT	RENAULT\Select from type\Type 1	Odometer adjustment,
JAGUAR	JAGUAR\XJ\Odometer adjustment	Odometer adjustment,
	JAGUAR\F-type\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	JAGUAR\XE\2015-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
HUMMER	HUMMER\H2\2007-\Odometer adjustment	Odometer adjustment,
CHRYSLER	CHRYSLER\Select from type\Type 1	Odometer adjustment,
PORSCHE	PORSCHE\Cayenne\2010-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	PORSCHE\Panamera\2010-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	PORSCHE\918\2015\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,

FORD	FORD\Max\2011-monochrome	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\S-MAX\2008-2010 Monochrome	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\New Mondeo\Small color screen\Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Ecosport\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Kuga\Color screen\Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Kuga\Monochrome screen\Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo\2011-monochrome	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo\2008- color screen\Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo\2008-2010 Monochrome	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Fiesta\2013-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Fiesta\2008-2012\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Focus\2012-\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Focus\2009-2011\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Focus\2004-2008\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Explorer\2011-2015\Odometer adjustment	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	FORD\Mondeo CHIA-X\2011-2013 \Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI	HYUNDAI\Accent\2006-\Odometer adjustment-
HYUNDAI\GETZ\Odometer adjustment-24C16		Backup EEPROM,Recover EEPROM,Odometer adjustment,
HYUNDAI\I20\Odometer adjustment-24C16		Backup EEPROM,Recover EEPROM,Odometer adjustment,

HYUNDAI	HYUNDAI\IX25\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Verna(RBC)\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\VELOSTER\Odometer adjustment-24C16	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Azera\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\HB20\Odometer adjustment-D70F3423	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Mistra\Odometer adjustment-D70F3536	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Sonata 9\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\All New Tucson\2016\Odometer	Backup EEPROM,Recover EEPROM,Odometer adjustment,
	HYUNDAI\Elantra(AD)\Odometer adjustment-	Backup EEPROM,Recover EEPROM,Odometer adjustment,

生成子机

品牌	菜单	应用
Generate remote	Generate remote\Americas	GMC,BUICK,FORD,HAMMER,CADILLAC,CHRYSLER,LINCOLN,C
	Generate remote\Europe	AUDI,BMW,MERCEDES-BENZ,VW,JAGUAR,OPEL,SKOD
	Generate remote\Asia	HONDA,TOYOTA,LEXUS,SUZUKI,MAZDA,NISSAN,ACURA,KIA,MI
	Generate remote\China\Mini car	BAOJUN,BAIC,BESTURN,BISU,BYD,CHANGHE AUTO,YEMA
	Generate remote\China\Truck	BEIBEN Trucks,DAYUN HEAVY TRUCK,DITO
	Generate remote\China\Passenger	KINGLONG,JOYLONG,YUTONG,ZHONGTONG,
	Generate remote\China\Domestic EV	Domestic EV,
	Generate remote\IMMO modification brand	PLC,LINGJIANGZHE,SANYANJIANG,K-AUTO,STEEL

Generate smart key	Generate smart key\Americas	JEEP,BUICK,DODGE,CADILLAC,CHEVROLET,
	Generate smart key\Europe	PEUGEOT/CITROEN/DS,MASERATI,
	Generate smart key\Asia	NISSAN,KIA,MITSUBISHI,HYUNDAI,INFINITI,
	Generate smart key\China	BAOJUN,BAIC,BYD,SOUEAST MOTORS,TRUMPCHI,GEELY,R
Generate garage remote	Generate garage remote\Garage remote	GM,DOORMAN,SEASIDE,SUPER

适配器XX

品牌	菜单	应用
EEPROM	EEPROM\COMMON\24CXX	Read data,Write data,
	EEPROM\COMMON\93CXX	Read data,Write data,
	EEPROM\COMMON\25XX	Read data,Write data,
Hex editor	Hex editor\Hex editor	Hex editor,
ADP TOOLS	ADP TOOLS\CPLD program upgrade	Adaptor LC4256V upgrade,Dashboard clock
MCU	MCU\Freescale\9S12G	MC9S12G(N)16,MC9S12G(N)32,MC9S12G(A)48,MC9S12G(A)64,
	MCU\Renesas\R32C/M16C/UART	Read FLASH,Read DATAFLASH,Read
	MCU\Renesas\R32C/M16C/SPI	Read FLASH,Read E2FLASH,Write FLASH,Write

Special Functions

Brand	Menu	Details
	Generate Key Chip\4D chip	60 chip,61 chip Mitsubishi2,62 chip Suzuki motor,63 chip,chip 63
	Generate Key Chip\46 chip	ZHONGHUA H230,ZHONGHUA H530,VW(2007-2008),X-

Generate Key Chip	Generate Key Chip\48 chip	TP22,TP23,TP24,TP25,JETTA(2010-),
	Generate Key Chip\T5 chip	Chip 11,Chip 12,Chip 13,Chip 33,
	Generate Key Chip\7935 chip	Blank 7935,Cherry chip 40,Nissan chip 41,Geely chip 44,Mitsubishi
Identify & Copy Chip	Identify & Copy Chip\Recognition & copy	Recognition©,
Remote	Remote\Frequency detection	Frequency detection,
Simulate Chip	Simulate Chip\Generate simulated chip\4D	4D chip emulation,60 chip,Mitsubishi2 chip 61,Kawasaki
	Simulate Chip\Bind simulated chip	Bind analog chip,
	Simulate Chip\Generate simulated chip\46	46 chip emulation,ZHONGHUA H230,ZHONGHUA
	Simulate Chip\Generate simulated chip\8A	Toyota H,
	Simulate Chip\Obtain LKE data	Obtain LKE key data,
Decode Chip	Decode Chip\Decode Chip	4D chip,46 chip,
Ignition Coil	Ignition Coil\Detect ignition coil	Ignition coil detection,

Functions ID
223
794
790
8
7
8
7
314
314
314
314
8
7
7
7
7

7
8
314
7
8
7
7
7
7
314
7
7
9
40
41
947
10
35
35

35
10
10
366
369
371
372
369
366
393
394
10
35
371
394
463
463
369
366

10
35
10
35
371
394
463
12
44
170
1105
1105
1105
12
1105
1105
12
1105
1105

1105
1105
12
1135
1685
1685
1685
1685
1685
1685
1684
1684
1684
1684
1684
1684
1693
1693
1693
1693
1693

1687
1687
1687
1685
1693
1684
1693
1684
1685
1685
1693
1693
1693
1685
1693
1685
1693
1684
1685

1693
1684
1687
1685
24
24
24
24
27
288
288
289
287
288
27
24
287
287
287

287
287
287
287
287
287
287
287
287
287
287
287
287
287
24
24
24
24
24
24

24
24
24
24
24
24
24
24
24
27
27
27
288
288
288
717
717
717
27
1137

19
19
19
19
19
19
19
19
19
19
19
19
19
19
19
19
199
196
853
853
853

853
83
812
83
812
812
136
179
180
189
186
184
195
200
201
202
204
205
218

222
222
201
179
205
246
251
278
179
428
428
812
195
812
812
83
186
184
246

202
811
811
831
832
841
831
812
812
950
251
987
179
811
1188
83
201
1206
1320

1536
1537
1539
1318
1318
1318
1318
1318
1318
1318
1318
1318
1318
1319
1319
1319
1319
1319
832
1314
1314

1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1314
1315
1315
1317
189

189
189
189
189
189
189
189
189
189
189
189
202
202
179
179
204
204
180
1532
1532

1532
201
201
201
201
201
201
201
841
841
841
841
841
841
841
841
841
841
184
184
184
1556

1556
1556
1556
1556
1556
1556
1556
1556
1556
1557
1557
1557
1557
1557
1557
1557
1557
1557
200
200
200

1560
1560
1319
1319
1314
1556
1314
1318
1318
204
189
189
204
1318
1314
1557
1318
1314
1317

1536
1534
189
204
1318
1314
1557
189
204
1318
1318
1314
1556
201
1524
1546
1314
1314
201

1524
1546
1314
1318
1560
1560
1534
1537
1534
1557
1534
1556
1318
1314
1556
1314
189
184
1314

1557
189
184
1314
189
184
1314
1556
1556
1314
832
1315
184
1319
1314
1314
1556
1314
1534

180
1314
1557
180
1314
1534
1539
1534
1521
1314
1318
1318
202
1318
1318
811
1575
1575
202

189
189
204
1319
189
204
1319
1318
189
184
1314
1557
184
1314
189
184
1314
1556
189

202
1318
1318
1318
1319
1317
832
1320
1319
1577
179
1577
179
201
1628
218
1705
1521
1720

1521
24
24
24
27
289
288
287
287
287
288
27
24
27
288
27
24
287
287

287
287
287
287
24
24
24
24
24
24
24
24
24
24
24
24
27
27
27
717
717

717
288
288
288
27
994
288
27
27
1137
59
58
57
57
74
175
73
74
74

74
74
74
1102
1102
74
175
58
59
57
1102
73
1179
1180
1196
56
115
116
114

56
56
56
115
1079
1077
116
114
114
1077
115
1079
116
56
114
1179
1180
1196
69

69
69
122
123
132
133
137
138
133
133
139
224
69
584
762
762
139
69
69

584
69
827
132
133
132
828
829
830
840
840
584
1006
1009
584
1010
1011
1012
1014

69
584
1014
1015
1016
1017
1014
1010
1011
1019
1088
1088
584
122
1686
1694
1694
812
812

277
278
278
278
405
812
812
991
1314
1315
1315
1315
1318
1319
1326
1320
1319
1320
1320

1319
1320
83
278
1316
1315
1314
1318
1319
278
1315
1314
1319
218
163
82
48
82
163

974
1129
973
48
1130
292
291
43
149
150
156
157
158
164
165
165
165
165
165

166
167
167
162
161
159
160
174
219
219
720
720
723
785
814
814
815
920
1675

1746
208
207
895
906
907
908
909
911
910
912
906
907
914
911
910
914
906
907

915
916
916
895
916
910
895
909
917
914
918
907
906
912
906
919
911
910
919

918
208
948
1139
1148
1140
1140
1140
1141
1141
1141
1141
1141
1142
1142
1142
1144
1144
1144

1145
1145
1145
1149
1149
1146
1150
1150
1141
1147
1147
1153
1154
1154
1156
1140
1141
1142
1144

1145
1149
1146
1150
1147
1148
1153
1154
1197
1197
1202
1202
1207
1141
1207
1695
1699
1150
1702

1148
1704
1702
1704
1704
1702
1207
1207
1141
1207
1140
1140
1140
1207
1140
1707
252
252
255

255
255
258
259
259
258
252
259
260
260
260
252
259
792
258
992
259
260
252

992
992
992
992
992
992
992
992
1031
72
72
48
48
48
79
146
146
146
148
147

79
79
79
79
79
81
151
151
152
152
152
142
142
142
142
142
146
146
146

146
146
146
146
146
146
146
147
147
147
147
79
79
79
79
151
151
81
152
152

153
153
154
155
142
147
146
79
79
147
142
144
79
151
151
172
172
197
197

197
197
197
197
197
197
197
253
147
253
197
146
148
147
79
172
151
81
152
153

154
155
142
144
197
253
152
427
79
659
660
661
142
147
843
997
997
172
843

147
197
197
79
147
197
152
147
253
142
253
147
197
79
197
147
197
147
253

142
197
197
253
147
253
79
197
147
253
660
146
843
146
843
660
79
661
152

79
197
152
146
253
79
197
152
253
142
147
253
997
79
172
197
79
197
152

79
197
152
79
197
152
843
147
197
79
661
661
79
661
79
661
152
142
197

79
142
1041
79
146
79
661
661
79
148
79
79
148
197
79
660
660
147
197

79
253
142
79
660
79
253
142
79
253
142
79
197
79
197
152
1042
79
79

172
79
197
147
197
152
147
197
152
79
79
172
79
197
152
197
147
197
152

151
79
197
152
79
197
151
843
147
197
997
79
197
151
79
197
147
197
142

147
197
142
142
843
997
79
197
151
79
197
146
147
79
253
142
79
253
997

79
146
172
197
146
172
197
79
197
151
79
197
151
79
197
151
146
843
146

172
197
146
148
146
197
147
253
142
147
253
142
79
197
152
79
197
151
197

172
197
79
197
152
146
843
172
843
79
197
172
147
661
152
79
146
197
146

197
79
197
152
147
197
152
79
197
147
253
997
147
253
997
79
197
79
197

152
79
197
152
146
843
79
1043
997
153
79
197
151
79
661
152
79
661
153

997
147
997
147
197
997
79
197
151
147
197
997
843
843
997
79
197
151
997

79
147
253
997
79
146
197
79
197
151
79
146
151
79
197
151
148
79
197

253
147
197
152
79
661
155
843
1043
1044
1045
1046
151
81
152
153
155
142
151

81
152
153
155
997
1041
85
85
735
735
738
726
729
726
738
741
727
738
727

727
726
726
741
729
738
976
738
735
726
738
735
658
725
726
727
728
729
738

735
85
738
739
740
741
743
750
858
858
727
726
725
85
735
976
738
741
727

741
726
1497
1496
726
726
85
738
727
85
735
726
85
738
727
726
85
726
735

726
735
738
727
726
85
735
727
743
726
1496
735
735
735
976
726
738
727
726

735
738
727
85
976
85
735
85
741
976
735
741
976
738
741
976
727
741
976

726
738
741
727
741
726
1496
735
85
976
735
976
735
735
738
727
726
735
741

976
738
741
976
727
741
976
726
726
1496
735
740
726
725
85
726
735
735
738

741
727
741
726
738
727
976
735
738
727
85
976
735
740
976
726
727
726
735

741
976
738
726
1496
735
735
738
727
741
976
738
741
976
727
741
738
741
727

735
738
727
735
735
726
738
727
726
738
727
85
976
735
976
726
735
976
738

976
727
976
726
1496
738
976
727
976
735
726
735
726
85
976
735
976
726
735

976
738
741
727
741
735
738
741
727
741
1496
726
735
1496
738
741
727
741
735

977
738
977
727
977
726
735
726
726
735
726
726
735
740
976
726
726
1496
738

741
727
741
726
1496
1496
1496
85
735
735
741
726
735
741
976
738
976
727
976

726
1496
1496
1496
1496
85
1478
85
1478
735
741
738
741
727
741
85
735
976
735

738
741
976
727
741
976
726
738
741
727
741
726
85
1480
735
1480
735
735
741

976
738
741
727
741
1496
735
738
727
740
735
741
738
741
727
741
726
726
976

735
741
738
741
727
741
726
976
735
738
727
1479
976
726
976
735
976
85
735

976
726
735
741
976
738
741
976
727
741
976
735
741
738
741
727
741
738
727

726
85
726
735
738
727
726
735
727
735
85
976
726
738
727
726
735
738
727

738
727
738
727
735
738
726
738
727
738
727
726
976
735
738
727
738
727
726

729
735
738
727
726
735
738
727
85
976
735
976
738
976
727
976
726
738
976

727
976
735
735
976
726
735
726
727
726
735
726
726
729
735
738
727
726
735

738
727
726
726
738
727
726
738
741
727
741
726
729
735
738
727
726
85
1478

85
1478
735
741
738
741
727
741
729
735
976
738
976
727
741
976
726
740
735

741
738
741
727
741
735
741
738
741
727
741
726
735
741
738
741
727
741
738

741
727
741
738
727
726
738
727
726
741
976
741
976
743
726
725
740
181
182

183
185
187
188
190
191
193
192
183
181
182
183
188
192
193
185
190
187
191

185
190
187
191
185
187
194
194
194
194
194
194
194
1356
193
194
691
765
766
782

796
769
691
767
797
798
774
800
818
767
771
833
834
192
193
954
955
775
775

188
192
775
870
883
775
775
192
775
874
873
192
872
192
775
192
882
874
775

188
881
875
192
192
192
192
192
775
860
188
880
867
871
775
870
775
765
882

192
870
775
775
775
882
888
769
775
769
775
887
769
876
886
875
876
874
192

188
880
867
870
867
885
769
188
188
192
192
192
192
775
775
769
775
769
775

775
769
775
192
775
765
775
192
188
192
775
775
188
192
775
775
775
775
192

775
775
775
775
775
765
775
775
775
192
192
192
188
775
775
188
192
775
775

775
775
775
878
874
877
876
875
874
873
872
870
880
867
871
870
870
880
867

871
871
870
880
867
871
870
883
881
875
875
884
881
875
879
775
775
775
775

775
775
775
765
775
775
192
775
775
775
775
188
775
775
775
188
775
775
192

775
775
192
192
775
775
192
775
765
190
766
192
775
878
874
873
876
874
872

775
775
775
775
775
775
775
775
984
984
1089
1368
183
691
886
769
188
766
191
766

191
188
1620
1621
1631
1632
782
800
206
209
212
213
214
216
215
217
759
760
807

808
209
809
810
1377
121
121
121
121
121
135
135
121
658
726
85
976
726
735

740
85
740
726
726
135
726
85
740
135
726
726
726
726
735
726
735
740
978

726
977
135
726
726
726
726
85
740
135
726
740
85
740
978
735
740
978
135

726
726
976
726
976
85
735
740
976
726
740
735
740
976
735
740
976
735
740

976
726
735
740
976
726
726
735
740
976
85
735
740
726
135
743
288
289
287

288
27
24
287
24
27
27
27
27
288
288
717
1137
220
221
275
276
280
706

709
710
710
712
716
718
789
801
981
220
710
801
789
275
789
275
220
789
981

275
220
981
275
220
706
220
220
710
801
789
275
789
275
220
789
275
225
48

227
229
1104
1372
1131
1372
263
264
265
266
268
273
272
271
269
274
783
268
268

803
803
803
270
803
802
270
802
803
804
805
990
1489
1492
1493
1494
264
990
265

270
1489
274
270
264
274
803
264
274
272
1489
265
266
1493
264
274
1489
265
266

264
265
266
264
268
274
274
803
274
274
803
274
274
274
270
1489
274
264
274

264
274
1489
265
266
1493
274
1489
1489
272
265
1493
264
990
265
266
264
268
265

266
264
268
274
803
274
803
274
803
274
803
274
803
274
803
274
274
270
1489
274
270

264
274
803
264
274
272
1489
265
266
1493
274
1489
274
271
1489
272
265
1493
272

264
990
265
266
264
268
265
266
264
268
274
803
274
803
274
803
274
803
274
803
274

803
274
274
270
1489
274
270
264
274
803
264
274
272
1489
265
266
1493
274
1489

1489
272
265
1493
264
990
265
266
264
268
1483
265
266
264
268
274
803
274
803

274
803
274
803
274
803
274
274
270
1489
274
270
264
274
803
264
274
272
1489

265
266
1493
274
1489
1489
272
265
1493
264
990
265
266
264
268
265
266
264
268

274
803
274
803
274
803
274
803
274
803
274
274
270
1489
274
270
264
274
803

264
274
272
1489
265
266
1493
274
1489
1489
272
265
1493
264
990
265
266
264
268

265
266
264
268
274
803
274
803
274
803
274
803
274
803
274
274
274
270
1489
274

270
264
274
803
264
274
272
1489
265
266
1493
274
1489
1489
272
265
1493
268
269

269
269
269
269
269
269
269
269
269
269
269
269
269
269
269
1304
1304
1304
1304
1304
1304

1304
1304
1304
1304
1304
1304
1304
1304
1304
1304
264
788
990
396
395
9
9
9
249
249

249
249
249
249
249
249
249
284
285
284
284
284
284
284
284
284
284
285
285
285
285
285

256
257
279
282
297
297
297
297
297
297
322
327
328
331
332
332
334
336
336
334

370
326
690
295
327
924
256
295
282
649
282
282
1322
1324
617
617
617
614
284

284
284
284
284
285
285
285
285
285
295
295
295
282
282
297
297
297
297
318
318

319
332
337
370
617
321
282
295
295
295
295
282
614
1353
617
617
319
1353
297

297
297
297
617
284
284
295
284
284
284
284
295
284
333
333
333
333
1370
1370

306
306
306
302
305
305
305
305
306
662
662
663
664
665
666
667
668
669
669

670
670
671
671
671
671
671
306
662
306
304
306
312
311
309
308
308
417
417
308

340
340
340
340
340
340
341
341
341
341
341
341
341
341
341
342
343
344
344
344
344

345
346
346
346
346
346
346
347
642
344
344
340
341
341
341
845
846
342
642
642

342
642
340
341
342
642
342
642
342
346
346
346
346
1270
359
359
359
360
363

364
365
424
363
362
361
636
636
637
638
677
688
284
921
360
637
364
636
359

1111
1579
396
395
269
264
788
783
783
268
269
263
264
265
266
274
270
271
272

273
802
803
804
805
264
265
266
274
271
265
266
274
266
274
272
1489
264
264

264
274
264
1492
1493
1494
1489
265
266
274
271
265
274
266
274
272
1489
264
264

264
274
396
395
269
264
788
265
266
274
271
265
266
274
266
274
272
1489
264

264
264
274
264
396
395
269
264
788
265
266
274
271
265
266
274
266
274
272

1489
264
264
264
274
264
396
395
269
264
788
265
266
274
271
265
266
274
266

274
272
1489
264
264
264
274
264
396
395
269
264
788
265
266
274
271
265
266

274
266
274
272
1489
264
264
264
274
264
396
395
269
264
788
265
266
274
271

265
266
274
266
274
272
1489
264
264
264
274
264
396
395
269
264
788
1489
265

265
265
265
265
265
1304
788
990
396
395
1493
1493
1493
1493
1493
1493
1493
398
398
398

398
398
399
400
400
400
400
400
400
401
401
401
402
402
402
402
402
403
403
403

403
404
602
400
403
689
402
1090
400
402
400
1090
402
902
903
905
398
399
602

400
402
400
402
402
400
402
407
408
408
408
409
966
975
411
411
412
412
413

413
416
675
418
415
415
444
444
825
825
826
896
1087
1087
826
415
1087
420
420

421
421
931
928
928
308
308
426
673
1128
1165
1117
1117
1133
1134
555
556
556
556

556
556
557
558
559
556
555
1036
1122
1123
548
443
445
445
445
446
447
448
449

450
452
452
452
452
452
452
452
453
453
453
454
454
454
455
457
456
456
453
1175

635
635
635
1174
1174
1174
1174
1174
1174
1174
1174
1174
1174
1174
1174
1175
1176
1177
434
435
436
436

438
439
440
441
438
441
478
478
478
478
478
478
479
479
479
480
481
480
951
1107

1107
1107
1107
1114
1115
1116
484
483
482
486
487
488
489
490
491
492
492
492
492

494
494
495
495
496
496
496
496
496
496
496
497
498
498
499
499
500
500
501
501

504
504
504
504
504
504
504
504
504
504
506
506
506
506
506
506
506
506
506
507
507
508

508
508
509
509
509
510
510
510
510
511
512
513
513
514
514
514
514
514
515

515
515
515
516
516
516
517
518
518
565
504
506
508
509
510
511
512
686
687

687
687
516
1157
1159
1160
1161
1162
514
514
504
942
1163
1164
1157
1265
1271
515
687

527
527
527
527
527
528
528
528
528
528
529
529
529
529
530
530
530
530
530

530
530
530
530
530
530
530
655
656
657
654
674
780
965
780
530
1167
1167
1167
1167

590
590
1171
1171
1171
592
592
593
594
594
595
595
596
1170
598
599
600
1168
1171

1167
1167
1167
1167
1167
1167
1167
1167
1167
1167
1168
1170
1170
1068
1069
1071
1071
1072
1073
1073

1171
1167
1073
1167
1172
1170
1167
1168
1170
1168
1170
1167
1170
1168
1170
1073
1074
1074
1074

1569
1569
1569
1569
1569
432
431
430
430
430
465
466
467
467
470
471
472
473
474

475
469
475
475
471
471
471
471
471
471
471
474
979
982
359
359
359
359
360
424

519
636
636
637
639
640
364
519
921
424
1007
1008
639
536
537
537
538
539
540

928
928
1076
1082
1081
1120
930
1083
1084
928
1085
1097
1121
1119
929
928
928
929
929

1119
1121
928
928
928
928
928
929
928
929
929
1076
1082
1081
1120
1084
928
1120
929
929

928
929
928
928
928
929
1191
1192
1194
1195
1194
931
1713
542
542
543
544
545
542

561
561
561
562
563
564
564
560
560
676
793
1029
570
570
569
568
568
576
579

579
579
579
579
579
580
580
580
580
580
580
580
685
779
778
925
932
932
933
934

936
936
936
936
579
936
936
938
581
435
508
633
633
634
634
630
630
631
631

1212
624
624
625
625
626
626
626
627
890
891
897
898
941
940
621
1002
1032
620

621
620
621
1199
1200
620
621
1201
1211
1197
1538
1540
1543
622
621
620
621
620
1547

1548
1547
1201
1201
621
620
622
622
1695
1211
679
605
605
605
605
606
606
606
606

606
606
606
606
606
606
606
606
606
606
606
606
606
606
606
606
606
607
607
608
608
609

610
611
612
612
612
612
612
612
612
612
609
606
1608
613
613
653
703
703
703
704

704
1223
1222
928
703
704
1222
1083
1084
1085
1097
930
928
700
700
699
1075
1075
1076

1082
1081
1076
1082
1081
929
928
693
693
693
693
693
693
693
693
694
694
694
694
694
694

695
695
695
695
695
696
696
696
745
838
839
923
923
923
785
787
150
786
822

821
819
823
824
822
821
821
822
821
835
836
837
794
794
1193
942
942
944
944

1271
1271
1271
1271
617
617
617
617
297
297
297
297
617
617
297
297
297
297
297
617

297
297
297
297
297
400
402
1207
1140
1140
1140
1140
1207
1207
1207
1141
1207
741
727

726
739
726
725
727
738
735
738
726
738
738
206
209
212
213
214
216
215
217

759
760
807
808
209
809
810
1377
209
206
206
209
1377
209
1377
206
206
1377
206

209
206
209
209
206
1377
1377
1349
1349
1349
1349
1349
1349
1349
1349
1349
1349
370
13
11
45

48
51
54
60
68
71
66
143
171
176
43
71
68
210
292
291
647
971
851

1130
1064
1182
43
1294
1294
1574
974
1129
1732
13
11
45
48
51
54
60
66
143

171
176
43
210
292
291
647
971
851
1130
1064
1182
43
1294
1294
547
548
549
549

549
550
550
550
551
603
603
603
603
603
603
603
1178
284
284
284
285
285
285
285

295
256
257
279
297
320
322
322
324
328
329
331
332
333
333
330
320
370
521

614
321
649
284
285
282
284
285
282
322
842
422
857
282
295
284
284
295
282

79
79
79
79
79
79
151
151
151
151
151
151
151
81
81
152
152
152
142
142

142
142
142
142
142
142
144
172
172
172
172
172
172
172
172
172
172
173
197
79
142

81
197
197
197
197
197
197
197
197
197
197
146
148
147
173
79
172
151
81
152

155
142
144
197
253
427
659
660
661
147
147
147
142
843
844
844
148
253
146

148
197
253
148
146
197
79
79
148
197
79
147
253
253
253
147
197
253
253

659
146
659
659
844
172
659
197
844
844
79
79
197
151
79
146
146
79
197

844
172
197
197
197
253
197
197
197
147
253
142
147
253
142
197
197
79
253

151
659
659
659
79
253
151
79
253
147
253
142
146
844
147
253
142
79
172

197
147
197
152
147
253
142
146
79
79
659
659
79
147
253
142
79
146
661

151
79
146
661
142
142
79
197
81
147
253
142
79
197
142
79
197
81
843

844
147
197
152
146
142
79
197
152
147
197
152
146
146
844
147
253
142
142

79
197
147
253
142
147
253
142
147
253
142
79
197
142
79
197
81
79
197

142
79
197
81
79
197
152
79
197
151
79
151
79
1043
151
79
197
997
147

253
997
997
997
79
197
151
197
147
253
997
147
253
997
79
151
1070
197
79

197
79
146
197
146
197
844
843
79
197
997
79
197
81
844
659
147
197
152

79
197
79
146
147
253
997
79
197
844
147
253
997
79
197
152
79
197
151

997
79
197
151
79
197
147
253
997
79
659
844
79
197
197
147
253
79
197

997
79
197
81
1046
1044
1045
151
81
142
152
151
81
997
152
1043
997
142
270

271
272
273
802
803
804
805
802
804
804
803
270
805
803
268
269
268
268
268

268
263
264
265
266
274
988
989
1492
1493
1494
1489
264
264
264
272
1489
265
266

1493
266
1493
268
1483
265
1493
266
1493
266
268
804
1492
274
804
266
1493
269
274

1489
265
266
274
803
265
266
268
266
274
270
270
264
274
805
264
266
1494
274

803
783
268
268
988
274
264
264
264
1489
265
266
1493
266
1493
1483
265
1493
266

1493
266
274
266
1493
269
274
1489
265
266
274
265
266
266
274
270
264
274
274

274
264
264
264
272
1489
265
266
1493
266
1493
268
265
1493
266
1493
266
268
804

1492
274
804
266
1493
269
274
1489
265
266
274
803
265
266
268
266
274
270
270

264
274
805
264
266
1494
274
803
268
988
274
264
264
264
272
1489
265
266
1493

266
1493
268
265
1493
266
1493
266
268
804
274
804
266
1493
269
274
1489
265
266

274
803
265
266
268
266
274
270
270
264
274
805
264
266
1494
274
803
268
988

274
264
264
264
272
1489
265
266
1493
266
1493
268
1483
265
1493
266
1493
266
268

804
1492
274
804
266
1493
269
274
1489
265
266
274
803
265
266
268
266
274
270

270
264
274
805
264
266
1494
274
803
268
988
274
264
264
264
272
1489
265
266

1493
266
1493
268
265
1493
266
1493
266
268
804
1483
1492
274
804
266
1493
269
274

1489
265
266
274
803
265
266
268
266
274
270
270
264
274
805
264
266
1494
274

803
268
988
274
264
264
264
272
1489
265
266
1493
266
1493
268
265
1493
266
1493

266
268
804
1492
274
804
266
1493
269
274
1489
265
266
274
803
265
266
268
266

274
270
270
264
274
805
264
266
1494
274
803
268
988
274
1304
788
264
266
268

396
395
396
395
396
395
269
269
269
269
269
269
269
269
571
572
572
572
573
573

573
573
573
575
575
847
848
847
847
847
848
848
848

功能ID
93
134
140
93

93
93
93
93
93
93
134
134
134
134
140
140
140
140
140
65
64
64
65

70
70
70
70
70
70
70
70
70
70
228
250
64
65
65
1301
281
1049
1049
1049

109
108
110
107
106
105
104
103
102
101
100
99
98
97
226
247
93
93
93

93
93
93
134
134
140
140
140
140

功能ID
1854
1855
1856
1857
1858
1859
1860
1861

1862
1863
1864
1865
1866

功能ID
30
29
245
1703
615
433
38
78

Functions ID
996
1040

1001
1003
1004
998
1034
1020
1284
1527
1528
1688
1000
1219